



USER MANUAL

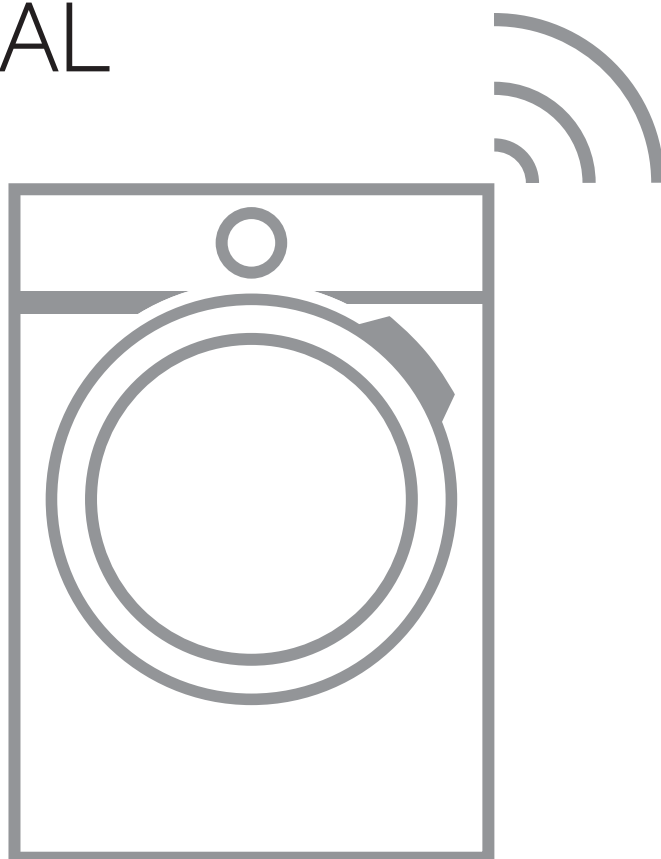

CONTENTS

- 1. SAFETY INFORMATION..... 3
- 2. CONDITIONS OF USE..... 6
- 3. SAFETY INSTRUCTIONS..... 6
- 4. PRODUCT DESCRIPTION..... 8
- 5. CONTROL PANEL..... 9
- 6. FIRST TIME START-UP..... 9
- 7. USING THE TOUCH SCREEN..... 12
- 8.  WI-FI - CONNECTIVITY SETUP..... 12
- 9. BEFORE FIRST USE..... 14
- 10. PROGRAMMES..... 14
- 11. OPTIONS..... 17
- 12. DAILY USE..... 18
- 13. MACHINE SETTINGS..... 21
- 14. HINTS AND TIPS..... 25
- 15. CARE AND CLEANING..... 25
- 16. TROUBLESHOOTING..... 28
- 17. TECHNICAL DATA..... 30
- 18. ACCESSORIES..... 31
- 19. WARRANTY 32



IMPORTANT INFORMATION THAT MAY IMPACT YOUR MANUFACTURER'S WARRANTY

Adherence to the directions for use in this manual is extremely important for health and safety. Failure to strictly adhere to the requirements in this manual may result in personal injury, property damage and affect your ability to make a claim under the AEG manufacturer's warranty provided with your product. Products must be used, installed and operated in accordance with this manual. You may not be able to claim on the AEG manufacturer's warranty in the event that your product fault is due to failure to adhere to this manual.

FOR PERFECT RESULTS

Thank you for choosing this AEG product. We have created it to give you impeccable performance for many years, with innovative technologies that help make life simpler features you might not find on ordinary appliances. Please spend a few minutes reading to get the very best from it.

Visit our website for:



Get usage advice, brochures, trouble shooter, service information:

www.aeg.com



Register your product for better service:

www.registeraeg.com

CUSTOMER CARE AND SERVICE

Always use original spare parts.

When contacting our Authorised Service Centre, ensure that you have the following data available: Model, PNC, Serial Number.

The information can be found on the rating plate.

 Warning / Caution-Safety information

 General information and tips

 Environmental information

Subject to change without notice.

1. SAFETY INFORMATION

Before the installation and use of the appliance, carefully read the supplied instructions. The manufacturer is not responsible if an incorrect installation and use causes injuries and damages. Always keep the instructions with the appliance for future reference.



- Read the supplied instructions.



- Warning; Risk of fire / Flammable materials

1.1 Children and vulnerable people safety



WARNING!

Risk of suffocation, injury or permanent disability.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Do not let children play with the appliance.
- Children of less than 3 years should be kept away unless continuously supervised.
- Keep all packaging away from children and dispose of it appropriately.
- Keep detergents away from children.
- Keep children and pets away from the appliance when the door is open.
- If the appliance has a child safety device, this should be activated.
- Children shall not carry out cleaning and user maintenance of the appliance without supervision.

1.2 General Safety

- Do not change the specification of this appliance.
- If the tumble dryer is put on top of a washing machine, use the stacking kit. The stacking kit, available from your authorized vendor, can be used only with the appliance specified in the instructions, supplied with the accessory. Read it carefully before installation (Refer to the Installation leaflet).
- The appliance can be installed as freestanding or below the kitchen counter with correct space (Refer to the Installation leaflet).

- Do not install the appliance behind a lockable door, a sliding door or a door with a hinge on the opposite side, that would prevent the appliance door from being fully opened.
- The ventilation opening in the base must not be covered by a carpet, mat, or any floor covering.
- **WARNING:** The appliance must not be supplied through an external switching device, such as timer, or connected to a circuit that is regularly switched on and off by a utility.
- Connect the mains plug to the mains socket only at the end of the installation process. Make sure that the mains plug is accessible after installation.
- Ensure good air ventilation in the located room to avoid the backflow of unwanted gases into the room from appliances burning gas or other fuels, including open fires.
- If the mains power supply cable is damaged, it must be replaced by the manufacturer, its Authorised Service Centre or similarly qualified persons to avoid an electrical hazard.
- Do not exceed the maximum load of 8 kg (refer to the "Programme chart" chapter).
- Do not use the appliance if items have been soiled with industrial chemicals.
- Wipe away lint or packaging debris that has accumulated around the appliance.
- Do not run the appliance without a filter. Clean the lint filter before or after each use.
- Do not dry unwashed items in the tumble dryer.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes

or pillows fitted with foam rubber pads should not be dried in the tumble dryer.

- Fabric softeners, or similar products, should only be used as specified by the product manufacturer's instructions.
- Remove all objects from items that could be a source of fire ignition such as lighters or matches.
- **WARNING:** Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
- Before any maintenance operation, deactivate the appliance and disconnect the mains plug from the socket.

2. CONDITIONS OF USE

This appliance is intended to be used in household and similar applications such as:

- Farm houses

- By clients in serviced apartments, holiday apartments and other residential type environments.

3. SAFETY INSTRUCTIONS

3.1 Installation

- Remove all the packaging.
- Do not install or use a damaged appliance.
- Follow the installation instruction supplied with the appliance.
- Always take care when moving the appliance as it is heavy. Always use safety gloves and enclosed footwear.
- Do not install or use the appliance where the temperature can be less than 5°C or higher than 35°C.
- The floor area where the appliance is to be installed must be flat, stable, heat resistant and clean.
- Make sure that there is air circulation between the appliance and the floor.
- Always keep the appliance vertical when being moved.
- The rear surface of the appliance must be put against the wall.
- When the appliance is in its permanent position, check that it is

fully level with the aid of a spirit level. If it is not, adjust the feet accordingly.

3.2 Electrical connection



WARNING!

Risk of fire and electrical shock.

- Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation.
- The appliance must be earthed.
- Make sure that the parameters on the rating plate are compatible with the electrical ratings of the mains power supply.
- Always use a correctly installed shockproof socket.
- Do not use multi-plug adapters and extension cables.

- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.
- Do not touch the mains cable or the mains plug with wet hands.
- This appliance complies with the E.E.C. Directives.

3.3 Use



WARNING!

Risk of injury, electrical shock, fire, burns or damage to the appliance.

- Do not dry the damaged items which contain padding or fillings.
- Only dry fabrics which are applicable to dry in the tumble dryer. Follow the instructions on the fabric label.
- If you have washed your laundry with a stain remover start an extra rinse cycle before you start the dryer.
- Do not drink or prepare food with the condensed water/distilled water. It can cause health problems to people and pets.
- Do not sit or stand on the open door.
- Do not dry dripping wet clothes in the tumble dryer.
- Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and create a fire hazard.
- If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in a tumble dryer they should first be washed in hot water with extra detergent -this will reduce, but not eliminate, the hazard.

3.4 Internal light



WARNING!

Risk of injury.

- Visible LED radiation, do not look directly into the beam.

- The LED lamp is dedicated to drum lighting. This lamp cannot be reused for other lighting purposes.
- To replace the internal light, contact the Authorised Service Centre.

3.5 Care and cleaning



WARNING!

Risk of injury or damage to the appliance.

- Do not use water spray and steam to clean the appliance.
- Clean the appliance with a moist soft cloth. Only use neutral detergents. Do not use any abrasive products, abrasive cleaning pads, solvents or metal objects.
- To prevent damage to the cooling system be careful when you clean the appliance.

3.6 Compressor



WARNING!

Risk of damage to the appliance.

- The compressor and its system in the tumble dryer is filled with the special agent which is free from fluoro-chloro-hydrocarbons. This system must stay tight. The damage of the system can cause a leakage.

3.7 Service

- To repair the appliance contact an Authorised Service Centre.
- Use original spare parts only.

3.8 Disposal




WARNING!

Risk of injury or suffocation.

- Disconnect the appliance from the mains electrical and water supplies.
- Cut off the mains electrical cable close to the appliance and dispose of it.
- Remove the door catch to prevent children or pets from becoming trapped in the drum.
- Dispose of the appliance in accordance with local requirements

for the disposal of Waste Electrical and Electronic Equipment (WEEE).

4. PRODUCT DESCRIPTION

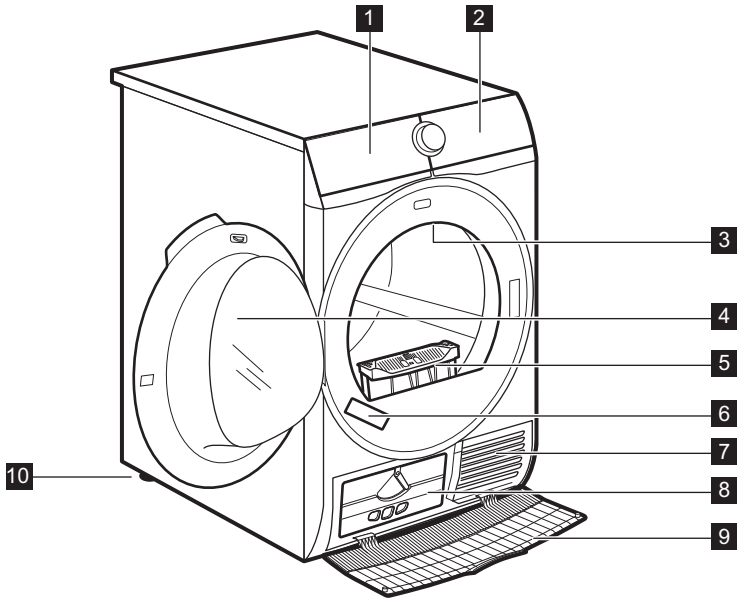


- 1 Water container
- 2 Control panel
- 3 Internal lighting
- 4 Appliance door
- 5 Filter
- 6 Rating plate

- 7 Airflow slots
- 8 Condenser lid
- 9 Condenser cover
- 10 Adjustable feet



For ease of loading laundry or ease of installation the door is reversible. (see separate leaflet).

5. CONTROL PANEL

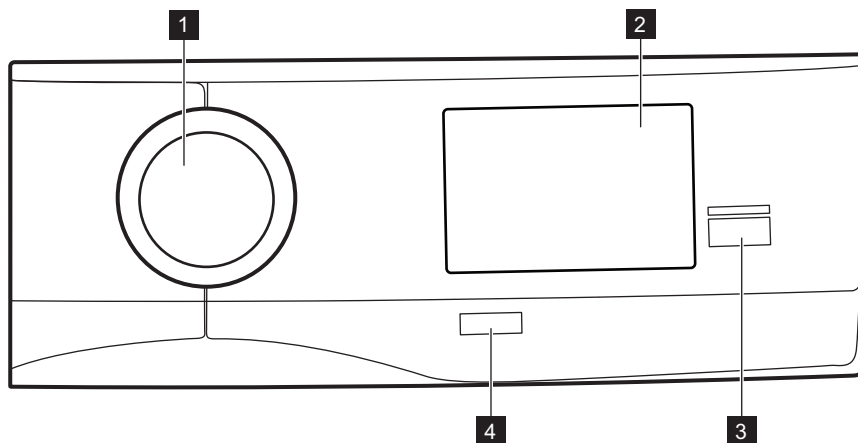


- 1 Program dial
- 2 Touch screen
- 3 Start/Pause button
- 4 On/Off button with *Auto Off* function

6. FIRST TIME START-UP

When you turn on your dryer for the first time, the Start-up Screen (shows the AEG logo and the time) appears on the touch screen and plays each time you turn on the dryer.

After the animation plays, you are guided through the initial setup procedure.

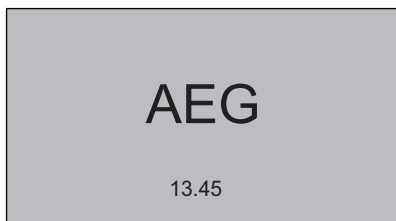

6.1 Language setup

1. Scroll the list of languages up or down to find the language you want to use and press it.


1/4	Language
Svenska	SV
Deutsch	DE
English	EN
Italiano	IT
Francais	FR

2. To accept the language tap on **OK**, if you want to change it tap on **Change**.


2/4	Language
You've chosen:	
English	
Change	OK

6.2 Time setup


1. Scroll the bar of hours and minutes to the right or left to set the current time.

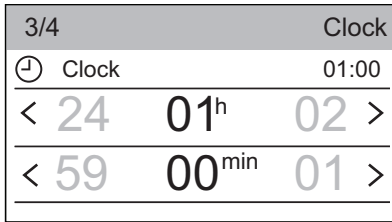

2. To select the time tap on the clock bar.

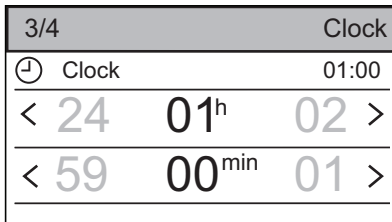


3. To accept the time tap on **OK**, if you want to change it tap on **Change**.

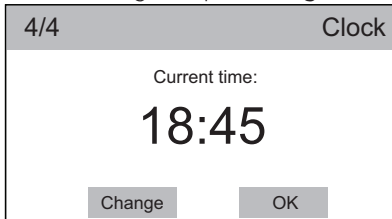



6.3 More Settings

After you accept the current time, the More Settings screen pop-up.

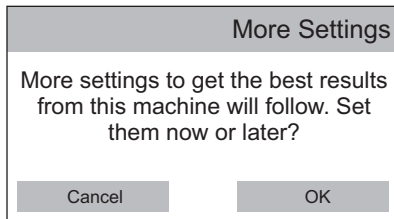

If you tap on **Cancel**, the program list appears and in a few seconds it will

change in to the summary screen. The dryer is ready to use.

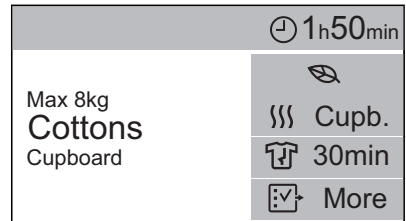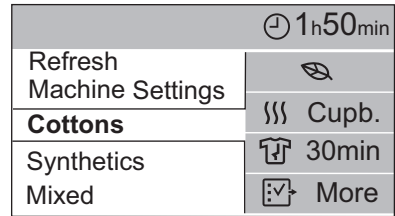


If you tap on **OK**, proceed to next settings.

Water Hardness




To set the proper water hardness level, read the "MACHINE SETTINGS: Water Hardness" chapter carefully.


1. For optimal performance set the water hardness by pressing **Change** or press **OK** to leave the default **Medium** water hardness.

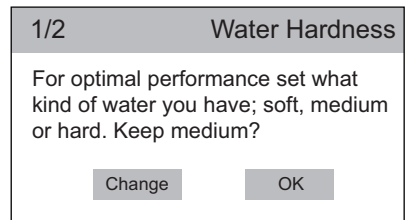


2. To change default value scroll the bar to the right or left, to set the water hardness: **Hard**, **Medium** or **Soft**.

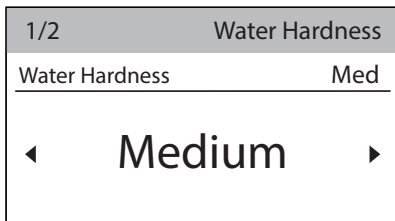

- To select the value press the Water Hardness bar.

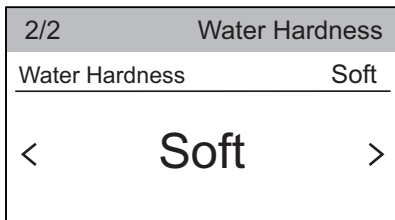


- To accept the water hardness level press **OK**, if you want to change it press **Change**.


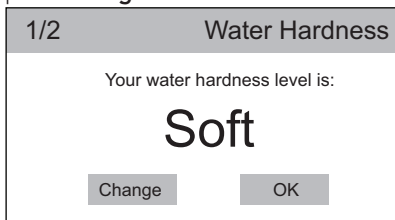


Water Tank Warning

- If the external kit for water discharge is installed (additional accessory), the appliance automatically drains the water from the water tank. In this condition you are able to deactivate the warnings of the water tank.

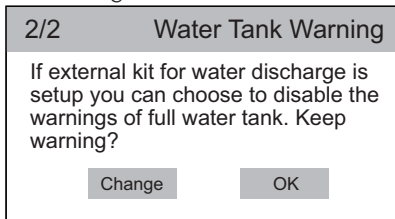


If you press **OK**, the warnings of full water tank is still enabled. The program list appears and in a few seconds it will change in to the summary screen.

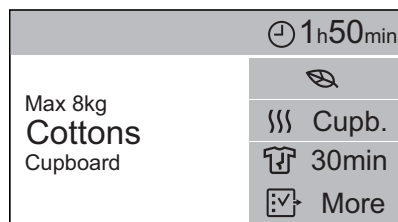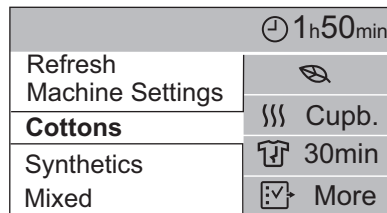


If you press **Change**, proceed to next step.

- To confirm that the Full water tank warning is disabled press **OK**, if you want to change it press **Change**.

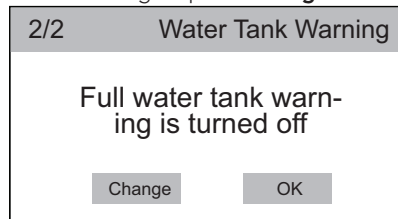


7. USING THE TOUCH SCREEN

Every time you turn on your dryer, the Start-up Screen (shows the logo and the time) appears on the touch screen.

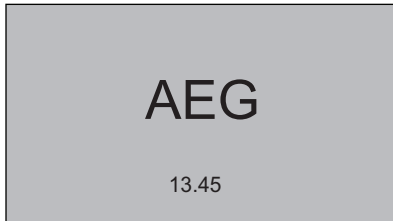


After the Start-up animation plays, the program summary screen appears on the touch screen.

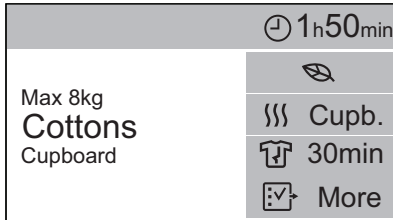


The Summary Screen is divided into four areas, where you can find:


- Max weight for cycle, program name, dryness level.

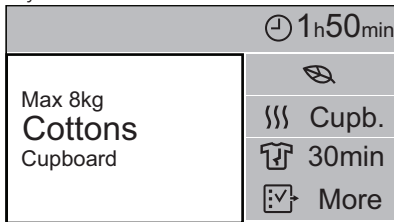


- Time to end of the program or time delay (if selected).

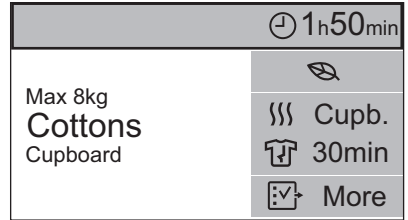

- The currently selected options for the selected cycle.

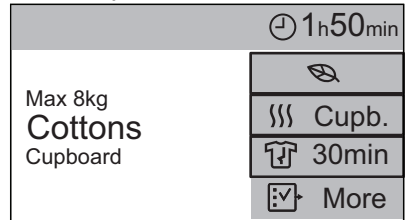

- More options.

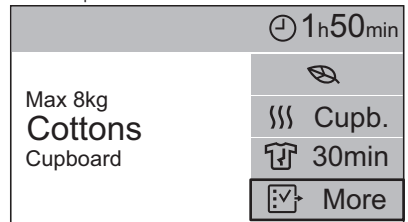

8. 📶 WI-FI - CONNECTIVITY SETUP

This chapter describes how to connect the smart appliance to the Wi-Fi network and to link it to a mobile devices.

By this functionality you can receive notifications, monitor and control your tumble dryer from your mobile devices.

To connect the appliance to enjoy the full range of features and services you need:

- Wireless network at home with internet connection enabled.
- Mobile device connected to wireless network.

Frequency	2.412 - 2.472 GHz for European market
------------------	---------------------------------------

Protocol	IEEE 802.11b/g/n two stream radio
Max power	< 20dBm

8.1 Installing and configuring AEG Life

When connecting the tumble dryer to the application, stand near it with Your smart device.

Make sure that your smart device is connected to the wireless network.


1. Go to the App Store on your smart device.
2. Download and install App AEG Life .
3. Make sure you started a Wi-fi connection in the dryer. If not go to the section below.
4. Start the application. Select the country and language and login with Your email and password. If you do not have an account, create a new one following the instructions in AEG Life.
5. Follow the instructions on the App for the appliance registration and configuration.


A message appears on the appliance display to confirm that the configuration was successful.

8.2 Configuring the dryer wireless connection


Have AEG Life downloaded and installed on your smart device.

1. Tap on the **Wi-Fi** bar to switch the connection on .


A pop-up message will appear, the icon  starts flashing and wireless module begins starting up. It may take about 2 minute before it is ready.

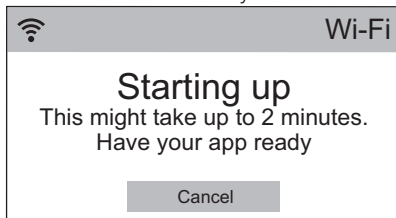

When the wireless module is ready, pop-up message will appear to inform you, that the access point will be open for about 3 minute.

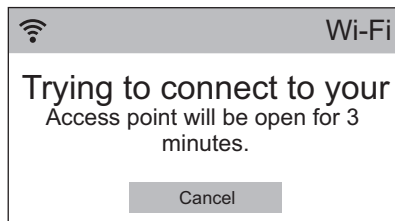

2. Configure the AEG Life app on your smart device.
3. If the connectivity is configured, a message appears on the dryer display to confirm that the configuration was successful.

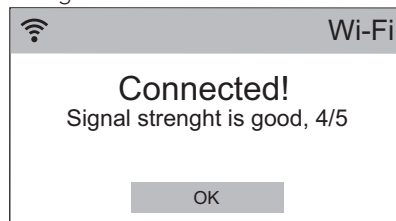


4. Tap on **OK** to get back to the machine settings list.

8.3 Remote Start Mode


You can start and stop a drying programme remotely.

When the App is installed and the wireless connection is complete, the **Remote Start Mode** option will appear among the available options.

To activate the remote start:


1. In the programme summary screen, tap  **More** to enter the option list.
2. Tap on **Remote Start Mode** bar (**ON** status).

The following message pops up:

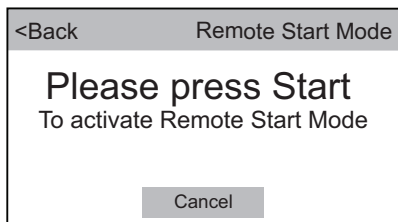

3. Press the **Start/Pause** button to activate the **Remote Start Mode**.

The indicator  appears on the programme summary screen.

-  If the door is open, the **Remote Start Mode** is deactivated.

8.4 Over-the-air update

The App may propose an update for downloading new features.

The update is accepted via App only.


If a programme is running, the App notifies that the update will start at the end of the programme.

During the update, the appliance shows a message telling that update is running.

The appliance will usable again at the end of the update, without any notification about successful update.

If an error occurs, the appliance warns that update has failed: just press any buttons or turn the knob to return to normal use.

9. BEFORE FIRST USE


-  Rear drum locks are removed automatically when dryer is activated for the first time. Possible to hear some noise.

To unlock the rear drum locks:








1. Switch on the appliance.
 2. Set any programme.
 3. Press the Start/Pause button.
- Drum starts to rotate. Rear drum locks are deactivated.

Before you use the appliance to dry items:

- Clean the tumble dryer drum with a moist cloth.
- Start a 1 hour programme with moist laundry.

-  At the beginning of the drying cycle (first 3-5 min) there could be a slightly higher sound level. This is due to the compressor starting up. This is normal for compressor powered appliances such as refrigerators and freezers.

10. PROGRAMMES

Programmes	Load ¹⁾	Properties / Fabric mark
Cottons Eco ²⁾	8 kg	Cotton fabrics - Extra dry /  
Cottons	8 kg	Cycle defined to dry cottons items of different size / different weaving altogether. /  
Synthetics	3,5 kg	Synthetic and mixed fabrics. /   

Programmes	Load ¹⁾	Properties / Fabric mark
Wool  	1 kg	Woollen fabrics. Gentle drying for hand-washable woollens. Remove items immediately when the programme is completed.
Silks 	1 kg	Gentle drying of hand-washable silks. / 
Outdoor	2 kg	Outdoor clothing, technical, sports fabrics, waterproof and breathable jackets, shell jackets with a removable fleece or inner insulation. Suitable for drying in tumble dryer. / 
Sports	2 kg	Sportswear, thin and light fabrics, microfiber, polyester. / 
Jeans	8 kg	Leisure clothing such as jeans, sweat-shirts of different material thicknesses (e.g. at the neck, cuffs and seams). / 
Business Shirts	1,5kg (or 7 shirts)/	Easy care fabrics for which a minimum of ironing is necessary. The drying results can be different from one type of fabric to the other. Shake the items before you put them in the appliance. When the programme is completed, immediately remove the items and put them on a hanger. / 
Refresh	1kg	Refreshing textiles that were in storage.
Easy Iron	1 kg (or 5 shirts)	Easy care fabrics for which a minimum of ironing is necessary. The drying results can be different from one type of fabric to another. Shake the items before putting them in the appliance. When the programme has ended, immediately remove the items and put them on a hanger. / 
Duvet	3 kg	Single or double duvets and pillows (with feather, down or synthetic fillings). / 
Bed Linen	3 kg	Bed linen such as single and double sheets, pillowcases, duvet cover. / 
Mixed	3 kg	Cotton and synthetic fabrics. / 

¹⁾ The maximum weight refers to dry items.

²⁾ For test institutes only: The Cottons Eco program is the "Standard Cotton Program".

10.1 Woolmark Apparel Care - Blue






 






WOOL HAND WASH SAFE

The wool drying cycle of this machine has been approved by The Woolmark Company for the drying of wool garments labelled as "hand wash" provided that the garments are dried according to the instructions issued by the manufacturer of this machine. Follow the garment care label for other laundry instructions. M1641

The Woolmark symbol is a Certification mark in many countries.

10.2 Programs and options selection

Programs ¹⁾	Options					
	 Extra Silent	 Eco	 Dryness Level	 Time Dry	 Anti-crease	 Load
Cottons Eco		■			■	
Cottons	■	■	■	■	■	
Synthetics	■	■	■	■	■	
Wool  		■				■
Silks 		■			■	
Outdoor		■				
Sports		■			■	
Jeans		■			■	
Business Shirts		■			■	
Refresh		■			■	
Easy Iron		■			■	
Duvet		■				
Bed Linen		■			■	
Mixed		■		■	■	

¹⁾ Together with the program you can set 1 or more options.

11. OPTIONS

11.1 Extra Silent

The appliance operates with low noise without effect on the drying quality. The appliance operates slowly with longer cycle time.

11.2 Eco

This option is on by default with all programs.

The power consumption is at the minimum level.


11.3 Dryness Level

This function helps to get the laundry more dried. There are 4 possible selections:

- Extra Dry
- Cupboard Dry+ (for Cotton only)
- Cupboard Dry
- Iron Dry

11.4 Time Dry

For cottons, synthetics and mixed. Lets the user to set drying time from minimum 10 min to maximum of 2 hours (in 10 min steps). When this option is maximum, load indicator disappears.

 The cycle lasts as long as set time regardless the drying result.

TIME DRYING RECOMMENDATION	
10 min	action of cool air only (no drying).
20 - 40 min	additional drying to improve dryness after previous drying cycle.
>40 min	full drying of the small laundry loads up to 4 kg, well centrifuged (>1200 rpm).

11.5 Anti-crease

Extends up to 120 minutes the anticrease phase (30 minutes) at the end of the


drying cycle. After drying phase drum rotates time to time what prevents the clothes from creases. Laundry can be removed during the anti-crease phase.

11.6 Load

This option is applicable only to the Wool programme to get laundry more dried. There are 3 possible selections:


- Heavy
- Normal
- Light


11.7 Delay Start

 Lets to delay the start of a drying program from minimum of 10 minutes to maximum of 24 hours.

1. Set the drying program and options.
2. In the option menu tap on the **Delay Start** bar to enter the submenu.
3. Scroll left or right the hour and minute bars to set the desired delay start.
4. To activate **Delay Start** option, touch the **Start/Pause** button.

After touching the Start/Pause button, the appliance begins the countdown.

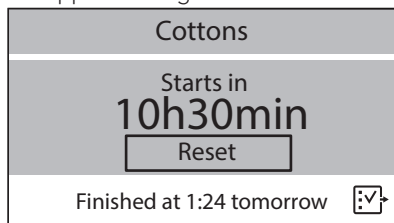

 Any time you can stop the countdown of the delay time by pressing the **Reset** button.

11.8 ☆ Memory





Lets you memorise up to 2 of your favorite configurations of programmes and options in the appliance memory. After memorising configurations you are able to choose them from the program list.

Your favorite configurations are marked in the program list as **M1** and **M2**.

12. DAILY USE

12.1 Preparing the laundry

- Close the zips.
- Close the fasteners of duvet covers.
- Do not dry ties or ribbons loose (e.g. apron ribbons). Tie them before you start a programme.
- Remove all items from pockets.
- Turn items with internal layer made of cotton inside out. Cotton layer must be faced outward.
- Always set the programme suitable for the type of laundry.
- Do not put light and dark colours together.
- Use suitable programme for cottons, jersey and knitwear to reduce shrinkage.
- Do not exceed the maximum load stated in programmes chapter or shown on the display.
- Dry only the laundry that is suitable for tumble drying. Refer to the fabric label on the items.
- Do not dry large and small items together. Small items can be trapped inside the large items and remain wet.

Fabric label	Description
	Laundry is suitable for tumble drying.
	Laundry is suitable for tumble drying at higher temperatures.
	Laundry is suitable for tumble drying at low temperatures only.
	Laundry is not suitable for tumble drying.

12.2 Loading the laundry




CAUTION!

Ensure the laundry is not trapped between the appliance door and rubber seal.

1. Pull open the appliance door.
2. Load the laundry one item at a time.
3. Close the appliance door.

12.3 Turning on the appliance

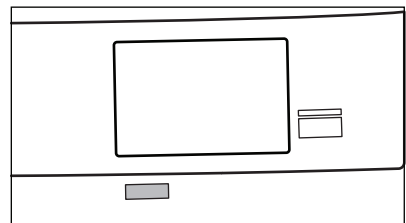

To turn on the appliance:

Push the On/Off button.

If the appliance is on the display lights up.

12.4 Auto Off function

To decrease the energy consumption, the Auto Off function turns off the appliance automatically:


- if no selection was done in the last 5 minutes.
- after 5 minutes from the program end.

Push the On/Off button to turn on the appliance.



If the appliance is on the display lights up.

12.5 Setting a program



- Use the program dial to set the program.

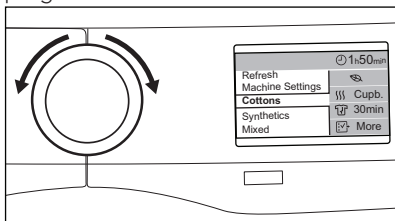

- You can also set the program, by using the touch screen. If the summary screen is on, tap on it once to see the program list.

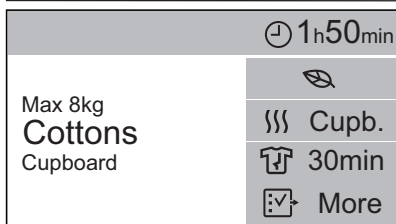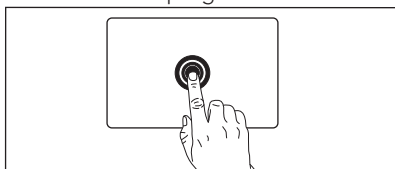

Scroll the program list up or down to set the program.

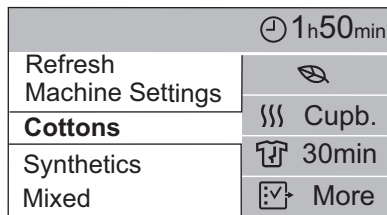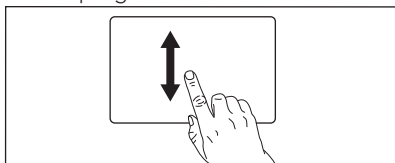

The possible time to complete the program comes into the time bar.




The drying time you see is related to the load of 5 kg for cotton program. For the other programs the drying time is related to the recommended loads. The drying time of the cotton program with the load more than 5 kg is longer.

12.6 Options


Together with the program you can set 1 or more special options.

If you want to change the parameters of the options currently selected, tap on the option you want to edit.

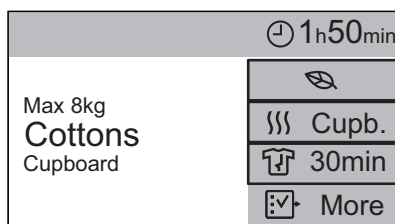


To select additional options:

1. Tap on **More** to see list of the options dedicated for the selected program.

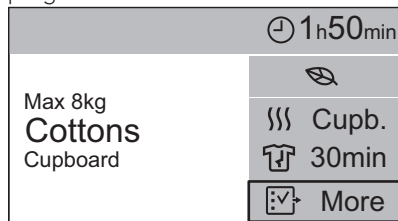


2. Scroll the options list up or down to browse it.

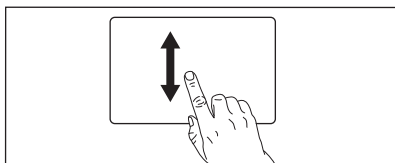

<Cottons	⌚ 1h50min
dB Extra silent	OFF
🌿 Eco	ON
}}} Dryness Level	Cupb.
🕒 Dry Time	00h00min
👕 Anti-crease	30min

3. Tap the option to select it.
There are two types of options:

- with the status **ON** or **OFF** (eg. Eco).
- with the editable parameters (eg. Dryness Level).
To change the parameter scroll the parameter bar to the right or left.

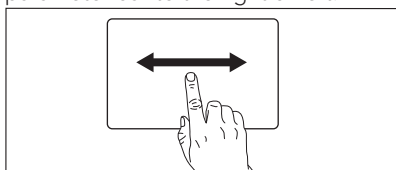

<Cottons	⌚ 1h50min
}}} Dryness Level	Cupb.
< Cupb. >	

Tap on the previously selected option to go back to the option list.


<Cottons	⌚ 1h50min
}}} Dryness Level	Cupb.
< Cupb. >	

i Any time, you can get directly to the summary screen, if you tap on left part of the top bar with the name of the program.

<Cottons	⌚ 1h50min
}}} Dryness Level	Cupb.
< Cupb. >	

	⌚ 1h50min
Max 8kg Cottons Cupboard	🌿 }}} Cupb. 👕 30min 📄 More

12.7 Starting a program

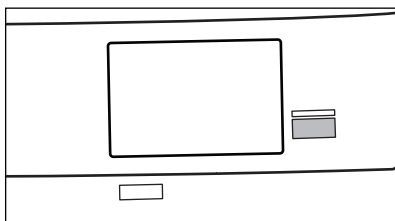


To start the program, Touch the **Start/ Pause** button.

The appliance starts and the LED above the button stops flashing and stays on.



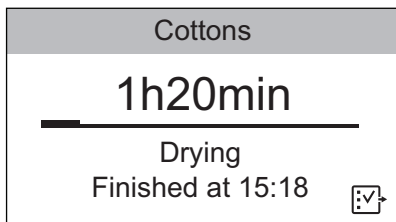

On the screen you can find:


- the name of the program.
- the remaining drying time.
- the progress bar.
- the phase of a cycle (drying, anticrease, cooling).
- the possible end time of the program.




Child lock option activation:

At any time during the drying you can activate the child lock option.

1. Tap on the option  icon to get to the option list.
2. Tap on the child lock  option. The option  icon will change into the child lock  icon.

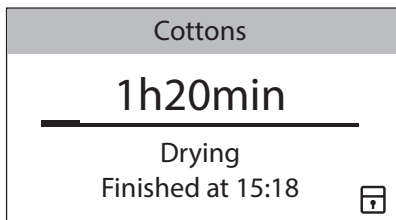



To deactivate the child lock option tap on and hold the child lock  icon a few seconds.

12.8 Program change

To change a program:


13. MACHINE SETTINGS



In the programs screen scroll up or down to find machine settings, and tap on the  icon to get to the settings list.


Easy Iron Refresh	
Machine Settings	
Cottons	
Syntetics	

1. Push the On/Off button to turn the appliance off.
2. Push the On/Off button again to turn on the appliance.
3. Set a new program.

12.9 Program end




-  Clean the filter and drain the water container after each drying cycle. (See chapter CARE AND CLEANING.)

If the drying cycle is finished, the symbol  appears on the display. If the  Cycle End Buzzer option is activated, the acoustic signal sounds intermittently for 1 minute.

-  If you do not turn off the appliance, the anti-crease phase starts (not active with all programs). Laundry can be removed during this phase. At the end of the anti-crease phase the display tells that the anti-crease phase is finished and shows **0h00min**

To remove the laundry:

1. Push the On/Off button for 2 seconds to turn the appliance off.
2. Open the appliance door.
3. Remove the laundry.
4. Close the appliance door.


<Programs	Machine Settings
 Set Clock	15h18min
 Language	ENG
 Display Brightness	3

13.1 Set Clock

You can change the clock each time you want.

To change the time:

1. Tap on the **Set Clock** bar.
2. Scroll the bar of hours and minutes to the right or left to set the current time.

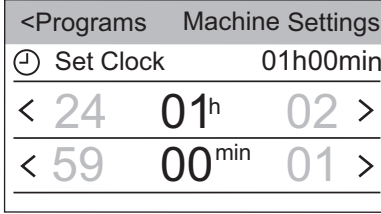

3. Tap on the **Set Clock** bar to get back to the machine settings list or tap on the **<Programmes** bar to get to the summary screen.

13.2 🗨 Language

To change the language:

1. Tap on the **Language** bar.
2. Scroll the list of languages up or down to find the language you want to use and tap on it.

Back	Language
Svenska	SV
Deutsch	DE
English	EN
Italiano	IT
Francais	FR

13.3 ☀ Display Brightness


You can control the brightness level of the Display. There are 6 brightness levels.



To improve readability of the display when a dryer is stacked over a washing machine set the 6th level of the display brightness. When the dryer is not stacked level 1 to 5 are suggested.

To change the display brightness:

1. Tap on **Display Brightness** bar.
2. Scroll the bar to the right or left to set the level of the brightness.

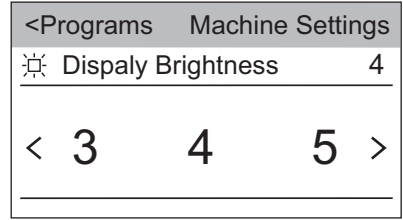

3. Tap on **Display Brightness** bar to get back to the machine settings list or tap on **<Programmes** bar to get to the summary screen.


13.4 🔔 Cycle End Buzzer

The sound is heard at the:

- cycle end
 - start and end of crease guard phase
- You can use this option to deactivate the buzzer or control the duration of the buzzer. There are 3 levels of sound duration (Short, Mid and Long).


To deactivate the buzzer or set the new duration of the sound:

1. Tap on **Cycle End Buzzer** bar.
2. Scroll the bar to the right or left to set the desired value.

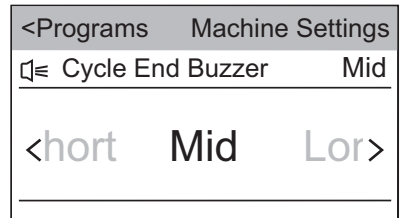


3. Tap on **Cycle End Buzzer** bar to get back to the machine settings list or tap on **<Programmes** bar to get to the summary screen.

13.5 Water Hardness

-  Water hardness can be different for different locations. Water hardness has an effect on the water conductivity and the operation of the conductivity sensor in the appliance. If you know the value of the water conductivity you can adjust the sensor to dry with the better results (recommended to set the "soft water hardness" to get the laundry more dried).

The appliance allows you to choose between 3 levels (Hard, Medium, Soft) corresponding to different ranges of water hardness.


	ppm	the results from the included water hardness kit.
Soft	< 150	C01-C03
Medium	150 - 300	C04-C05
Hard	> 300	C06-C07

Depending on the country, the water hardness is expressed in equivalent scales: e.g. French degrees (°f), German degrees (°d), English degrees (°e), mmol/l and ppm

If necessary, please contact your local water authority to check the water hardness in your area.

To change the default water hardness level:

1. Tap on **Water Hardness** bar.
2. Scroll the bar to the right or left to set the desired level.

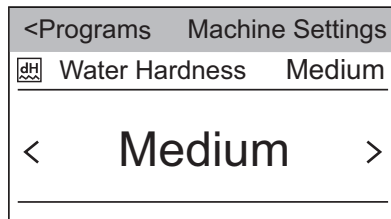


3. Tap on **Water Hardness** bar to get back to the machine settings list or tap on **<Programmes** bar to get to the summary screen.

13.6 Washing Spin Speed


This option helps to set the best condition to dry the laundry. If you know the initial spin speed when you washed you can use this option. Higher spin speed causes that the laundry contains less water.


To change the washing spin speed:

1. Tap on the **Washing Spin Speed** bar to expand the list of programmes for which you can change the spin speed.
2. Tap on the **Cottons** bar or **Other programmes** bar.

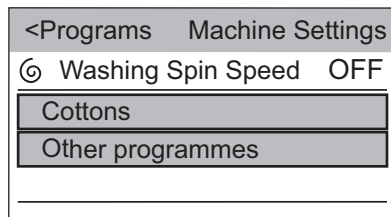

3. Scroll the bar to the right or left to set the desired value of a spin speed for .

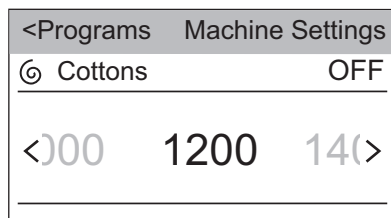

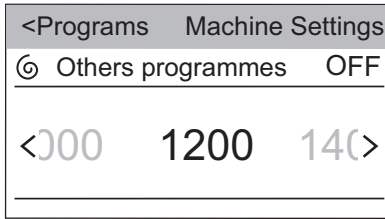

4. Tap on the **Cottons** bar or **Other programmes** bar to close the choice.
5. Tap on the **Washing Spin Speed** bar to get back to the machine settings list or tap on **<Programs** bar to get to the summary screen.

13.7 Water Tank Warning

The water container indicator illuminates at the end of the drying cycle or during the cycle if the water reservoir is full. If the draining kit is installed the water container is drained automatically and the indicator can be deactivated.


To deactivate or activate the indicator tap on the **Water Tank Warning** bar.

One of 2 configurations is possible:

- The indicator is activated (status is **ON**)
- The indicator is deactivated (status is **OFF**)

13.8 Service


These settings are dedicated only for a authorized service.

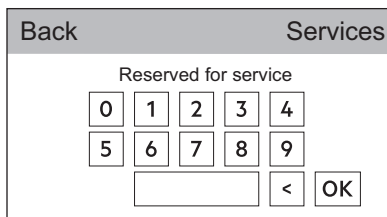


13.9 Shortcuts

To activate the desirable shortcuts:

1. Tap on the **Shortcuts** bar to expand the list of available shortcuts.

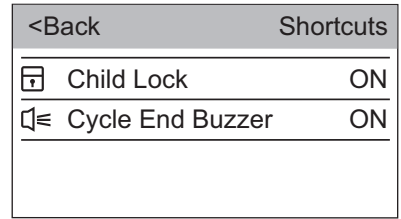

2. Tap on these shortcuts which you want to activate by changing the status to **ON**.
3. Tap on the **<Back** bar to get back to the machine settings list. The shortcuts shows up in the left corner of the summary screen.

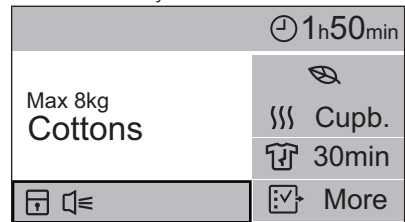

13.10 Machine Information

Here you can find a short description about all programmes, options and settings.

To find the desired description, e.g.:

1. Tap on the **Machine Information** bar.
2. Tap on **1. Programmes** bar.
3. Tap on **Cottons** bar and the relevant description will appear.


13.11 Factory Reset

Factory Reset restores the settings to the state where it was made out in the factory.

To activate the factory reset :

1. Tap on the **Factory Reset** bar.

The dialog window pops up.

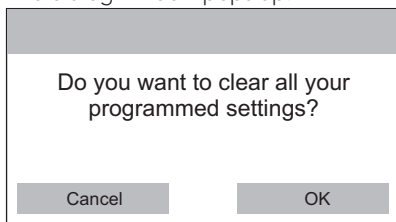

- To confirm the factory reset tap on **OK** or **Cancel** to leave the current settings.

14. HINTS AND TIPS

14.1 Ecological hints

- Spin the laundry well before drying.
- Do not exceed the load sizes which are specified in the programs chapter.
- Clean the filter after each drying cycle.
- Do not use fabric softener to wash and then dry. In the tumble dryer laundry becomes soft automatically.
- Use distilled water like that used for steam ironing. If it is necessary, clean the distilled water before (e.g. with a coffee filter) to remove any particles.
- Always keep the airflow slots at the bottom of the appliance clear.
- Make sure there is good airflow where the appliance is to be installed.


15. CARE AND CLEANING

15.1 Cleaning the filter


At the end of each cycle the message **Clean the lint filter** comes on the display and you must clean the filter.

i The filter collects the fluff during the drying cycle.


- Open the door. Pull the filter up.

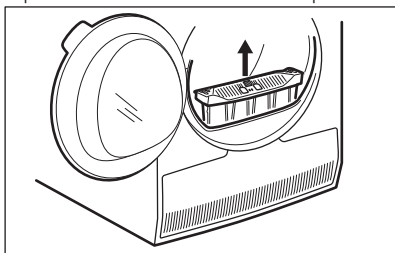


- Push the hook to open the filter.

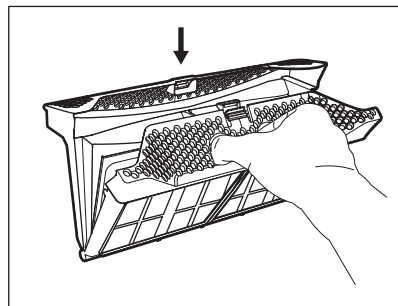

- Use a moist hand to clean both parts of the filter.

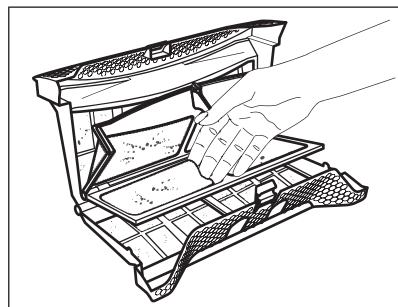

4. If necessary, clean the filter with a vacuum cleaner. Close the filter.
5. If necessary, remove fluff from the filter socket and gasket. You can use a vacuum cleaner. Place the filter back inside the filter socket.

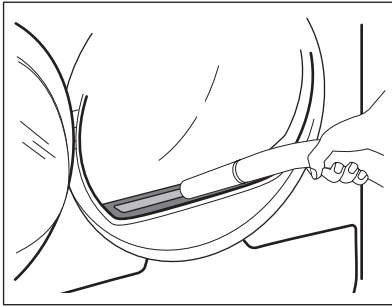


15.2 Emptying the water container

Empty the condensed water container after each drying cycle.


If the condensed water container is full, the programme stops automatically. The message **Water Tank Warning** comes on the display and you must empty the water container.

To empty the water container:

1. Pull the water container out keeping it in a horizontal position.

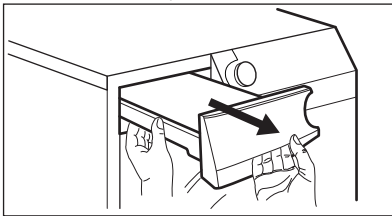

2. Pull the plastic connection out and drain the water into a basin or equivalent receptacle.

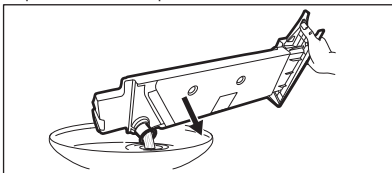

3. Push the plastic connection back in and place the water container back into position.
4. To continue the programme press the Start/Pause button.

15.3 Cleaning the condenser

If the message **Clean the heat exchanger area** comes on the display, inspect the condenser and its compartment. If it is dirty, clean it. Do the check not less than once a 6 months.




WARNING!


Do not touch the metal surface with bare hands. Risk of injury. Wear protective gloves. Clean carefully to avoid damaging the metal surface.

To inspect:


1. Open the door. Pull the filter up.

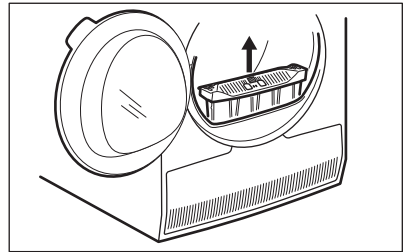

2. Open the condenser cover.

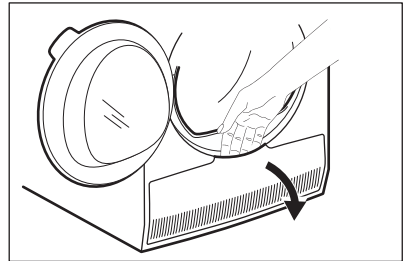

3. Turn the lever to unlock the condenser lid.

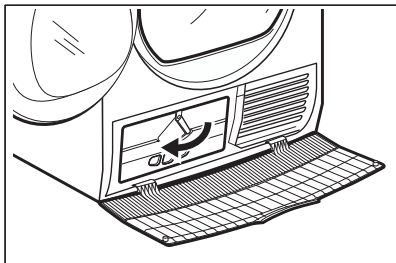

6. Close the condenser lid.
7. Turn the lever until it clicks into position.
8. Put the filter back.

15.4 Cleaning the drum



WARNING!

Disconnect the appliance before you clean it.


Use a standard neutral soap detergent to clean the inner surface of the drum and drum lifters. Dry the cleaned surfaces with a soft cloth.




CAUTION!

Do not use abrasive materials or steel wool to clean the drum.

4. Lower the condenser lid.

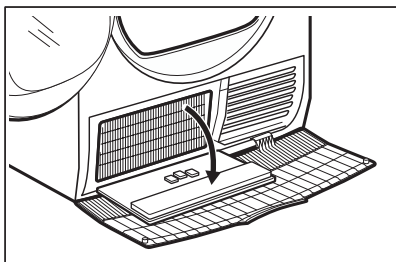

5. If necessary, remove the fluff from the condenser and its compartment. You can use a wet cloth and/or a vacuum cleaner with a brush attachment.

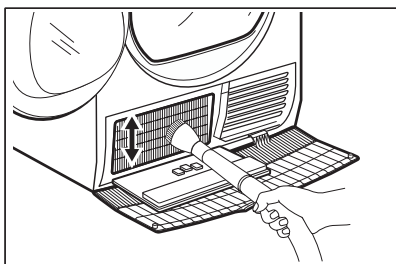

15.5 Cleaning the control panel and housing

Use a standard neutral soap detergent to clean the control panel and housing.

Use a moist cloth to clean. Dry the cleaned surfaces with a soft cloth.



CAUTION!

Do not use furniture cleaning agents or cleaning agents which can cause corrosion.

15.6 Cleaning the airflow slots

Use a vacuum cleaner to remove fluff from the airflow slots.

16. TROUBLESHOOTING

Problem ¹⁾	Possible cause	Remedy
The tumble dryer does not operate.	The tumble dryer is not connected to the mains supply.	Connect to the mains socket. Check fuse in fuse box (domestic installation).
	The door is open.	Close the door.
	The On/Off button was not pushed.	Push the On/Off button.
	The Start/Pause button was not touched.	Touch the Start/Pause button.
	The appliance is in standby mode.	Push the On/Off button.
Unsatisfactory drying result.	Incorrect program selection.	Select a suitable program. 2)
	The filter is clogged.	Clean the filter. 3)
	Dryness Level option was set to <i>Iron Dry</i> .	Change Dryness Level option to higher level.
	The load was too large.	Do not exceed the maximum load size.
	Load size is small.	Select time programme. The time value must be related to the load. To dry 1 item or a few wet items up to 4 kg after a washing cycle with well centrifuged (>1200 rpm), set a short drying time (>40 min). If the time is set to less than 10 min, there will be action of cool air only (no drying).
	Selected drying time for Time Dry option was too short.	Select time programme and set additional drying (20 - 40 min) to improve dryness after previous drying cycle.
	The airflow slots are clogged.	Clean the airflow slots at the bottom of the appliance.
	Dirt on the humidity sensor in the drum.	Clean the front surface of the drum.
	Dryness level not set to desired level.	Adjust the dryness level. 4)
The condenser is clogged.	Clean the condenser. 3)	

Problem 1)	Possible cause	Remedy
The loading door does not close	The filter is not locked into position.	Put the filter in the correct position.
	Laundry is trapped between the door and the seal.	Remove trapped items and close the door.
Not possible to change the program or option.	After cycle start it is not possible to change the program or option.	Turn the tumble dryer off and on. Change the program or option as required.
Not possible to select an option. Acoustic signal is emitted.	The option you tried to select is not available for the selected program.	Turn the tumble dryer off and on. Change the program or option as required.
No drum light	Defective drum lamp.	Contact the service centre to replace the drum lamp.
Unexpected duration time on the display.	The drying duration is calculated according to load size and dampness.	This is automated — the appliance is working correctly.
Program inactive.	The water container is full.	Drain the water container, push the Start/Pause button. 3)
Drying cycle too short.	The laundry is too dry.	Select time program or higher dryness level (e.g. <i>Extra Dry</i>)
	The filter is clogged.	Clean the filter.
	The load is too large.	Do not exceed the maximum load size.
	The laundry was not spun sufficiently.	Spin the laundry well.
Drying cycle too long 5)	Too low or too high room temperature - this is not the appliance malfunction.	Ensure a room temperature higher than +5°C and lower than +35°C. Optimal room temperature to achieve best drying results is between 19°-24°C.
	Disrupted wireless signal.	Check Your home network and router. Restart the router. Contact your wireless service provider if there are further problems with the wireless network.
A message Failed to connect to your WiFi appears on the dryer screen		

Problem 1)	Possible cause	Remedy
The App cannot connect to the dryer.	Disrupted wireless signal.	Check if your smart device is connected to the wireless network. Check your home network and router. Restart the router. Contact your wireless service provider if there are problems with the wireless network.
	A new home router has been installed or the router configuration has been changed.	The dryer, the smart device, or both, need to be configured again.
The App frequently cannot connect to the dryer.	The wireless signal does not reach the dryer.	Try to move the home router as near the dryer as possible or consider purchasing a wireless range extender.
	The wireless signal is disrupted by microwave.	Turn the microwave off. Avoid using the microwave and the Remote Control of the dryer at the same time. The microwaves disrupt the Wi-Fi signal.

1) If there is an error message on the display (e.g. **E51**): Turn the tumble dryer off and on. Select a new program. Push the Start/Pause button. If the appliance does not operate contact the service centre and provide the error code.

2) Follow the program description — see PROGRAMS chapter

3) See chapter CARE AND CLEANING

4) See HINTS AND TIPS chapter

5) Note: After a maximum of 5 hours the drying cycle ends automatically.


17. TECHNICAL DATA

Height x Width x Depth	850 x 600 x 630 mm (maximum 660 mm)
Max. depth with the appliance door open	1100 mm
Max. width with the appliance door open	950 mm
Adjustable height	850 mm (+ 15 mm - feet regulation)
Drum volume	118 l
Maximum load volume	8 kg
Voltage	230-240 V
Frequency	50 Hz
Total power	700 W

Type of use	Household
Permitted ambient temperature	+ 5°C to + 35°C
Level of protection against ingress of solid particles and moisture ensured by the protective cover, except where the low voltage equipment has no protection against moisture	IPX4
This product contains fluorinated greenhouse gases, hermetically sealed	
Gas designation	R134a
Weight	0,28 kg
Global-warming potential (GWP)	1430

18. ACCESSORIES

18.1 Stacking kit

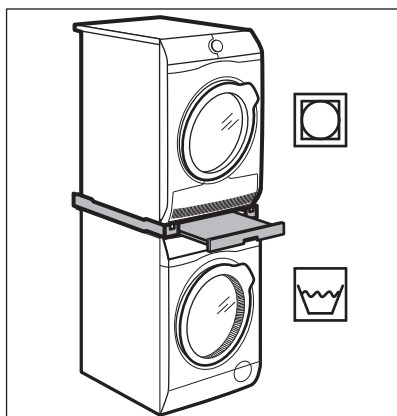


Accessory name: SKP11, STA9

Available from your authorised vendor.

Stacking kit can be used only between washing machines and tumble dryers specified in the leaflet. See the leaflet attached.

Read carefully the instructions supplied with the accessory.

18.2 Draining kit

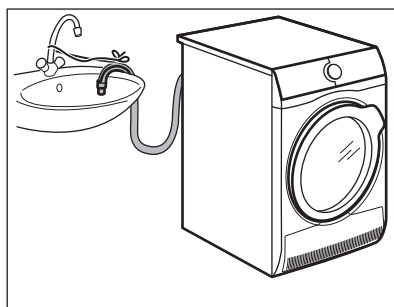

Accessory name: DK11.


Available from your authorised vendor (can be attached to some types of tumble dryer)

For thorough draining of the condensed water into a basin, siphon, gully, etc. After installation, the water container is drained automatically. The water container must stay in the appliance.

The installed hose must be minimum 50 cm to maximum 100 cm from floor level. The hose cannot be in a loop. Decrease the length of the hose if necessary.

Read carefully the instructions supplied with the accessory.

18.3 Pedestal with drawer

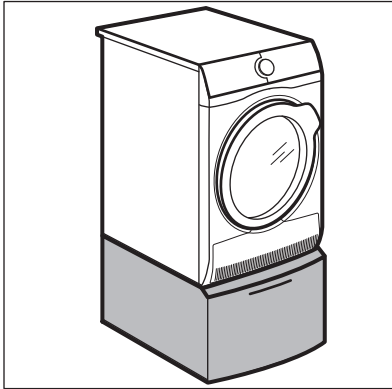

Accessory name: PDSTP10, E6WHPED2.

Available from your authorised vendor.

For increasing the height of the appliance in order to ease loading and unloading of laundry.

The drawer can be used for laundry storage e.g. : towels, cleaning products etc.

Read carefully the instructions supplied with the accessory.

19. WARRANTY

FOR SALES IN AUSTRALIA AND NEW ZEALAND

ALL AEG BRANDED APPLIANCES

This document sets out the terms and conditions of the product warranties for AEG Appliances. It is an important document. Please keep it with your proof of purchase documents in a safe place for future reference should there be a manufacturing defect in your Appliance. This warranty is in addition to other rights you may have under the Australian Consumer Law.

1. In this warranty:

- a) 'ACL' or 'Australian Consumer Law' means Schedule 2 to the Competition and Consumer Act 2010;
- b) 'Appliance' means any Electrolux product purchased by you and accompanied by this document;
- c) 'ASC' means Electrolux's authorised serviced centres;
- d) 'AEG' is the brand controlled by Electrolux Home Products Pty Ltd of 163 O'Riordan Street, Mascot NSW 2020, ABN 51 004 762 341 in respect of Appliances purchased in Australia and Electrolux (NZ) Limited (collectively "Electrolux") of 3-5 Niall Burgess Road, Mount Wellington, in respect of

Appliances purchased in New Zealand;

- e) 'Warranty Period' means the period specified in clause 3 of this warranty;
 - f) 'you' means the purchaser of the Appliance not having purchased the Appliance for re-sale, and 'your' has a corresponding meaning.
- 2. Application:** This warranty only applies to new Appliances, purchased and used in Australia or New Zealand and is in addition to (and does not exclude, restrict, or modify in any way) other rights and remedies under a law to which the Appliances or services relate, including any non-excludable statutory guarantees in Australia and New Zealand.
- 3. Warranty Period:** Subject to these terms and conditions, this warranty continues for in Australia for a period of 60 months and in New Zealand for a period of 60 months, following the date of original purchase of the Appliance.
- 4. Repair or replace warranty:** During the Warranty Period, Electrolux or its ASC will, at no extra charge if your Appliance is readily accessible for service, without special equipment and subject to these terms and

conditions, repair or replace any parts which it considers to be defective. Electrolux may, in its absolute discretion, choose whether the remedy offered for a valid warranty claim is repair or replacement. Electrolux or its ASC may use refurbished parts to repair your Appliance. You agree that any replaced Appliances or parts become the property of Electrolux.

5. Travel and transportation costs:

Subject to clause 7, Electrolux will bear the reasonable cost of transportation, travel and delivery of the Appliance to and from Electrolux or its ASC. Travel and transportation will be arranged by Electrolux as part of any valid warranty claim.

6. Proof of purchase is required before you can make a claim under this warranty.

7. Exclusions: You may not make a claim under this warranty unless the defect claimed is due to faulty or defective parts or workmanship. This warranty does not cover:

- a) light globes, batteries, filters or similar perishable parts;
- b) parts and Appliances not supplied by Electrolux;
- c) cosmetic damage which does not affect the operation of the Appliance;
- d) damage to the Appliance caused by:
 - negligence or accident;
 - misuse or abuse, including failure to properly maintain or service;
 - improper, negligent or faulty servicing or repair works done by anyone other than an Electrolux authorised repairer or ASC;
 - normal wear and tear;
 - power surges, electrical storm damage or incorrect power supply;
 - incomplete or improper installation;
 - incorrect, improper or inappropriate operation;
 - insect or vermin infestation;

- failure to comply with any additional instructions supplied with the Appliance;

In addition, Electrolux is not liable under this warranty if:

- the Appliance has been, or Electrolux reasonably believes that the Appliance has been, used for purposes other than those for which the Appliance was intended, including where the Appliance has been used for any non-domestic purpose;
- the Appliance is modified without authority from Electrolux in writing;
- the Appliance's serial number or warranty seal has been removed or defaced.

8. How to claim under this warranty:

To enquire about claiming under this warranty, please follow these steps:

- a. carefully check the operating instructions, user manual and the terms of this warranty;
- b. have the model and serial number of the Appliance available;
- c. have the proof of purchase (e.g. an invoice) available;
- d. telephone the numbers shown below.

9. Australia: For Appliances and services provided by Electrolux in Australia: Electrolux goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the Appliance repaired or replaced if the Appliance fails to be of acceptable quality and the failure does not amount to a major failure. 'Acceptable quality' and 'major failure' have the same meaning as referred to in the ACL.

10. New Zealand: For Appliances and services provided by Electrolux in New Zealand, the Appliances come with a guarantee by Electrolux pursuant to the provisions of the Consumer Guarantees Act, the Sale

of Goods Act and the Fair Trading Act. Where the Appliance was purchased in New Zealand for commercial purposes the Consumer Guarantee Act does not apply.

11. Confidentiality: You accept that if you make a warranty claim, Electrolux

and its agents including ASC may exchange information in relation to you to enable Electrolux to meet its obligations under this warranty.

Important Notice

Before calling for service, please ensure that the steps listed in clause 8 above have been followed.

SERVICE AUSTRALIA aeg.com/au

FOR SERVICE

or to find the address of your nearest authorised service centre in Australia

PLEASE CALL 1300 363 664

OR EMAIL

customercare@aegaustralia.com.au

(For the cost of a local call (Australia only))

FOR SPARE PARTS

or to find the address of your nearest spare parts centre in Australia

PLEASE CALL 13 13 50

OR EMAIL

customercare@aegaustralia.com.au

(For the cost of a local call (Australia only))

SERVICE NEW ZEALAND aegnewzealand.co.nz

FOR SERVICE

or to find the address of your nearest authorised service centre in New Zealand

PLEASE CALL 0800 234 234

OR EMAIL

customercare@electrolux.co.nz

(New Zealand only)

FOR SPARE PARTS

or to find the address of your nearest spare parts centre in New Zealand

PLEASE CALL 0800 10 66 20


OR EMAIL

customercare@electrolux.co.nz


(New Zealand only)

AEG_Warr_May_17

20. ENVIRONMENTAL CONCERNS

Recycle materials with the symbol . Put the packaging in relevant containers to recycle it. Help protect the environment and human health by recycling waste of electrical and electronic appliances. Do not dispose of

appliances marked with the symbol  with the household waste. Return the product to your local recycling facility or contact your municipal office.

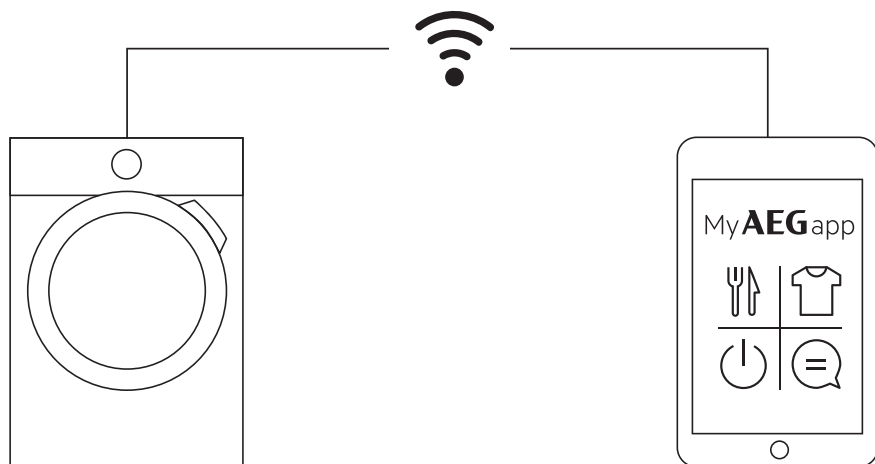

aeg.com/app



The software included in this product contains copyrighted software that is licensed under the BSD, GPL-2.0, LGPL-2.0, LGPL-2.1, zLib, MIT, ISC, Apache 2.0 and others. It is possible to display the complete copy of the licenses in the AEG App that can be downloaded from the corresponding App store from the License menu section. It is possible to download the source code of the open source software used in the product by searching for Wi-Fi Module Software version in NIUX subfolder at the following website: <http://aeg.opensoftwarerepository.com>.