



Instruction Manual

DAB+ FM/AM Radio - BR-60DABC



Enjoy it.

CONTENTS

General Safety	4
Product Overview	7
Basic Operation	
Inserting Batteries	9
Switch on	10
Time and Date	11
Using Headphones	12
DAB Radio Mode	12
Dynamic Range Control	15
FM Radio Mode	16
Audio Mode	17
Setting the Alarm	19
Snooze	20
Sleep Timer	21
Display Backlight Timeout	22
Display Language	23
Specification	24

GENERAL SAFETY

 
Read this manual thoroughly before you start using the radio.

Store this manual, the completed warranty card, your receipt and the product packaging. The safety precautions instructions reduces the risk of fire, electric shock and injury when correctly complied to.

Please follow all instructions and take notice of all warnings.



This unit must be serviced by a qualified service personnel only.

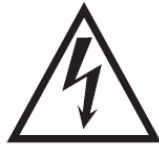

The lightning flash with symbol within the triangle is intended to warn you of a non-insulated dangerous voltage in the product's enclosure that could be of sufficient magnitude to generate a risk of electric shock to persons.



The exclamation point within the triangle is intended to warn you to the presence of important operating and maintenance instructions in the documents included with the product.

IMPORTANT INFORMATION

The lightning flash symbol within the triangle is intended to warn you of non-insulated dangerous voltage the product's enclosure that could be of sufficient magnitude to generate a risk of electric shock to persons.

- Only using furniture that can safely support the Products.
- Ensure the Product is not overhanging the edge of the supporting furniture.
- Do not place the product on a high furniture without securing both the furniture and the product to a stable support.
- Do not place the product on cloth or other conductive materials.
- Warn children of the dangers of climbing on furniture to reach the product or its controls and to call for an adult to assist.

GENERAL SAFETY (CONT.)

IMPORTANT INFORMATION

- Do not expose this product to rain or moisture as it may result in fire or an electric shock hazard
- Do not temper or change or modify the product in any way.
- Only use Accessories outlined and recommended by the manufacturer.
- Please do not expose the product to splashing or water contact
- Please do not place any object on top of the product

This product must be positioned in a sufficiently stable location, it can be potentially hazardous due to falling when mounted and can cause injury, particularly to children if it positioned incorrectly.

- Do not use a damaged power cord, plug or loose outlet. Doing so may cause an electric shock.
- Do not plug several devices into the same outlet. Doing so may cause the outlet to overheat and start a fire. Make sure the outlet is readily accessible during operation of the equipment.
- Do not bend, twist or kink the power cord excessively.
- The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the product. Dry location use only.
- Do not run the power cord near heat-producing appliances such as radiators, stoves or irons. The excessive heat could melt the insulation and expose live wires, resulting in fire or electric shock.
- No naked flame source, such as candles, should be placed on the product.
- Do not allow anything to rest on or roll over the power cord. Doing so may cause fire or electric shock.
- Do not run the power cord near heat-producing appliances such as radiators, stoves or irons. The excessive heat could melt the insulation and expose live wires, resulting in fire or electric shock.
- Unplug this product during lightning storms or when unused for long periods of time. Not doing so may result in fire or electric shock.
- Do not cover the ventilation openings of the product with items such as newspapers, tablecloths, curtains etc or insert objects into the slots available on the products. As this could result in the product temperature rising and could cause a fire.

 
GENERAL SAFETY (CONT.)

- If you notice any unusual odors or smoke around the unit, immediately disconnect the unit from the outlet and contact the service center. Failure to do so may result in fire or electric shock.
- When not using the unit for long periods of time or when you are moving the unit please ensure to disconnect the power supply from the wall socket.
- Please beware that Dust could accumulate over time on the unit and cause it to generate heat and or deteriorate insulation, which in turn may result in an electrical fire.
- The product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or young children of any age, They must be supervised product by a person responsible for their safety.
- Batteries from the product must be only removed by an adult, the adult must ensure to keep them out of reach of infants and children. Seek medical attention immediately if a child has swallowed a battery.
- To maintain the product do not use any chemical or cleaning agent or wet cloth, please only ensure to utilize a dry cloth to wipe it down from marks or dust and only after unplugging the product from the power socket.
- Please ensure to contact our call center for any repair or service required for the products.

Please make sure upon positioning this product, the place is:

- Not wet or damp and Well ventilated
- Away from direct sunlight or heaters.
- Away from splashes or food.
- Protected from excessive dust or grease.
- Do not place this equipment in a confined space such as a bookcase or similar unit. Allow 20cm above and 5cm spacing on both sides for proper ventilation.
- Do not place the Product near heat sources such as radiators, stoves or other audio visual equipment that produce heat.
- Do not place containers with liquids, if liquid falls inside the products it may result in short-circuit, fire or electric shock.
- Do not place small metallic objects on top of the unit.
- Do not use or store flammable or combustible materials near the unit. Doing so may result in fire or explosion. Do not place any naked flame sources, such as lit candles, cigarettes or incense sticks on top of the product.

PRODUCT OVERVIEW

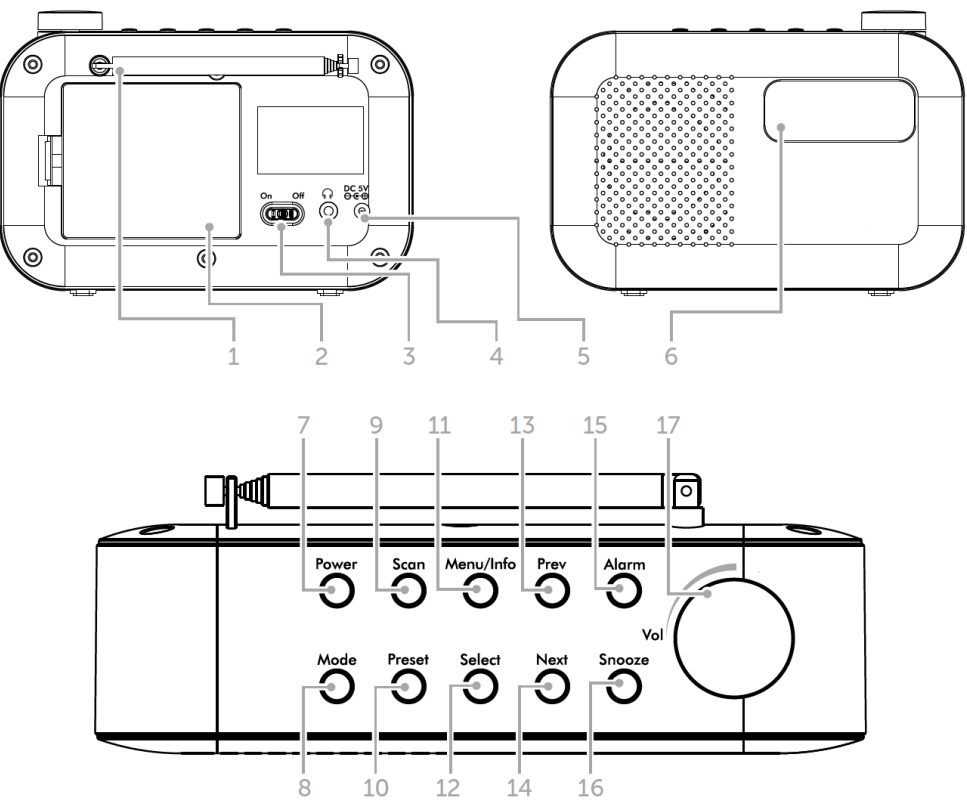

- | | | | |
|---|-------------------------|----|-----------------------|
| 1 | Telescopic radio aerial | 10 | Radio presets |
| 2 | Battery Compartment | 11 | Menu/info |
| 3 | Power On/Off switch | 12 | Select |
| 4 | Headphone socket | 13 | Previous |
| 5 | Power lead socket | 14 | Next |
| 6 | Backlit display | 15 | Alarm |
| 7 | Power On/standby | 16 | Snooze |
| 8 | Change the mode | 17 | Rotary volume control |
| 9 | Scan for radio stations | | |

BASIC OPERATION

Positioning your DAB+ FM/AM Radio

Please consider carefully in advance where your Radio will be situated and make sure that it is:

- At and stable surface
- Within 1.4 metres of a power socket (if using mains power). Please ensure that the mains power lead is not a trip hazard.
- At least 1 metre away from other electrical appliances to avoid interference
- Where you can fully extend the telescopic aerial
- Never place your Radio directly onto antique or polished surfaces

Power connection

1. Connect the mains power lead into the socket on the back of the radio and fully extend the telescopic aerial in a vertical position to obtain the maximum signal strength.
2. Plug the power adaptor into the mains power wall socket and switch on.
3. Slide the On/Off power switch on the back of the radio to On. The product display will light up, 'Welcome to Digital Radio' will be displayed and then your radio will go to Standby mode.


Note: When you are using batteries to power your radio, slide the On/Off power switch on the back of the radio to On and press and release the power button. The product display will light up, 'Welcome to Digital Radio' will be displayed and then your radio will immediately scan for DAB stations. There is no Standby mode when you are using battery power.

BASIC OPERATION (CONT.)

Inserting the batteries (optional)

1. Before installing the batteries (not included) please ensure that the radio is switched o (slide the power switch on the back to Off) and is unplugged from the mains power supply.
2. On the back of the radio, push in the tab to release and remove the battery compartment cover (Fig 2.) .
3. Insert 4 x 1.5V AA-size (also known as LR6) batteries, making sure to note the '+' and '-' markings and position the batteries the correct way around. .
4. Replace the battery cover, making sure it 'clicks' shut.

 Fig 2.

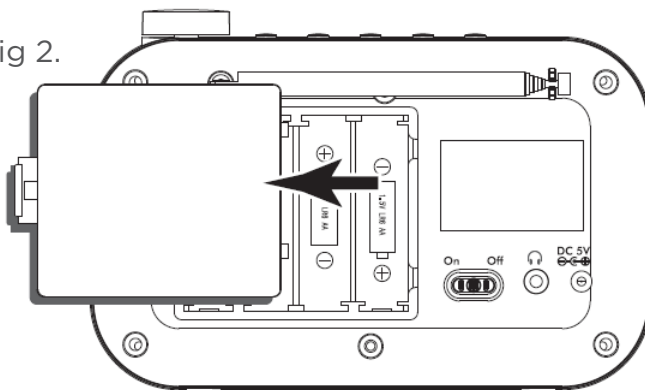

Note: For battery operation, please ensure that the mains power is switched off and remove the mains power plug from the socket, on the back of the Radio.

BASIC OPERATION (CONT.)

Telescopic aerial

Please make sure that the aerial is fully extended before you switch on your radio and attempt to tune to a DAB station (a vertical position is recommended). This will ensure that the maximum signal strength is available when the radio begins to scan. Extending the aerial also ensures the best possible sound quality.

Switch On

1. Press and release the Power button on the top of your radio. Your radio will switch on and begin an automatic scan for DAB stations. A progress bar will show the progress of the scan and the number of stations found during the scan will also be displayed.

Note: When using battery power, your radio will scan for DAB stations after you slide the On/Off power switch on the back of the radio to On. There is no Standby mode when you are using battery power.
2. When the scan is complete your radio will select the first available station and begin to play. Stations are listed in numerical and then alphabetical order by default.

Note: The DAB radio station list is stored in the memory and so the next time you switch your radio on, the station search does not take place. It is possible to scan manually for stations by pressing and releasing the Scan button.

Adjusting the Volume

- Turn clockwise to increase the volume.
- Turn anti-clockwise to decrease the volume.
- Check the display, which will con volume setting.

Change the mode

Press and release the Mode button to change between DAB / FM / AM modes.
Please check the display, which will confirm the mode.

BASIC OPERATION (CONT.)

Time and Date

The first time you listen to DAB radio, the time and date of your product will be synchronised automatically to that broadcast by the DAB service in 24 hour mode; which is in line with daylight saving, so there is no need to set the time and date manually.

If you do wish to set the time and date manually, turn on the radio and follow the steps below:

1. Press and hold the Menu/Info button to enter the menu options.
2. Press and release the Next button to scroll to <System>. Press and release the Select button.
3. Press and release the Next button to scroll to <Time>. Press and release the Select button. <Set Time/Date> is displayed. Press and release the Select button.
4. Set time is displayed and the hour digits will flash. Press and release the Prev or Next button to scroll to the correct hour. Press and release the Select button.
5. The minutes will now flash. Press and release the Prev or Next button to scroll to the correct minutes. Press and release the Select button. Set date is displayed and the day will flash. Use the Prev and Next buttons, together with the Select button, to select and confirm day, month and year, using the same method as you used to set the time.

When you con correct date, Time Saved is displayed and the display returns to <Set Time/Date>.

You can now use the Prev and Next buttons to scroll and the Select button to confirm as you did to set the time and date to change the settings for:

- 12/24 hour clock display
- The date format, DD-MM-YYYY or MM-DD-YYYY
- To auto update the time from the DAB signal, FM signal, DAB or FM signal or no update.

BASIC OPERATION (CONT.)

Using Headphones

You can connect headphones with a 3.5mm plug (not included) to your radio. The stereo headphone socket can be found on the back of the radio at the bottom. When you have headphones connected the radio speakers are switched off and all sound is via the headphones.

Note: Always keep the volume within reasonable limits.

DAB Radio mode

Check that your Radio is in DAB mode. If you are not already in DAB mode, press and release the Mode button until you are in DAB mode (check the display).

The first time you use the Radio or if the station list is empty, your radio will automatically begin to scan for DAB radio stations. A progress bar will show the progress of the scan and the number of stations found during the scan will also be displayed.

If you were listening to a DAB station when you switched the radio o , then this station will automatically be selected when you switch the radio back on.

Changing DAB stations

1. Press and release the Next and Prev buttons to scroll through the available stations.
2. When the station that you would like to listen to is displayed, press and release the Select button to confirm There will be a short delay whilst your radio tunes to your selected station.

Scanning for DAB stations

With DAB radio, additional stations and services regularly become available so it's a good idea to carry out a manual scan every now and then to make sure that you have the most up to date station listing stored within the memory of your Radio. If you have moved your Radio to another location, e.g.: if you go on holiday, then it's also a good idea to carry out a manual scan.

BASIC OPERATION (CONT.)

In DAB Mode

1. Press and release the 'Scan' button to begin a search for stations. The display will change to 'Scanning...'. A progress bar will show the progress of the scan and the number of stations found during the scan will also be displayed.

Prune DAB stations

You can remove the DAB stations in the station list that cannot be received in your area. These are listed with a '?' prefix.

In DAB mode:

1. Press and hold the Menu/Info button to enter the menu options.
2. Press and release the Next button to scroll to <Prune>. Press and release the Select button.
3. Prune? <No> Yes is displayed. Press and release the Prev button to scroll to <Yes>. Press and release the Select button to confirm and prune the station list. Stations with a '?' pr ow no longer be displayed.

Storing a DAB station preset

Your Radio can store up to 20 DAB radio stations in its preset memories for instant access to your favourite stations.

1. Tune the Radio to the DAB radio station that you wish to preset.
2. Press and hold the Preset button for approximately 2 seconds until Preset Store<1:(Empty)> is displayed if no previous station has been stored.
3. Press and release the Prev or Next button to scroll to the preset location that you would like to store the radio station to (1-20).
4. Press and release the Select button to con Preset X stored, where 'X' is the number of the preset (1-20), will be displayed.

Note : If there is already an existing DAB station stored under a preset, it will be over written when you store the new station.

BASIC OPERATION (CONT.)

Tune to a DAB station preset

In DAB mode:

1. Press and release the Preset button. Preset Recall <1:> is displayed together with the name or frequency of the station stored there, or (Empty) if no previous station has been stored.
2. Press and release the Prev or Next button to scroll to the preset location and station that you would like to listen to (1-20).
3. Press and release the Select button to confirm. The radio will instantly tune to that station and begin to play.

Note: If no DAB station has been stored under the preset button, 'Preset X Empty' will be displayed, then the radio will revert to the previously selected radio station.

DAB display information

When listening to a DAB station you can change the information that will appear on the display. There are several different types of information that are sent by the broadcaster.

- Dynamic Label Segment (DLS) - this is scrolling text information supplied by the broadcaster. Information could be the name of an artist or music title, DJ's name, contact details for the radio station etc.
 - Signal Strength - An empty will appear on the display to indicate the minimum signal strength for acceptable listening. The row of solid rectangles indicate the actual signal strength that you are receiving. The stronger the signal, the further to the right the row of solid rectangles will be.
 - Program Type (PTY) - such as 'Rock', 'Pop', 'Talk' or 'News'
 - Multiplex Name - displays the broadcasting area and collection of radio stations on this frequency e.g.: BBC National DAB, Digital 1 Network.
 - Channel and Frequency - e.g.: 12B 225.648 MHz
 - Signal error - This is displayed as a number between 0-99. It would not be possible to satisfactorily listen to a radio station with a signal error rate of 30 or above. Try adjusting the aerial or relocating your radio to improve reception.
 - Signal information - The data rate at which the signal is being transmitted.
 - Time and date - supplied by the broadcaster.
1. Repeatedly press and release the Menu/Info button to cycle through the different information options.

BASIC OPERATION (CONT.)

Dynamic range control (DRC)

In DAB mode:

The dynamic range for each radio programme is set by the broadcaster for each radio station and may be different for the types of programme broadcast, such as pop or classical music or a chat show. The dynamic range control signal is transmitted in parallel with the audio signal for each programme and with your radio you can use this control signal to expand or compress the dynamic range (the difference between the loudest and quietest sounds) of the reproduced audio signal. Changing the dynamic range can affect the 'loudness' and/or 'quality of sound' of the programme that you hear so that it will be more suited to your listening conditions and your own personal listening requirements. e.g. in a noisy environment, where quiet sounds might be swamped, setting the compression to maximum will 'boost' the quiet sounds, whilst keeping the loudest sounds at their original level.

There are 3 levels of compression:

- DRC off - no compression. This is the default setting.
 - DRC low - medium compression.
 - DRC high - maximum compression.
1. Press and hold the Menu/Info button to enter the menu options.
 2. Press and release the Next button to scroll to <DRC>. Press and release the Select button. The current DRC setting will have an '*' in the display.
 3. Press and release the Next button to scroll through the options and press and release the Select button to confirm.

BASIC OPERATION (CONT.)

FM Radio Mode

If you are not already in FM mode, press and release the Mode button to go to FM mode (check the display).

If you were listening to an FM station when you switched the Radio off then this station will be automatically selected when you switch the Radio back on.

Tuning to an FM station

- Press and hold the Next button to scan up the frequency band.
- Press and hold the Prev button to scan down the frequency band.
- Press and release the Next or Prev button to fine tune each frequency in 0.05MHz steps.

Note: If reception is still poor try moving the radio to another location.

Changing the Scan setting

In FM mode:

1. Press and hold the Menu/Info button to enter the menu options.
2. Press and release the Next button until FM <Scan setting> is displayed. Press and release the Select button. The current Scan setting will have an “*” in the display. There are two different options to choose from:
 - Strong stations only - The scan will only stop when a strong signal strength is received which should also result in a better audio quality. It is possible that the station you are scanning for may be missed using this option.
 - All stations - The scan will stop for every station it receives, even if the signal strength is poor.
3. Press and release the Next button to choose from the two options available and press and release the Select button to confirm.

BASIC OPERATION (CONT.)

Audio Mode

The radio will automatically switch between Stereo and Mono, depending on the quality of the signal being received but you can override this function and manually switch between 'Forced Mono' and 'Stereo Allowed'.

Note: As this is a Mono radio, you may wish to only select the 'Stereo Allowed' option if you are listening to your radio using headphones.

1. Press and hold the Menu/Info button to enter the menu options.
2. Press and release the Next button to scroll to <Audio setting>. Press and release the Select button.

There are now two different options of <Forced mono> and <Stereo allowed> and the current setting will have an '*' display.

3. Press and release the Next button to choose from the two options available. Press and release the Select button to confirm.

Storing an FM station preset

Your Radio can store up to 20 FM radio stations in its preset memories for instant access to your favourite stations.

1. Tune the Radio to the FM radio station that you wish to preset.
2. Press and hold the Preset button for approximately 2 seconds until Preset Store <1:(Empty)> is displayed if no previous station has been stored.
3. Press and release the Prev or Next button to scroll to the preset location that you would like to store the radio station to (1-20).
4. Press and release the Select button to confirm Preset X stored, where 'X' is the number of the preset (1-20), will be displayed.

Note: If there is already an existing FM station stored under a preset, it will be overwritten when you store the new station.

BASIC OPERATION (CONT.)

Tune to an FM station preset

In FM mode:

1. Press and release the Preset button. Preset Recall <1:> is displayed together with the name or frequency of the station stored there, or (Empty) if no previous station has been stored.
2. Press and release the Prev or Next button to scroll to the preset location and station that you would like to listen to (1-20).
3. Press and release the Select button to confirm The radio will tune to that station and begin to play.

Note: If no FM station has been stored under the preset button, Preset X Empty will be displayed, then the radio will revert to the previously selected radio station.

FM display information

When listening to an FM station you can change the information that will appear on the second line of the display. Radiotext (RT) - This is scrolling text information supplied by the broadcaster. Information could be the name of an artist or music title, DJ's name, contact details for the radio station etc.

- Program Type (PTY) - Such as 'Rock', 'Pop', 'Talk' or 'News'
 - Station name or frequency - Such as BBC R4 or 93.30MHz
 - Audio mode - Stereo or Mono
 - Time and date - supplied by the broadcaster.
1. Repeatedly press and release the Menu/Info button to cycle through the different information options.

AM Radio Mode

If you are not already in AM mode, press and release the Mode button to go to AM mode (check the display). There are 20 memory presets for AM radio. The operation for presetting stations and recalling a preset in AM mode is same as DAB/FM modes.

If you were listening to an AM station when you switched the Radio off then this station will be automatically selected when you switch the Radio back on.

Tuning to an AM station

- Press and hold the Next button to scan up the frequency band.
- Press and hold the Prev button to scan down the frequency band.
- Press and release the Next or Prev button to fine tune each frequency in 9KHz steps.

Note: If reception is still poor try moving the radio to another location otherwise please place the unit as far as you can away from power adaptor and power outlet position, this can help avoid noise interference.

BASIC OPERATION (CONT.)

Setting the Alarm

Note: Check that the radio has the correct time and date before you set an alarm.

With your radio switched on (not in Standby mode):

1. Press and release the Alarm button.
2. Alarm 1 Setup is displayed.
- Note: Press and release the Alarm button again to switch to Alarm 2 Setup.
3. Press and release the Select button.
4. Alarm 1 (or 2) Wizard On time is displayed and the hour digits for the alarm will flash.
5. Press and release the Prev or Next buttons to scroll to the hour for the alarm and press and release the Select button
6. The minutes will now flash. Press and release the Prev or Next buttons to scroll to the minutes for the alarm and press and release the Select button.
7. The duration time will now flash. Press and release the Prev or Next buttons to scroll to the duration for the alarm. You can choose from 15, 30, 45, 60, 90 and 120 minutes. Press and release the Select button.
8. The source for the alarm will now flash. Press and release the Prev or Next buttons scroll to the sound source for the alarm. You can choose from Buzzer, DAB, FM or AM. Press and release the Select button.
- Note: If you select DAB, FM or AM radio for the alarm source, 'Last listened' will flash in the display. Press the Select button and the last listened to radio station in DAB, FM, AM, as appropriate, will be used for your alarm.
9. Press and release the Prev or Next buttons to scroll to the frequency for the alarm. You can choose from Daily, Once, Weekends or Weekdays. Press and release the Select button.
- Note: If you select 'Once', you will then be prompted to set the date for your alarm.
10. Press and release the Prev or Next buttons to set the volume for your alarm. Press and release the Select button.
- Note: Remember to set the alarm radio volume to one that will wake you. The alarm volume will increase progressively until it reaches the alarm volume you have set.
11. Alarm 1 Wizard is displayed again, together with Alarm Off (or On). Press and release the Prev or Next buttons to choose Alarm On of Off press and release the Select button to confirm. Alarm saved is displayed.
12. A bell symbol in the display, together with the digit '1' or '2' as appropriate, will confirm that an alarm has been set.

Note: If the time is not set or has failed to update from the radio signal, Time is not set will be displayed when you try to set the alarm. The radio will then prompt you to set the time. An alarm can only be set after the time has been set.

BASIC OPERATION (CONT.)

Stop the Alarm

When the alarm sounds, press and release the Power or alarm button, Alarm off is displayed.

Alternatively, you can press and release the Snooze button (see Snooze function below).

Note: If you press the Standby button to stop the alarm, the alarm symbol will remain in the display and the alarm will sound again at the same time the next day, unless it was set for 'Once' only.

Snooze

When the alarm sounds you can press and release the Snooze button. There are 4 Snooze time options available of 5, 10, 15 and 30 minutes.

1. Press and release the Snooze button once to snooze for 5 minutes.
2. Repeatedly press and release the Snooze button to choose from 10, 15 or 30 minutes. Stop when the Snooze time you would like is displayed.
3. Your radio will now display the snooze time countdown until the alarm sounds again.

BASIC OPERATION (CONT.)

Turn off the Alarm

Follow the steps for 'Setting an Alarm' and select 'Off' in step 11.

In Standby mode you can press and release the Alarm button to turn Alarm 1 and Alarm 2 On or Off.

Sleep timer

You can set your radio to turn o automatically using the sleep timer. You can choose from Sleep off, 15, 30, 45, 60 and 90 minutes.

With your radio switched on (not in Standby mode):

1. Press and hold the Menu/Info button to enter the menu options.
2. Press and release the Prev or Next buttons to scroll to <System>. Press and release the Select button.
3. Press and release the Prev or Next buttons to scroll to <Sleep>. Press and release the Select button.
4. Press and release the Prev or Next buttons to scroll through the available options. Stop when the sleep time you would like is displayed and press and release the Select button. <Sleep> will be displayed.
5. The sleep time minutes that you have selected will be displayed in the radio display e.g. S15, and will countdown until the radio switches off.

BASIC OPERATION (CONT.)

Cancel the Sleep timer

With your radio switched on (not in Standby mode):

1. Press and hold the Menu/Info button to enter the menu options.
2. Press and release the Prev or Next buttons to scroll to <System>. Press and release the Select button.
3. Press and release the Prev or Next buttons to scroll to <Sleep>. Press and release the Select button.
4. Press and release the Prev or Next buttons to scroll to Sleep off . Press and release the Select button. <Sleep> will be displayed.

Display backlight timeout

You can adjust the display backlight timeout. Options of permanently On, 10, 20, 30, 45, 60, 90, 120, and 180 seconds are available. An “*” will be displayed next to the current setting.

With your radio switched on (not in Standby mode):

1. Press and hold the Menu/Info button to enter the menu options.
2. Press and release the Prev or Next buttons to scroll to <System>. Press and release the Select button.
3. Press and release the Prev or Next buttons to scroll to <Backlight>. Press and release the Select button.
4. <Timeout> is displayed. Press and release the Select button. Press and release the Prev or Next buttons to scroll through the available backlight timeout options of On, 10, 20, 30, 45, 60, 90, 120 or 180 seconds. Stop when the backlight timeout you would like is displayed and press and release the Select button. <Timeout> will be displayed. You can now use the Prev or Next buttons to scroll and the Select button to confirm as you did to set the Backlight timeout, to change the settings for the backlight brightness for the <Dim level> and <On level>. There are 3 options available, High, Medium and Low.

BASIC OPERATION (CONT.)

Display Language

You can change the display language of your radio, there are 4 options available; English, French, German and Italian. An '**' will be displayed next to the current setting.

With your radio switched on (not in Standby mode):

1. Press and hold the Menu/Info button to enter the menu options
2. Press and release the Prev or Next buttons to scroll to <System>. Press and release the Select button.
3. Press and release the Prev or Next buttons to scroll to <Language>. Press and release the Select button.
4. Press and release the Prev or Next buttons to scroll to the language you would like. Press and release the Select button to confirm.

Software version

You can check the software version of your radio.

With your radio switched on (not in Standby mode):

1. Press and hold the Menu/Info button to enter the menu options
2. Press and release the Prev or Next buttons to scroll to <System>. Press and release the Select button.
3. Press and release the Prev or Next buttons to scroll to <SW Version>. Press and release the Select button.

Factory reset


You can reset your radio and restore all of the original factory settings.

Note: If you reset your radio all of your stored station presets will be deleted.

With your radio switched on (not in Standby mode):

1. Press and hold the Menu/Info button to enter the menu options
2. Press and release the Prev or Next buttons to scroll to <System>. Press and release the Select button.
3. Press and release the Prev or Next buttons to scroll to <Factory reset>. Press and release the Select button. Factory Reset? <No> Yes will be displayed.
4. Press and release the Prev button to scroll to <Yes>. Press and release the Select button.

SPECIFICATIONS

Power Supply	Output: DC 5V  2A; / Input: AC 100-240V
Audio Output	1 x 3W RMS
Batteries	4 x AA batteries (optional, not supplied)
Frequency	
DAB	Band III, 174 MHz to 240 MHz
FM	87.5 MHz to 108 MHz
AM	522 KHz-1620 KHz



CUSTOMER HELPLINE:

1300 296 699
info@ayonz.com

DISTRIBUTED BY:

Ayonz Pty Ltd