

the Smart Mist™ Humidifier

Instruction Book - LAH400



Breville®



Contents

- 2 Breville Recommends Safety First
- 8 Components
- 9 Control Panel
- 10 Features
- 10 Assembly
- 11 Functions
- 15 Care, Cleaning & Storage
- 18 Troubleshooting

BREVILLE RECOMMENDS SAFETY FIRST

At Breville we are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition, we ask that you exercise a degree of care and adhere to the following precautions.

Product Dimension	353x230x184mm
For Room Size	20 to 40m ²
Noise Level	Up to 43dB
Power Consumption	110W
Weight	2.4kg
Water Capacity	5L
Evaporation Rate	> 260ml/h

IMPORTANT SAFEGUARDS

READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE

- Carefully read all instructions before operating the humidifier for the first time and save for future reference.
- Remove and safely discard any packaging material and promotional labels before using the humidifier for the first time.
- To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of this humidifier.
- When unpacking the humidifier, check to see you have received all the items listed in the parts list before discarding the packaging.
- Always ensure the humidifier is properly assembled before use. Follow the instructions provided in this book.
- Always operate the humidifier on a stable surface. Ensure that the surface is level, clean and free of water and other substances.

- Do not operate the humidifier on an incline plane. Do not move while the humidifier is switched on.
- Do not place the humidifier near the edge of a bench or table during operation.
- Do not place the humidifier on a rug, carpet, wooden flooring, or any other surface that may be damaged by exposure to water or moisture. It is recommended that a waterproof mat or pad is placed under the humidifier.
- Do not operate the humidifier on a sink drain board.
- Do not locate the humidifier directly below or close to a mains electricity supply socket.
- Do not use the humidifier without water in the water tank.
- Do not use the humidifier unless it has been cleaned according to instructions.
- Mist may not be visible in certain conditions (impacted by light, background colour, etc.) or at lowest setting.
- Suitable for use in dry locations only. Do not use outdoors or on wet surfaces. Do not use in bathrooms, laundry areas or similar indoor locations.
- Never place the humidifier where it may fall into a bath or other water container. Do not use or store where it may get wet or in the immediate surroundings of a bath, a shower, or a swimming pool.
- Do not use in areas where petrol, paint, or flammable liquids are used or stored or where there are vapours present. Do not use in conjunction with or directly next to an air freshener or similar products.
- Do not spray any flammable materials such as insecticides or fragrance around the humidifier.
- Do not use this humidifier when you have used indoor smoke-type repellents or in places with oily residue, burning incense or chemical fumes.
- Do not pour water into any openings except for the water tank. Do not allow water to enter the air outlets on top of the humidifier.
- When filling or refilling, only fill the water tank with cold tap water or distilled water. Do not use ground water or hot water.

- Always switch the humidifier off and then unplug from the power outlet:
 - Before filling or emptying the water tank.
 - Before cleaning and maintenance, unless otherwise specified in this booklet.
 - Immediately after use.
- Always use clean tap or distilled water to prevent clogging and damage to the transducer.
- Do not put any substance other than water in the water tank. Do not add fragrance or any chemical substance into the water. Use only water (tap, purified, mineral, any sort of portable water). If other additives are used, the plastic material and the membrane may become discoloured and/or damaged.
- Water in the water tank is not suitable for drinking. Do not drink this water, and do not use it to feed animals or water the plants. When you empty the water tank, pour the water in the water tank down a drain.
- Do not use the humidifier in a room with major temperature changes as this may cause condensation inside the humidifier.
- If not using the humidifier for a long time, clean and dry the water tank before storage.
- Clean the water tank every week.
- Always disconnect the humidifier from the power supply and empty the water tank before moving. Always carry the humidifier upright.
- It is important to check the humidity of your ambient air regularly. Intensive continuous operation can cause the ambient air to become excessively humid.
- A comfortable humidity level is considered to be between 40%RH to 60%RH.
- Never use the humidifier underneath a cover such as a blanket, pillow, etc.
- Never plug in or switch on the humidifier without filling the removable water tank with water and correctly replacing the tank onto the base of the humidifier.
- Do not remove the mist nozzle during operation.
- Position the humidifier so that the mist nozzle is not directed towards objects or a wall as the immediate vicinity of the air humidifier may become damp.

- The humidifier is not intended to be operated by means of an external timer or separate remote-control system or any other device that switches the humidifier on automatically.
- Do not use chemicals, steel wool, metal scouring pad or abrasive cleaners to clean the outside of the humidifier housing as these can damage the housing of the humidifier.
- Cleaning procedures must be routinely followed to ensure that the humidifier continues to operate efficiently.
- Empty any remaining water from the water tank and water inlet basin when the humidifier is not in use.
- You may optionally add drops of essential/scented oils to the aroma tray. This will emit a pleasant odour into the surrounding area.
- The air humidifier transducer is highly sensitive. Do not touch the transducer with bare fingers or scrape it with any metal tools, as it may reduce the mist output permanently.
- Keep the humidifier clean. Follow the cleaning instructions provided in this book.

IMPORTANT SAFEGUARDS FOR ALL ELECTRICAL APPLIANCES

- Fully unwind the power cord before use.
- Connect only to a 230V or 240V power outlet.
- Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
- To protect against electric shock, do not immerse the power cord, power plug or appliance in water or any other liquid or allow moisture to come in contact with the part, unless it is recommended in the cleaning instructions.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Children should be supervised to ensure that they do not play with the appliance.
- It is recommended to regularly inspect the appliance. To avoid a hazard, do not use the appliance if power cord, power plug or appliance becomes damaged in any way. Return the entire appliance to the nearest authorized Breville Service Centre for examination and/or repair.
- Any maintenance other than cleaning should be performed at an authorised Breville Service Centre.
- This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors.
Misuse may cause injury.
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.
- During electrical storms, the appliance should be disconnected from the power source at the wall socket to prevent any electrical surges that may arise during the storm and which may inadvertently cause damage to the appliance and its electronic componentry.
- Always turn the appliance to the off position, switch off at the power outlet and unplug at the power outlet when the appliance is not in use.

- Before cleaning, always turn the appliance to the off position, switch off at the power outlet, unplug at the power outlet and remove the power cord, if detachable, from the appliance and allow all parts to cool.
- Do not place this appliance on or near a heat source, such as hot plate, oven or heaters.
- Position the appliance at a minimum distance of 20cm away from walls, curtains and other heat or steam sensitive materials and provide adequate space above and on all sides for air circulation.




WARNING

To avoid electric shock, do not connect the plug to the power outlet when hands are wet.

**FOR HOUSEHOLD USE ONLY
SAVE THESE INSTRUCTIONS**



Components

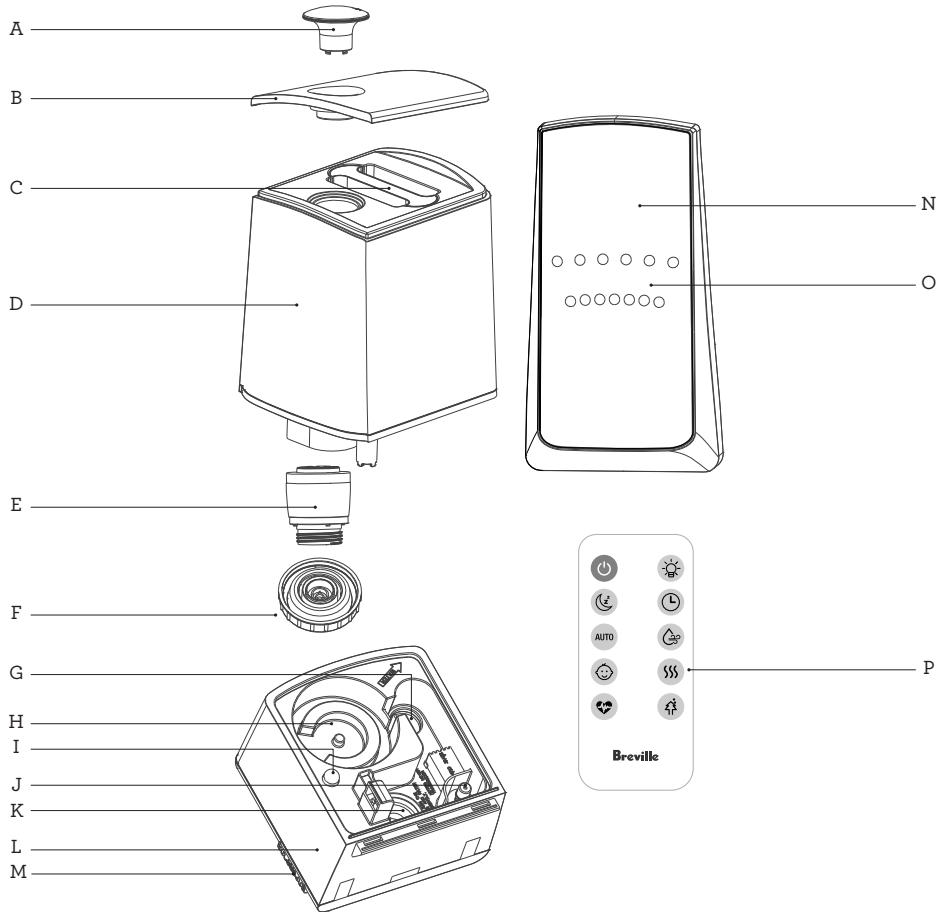


- A. Mist Nozzle
- B. Top Cover
- C. Water Tank Handle
- D. Water Tank
- E. Water Purification Filter
- F. Water Tank Cap
- G. Heating Element
- H. Water Inlet Basin
- I. Blue Power Indicator Light
- J. Water Buoy
- K. Transducer
- L. Base
- M. Aroma Tray

- NOT PICTURED
- Sensor (located on power cord)
- Power Cord
- Aroma Tray Felt Pad
- Non-slip Feet



Control Panel

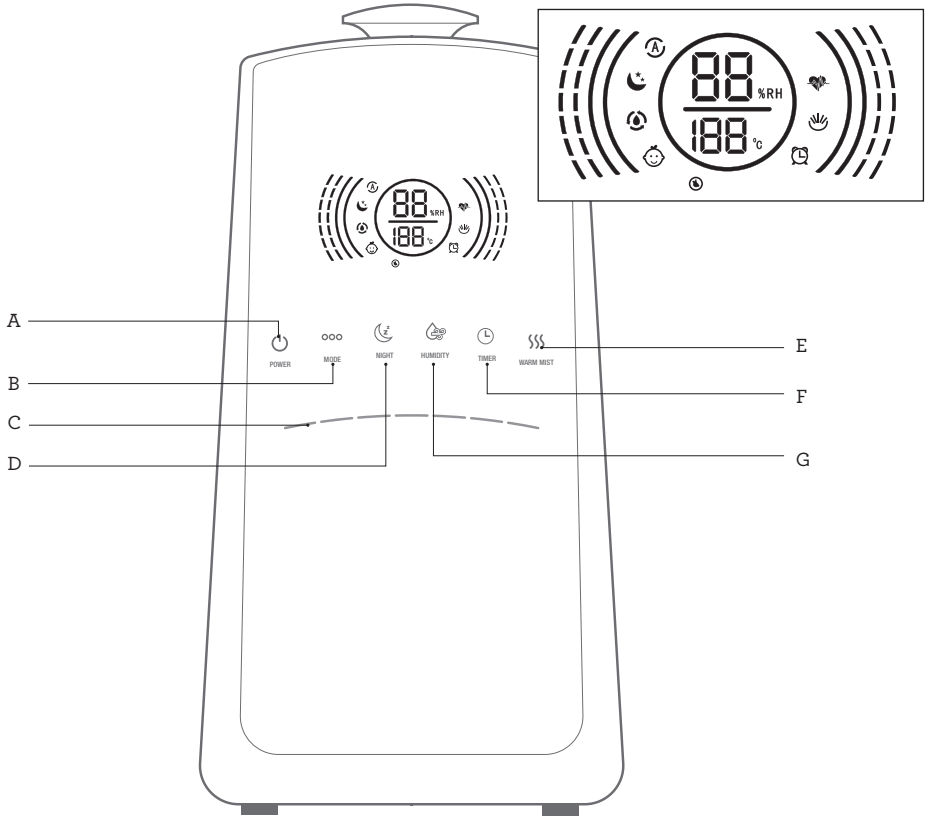

- A. Power On/Off
- B. Mode
- C. Mist Level Control
Scroll left or right to change the mist level.
- D. Night/Sleep
- E. Warm Mist
- F. Timer
- G. Humidity Setting

Display Screen Icons

- Auto
- Night
- Humidity
- Baby
- Water Empty
- Health
- Warm Mist
- Timer



Features

WHAT IS A HUMIDIFIER?

Your Breville humidifier will assist in keeping a comfortable and healthy environment at home by artificially adding water vapour (moisture) to the surrounding atmosphere. It may assist with common winter symptoms such as dry skin, dry throat, cracked or dry lips, dry nasal cavity, and itchy eyes, as well as some sinus and respiratory issues.

HOW DOES A HUMIDIFIER WORK?

Your Breville humidifier uses a high-frequency oscillator to break water into tiny water particles. The ventilation system then blows these water particles into the dry air in the form of a mist where it evaporates to increase the relative humidity.

WHAT IS RELATIVE HUMIDITY?

Relative humidity (RH) is the amount of water vapour in the air and it is commonly expressed as a percentage of the maximum amount of water vapour that the air can hold at a given temperature. Every environment has a different humidity level. A standard comfortable level is considered to be between 40-60%RH.



Assembly

BEFORE FIRST USE

1. Before using your humidifier for the first time, remove all packaging material and promotional labels.
2. Check for any missing or damaged parts as per the components list.
3. Clean all parts according to the Care, Cleaning & Storage section.
4. Place the humidifier on a flat surface that will not be damaged by exposure to water or moisture.



IMPORTANT

It is recommended that a waterproof mat or pad is placed under the humidifier when in use.

5. Remove the cover from the top of the humidifier and set aside.
6. Using the handle, lift and remove the water tank from the humidifier.
7. Turn the water tank gently upside-down, unscrew the water tank cap and fill the tank with clean water.



IMPORTANT

Only fill the water tank with cold tap or distilled water. Do not use ground water or hot water.

8. Replace the water tank cap securely back onto the water tank and place the tank onto the humidifier base.





NOTE

The water purification filter is attached to the water tank cap. Ensure both are properly fitted before using the humidifier.



IMPORTANT

Ensure the water tank cap is properly and tightly screwed back onto the water tank as leakage may occur if loose or incorrectly fitted.

9. Replace the top cover with the nozzle back on top of the water tank.
10. Connect the power plug to a 230V or 240V power outlet and switch the outlet on. The  POWER symbol will illuminate red. The humidifier is now in Standby mode.
11. Touch the  POWER symbol again to activate the control panel and display screen. The humidifier is now switched on and will automatically begin operation in Auto mode.



IMPORTANT

Water may remain in the water inlet basin even though the water tank may be empty. However, once the water in the tank and/or basin is too low to keep the humidifier running, the humidifier will stop working. Refill the tank with water. Do not use the humidifier without water in the water tank.




NOTE

Take care when removing the water tank from the base after use as residual water may drip.



Functions

YOUR BREVILLE HUMIDIFIER




- The control panel lights will dim after 15 seconds if not touched. Touch the centre of the control panel where the control symbols are located to wake up the screen.
- The Timer feature can be used in any mode.
- The humidifier will check the humidity level once every minute.
- Manual adjustment of the Mist intensity control bar will exit any programmed settings, except Night mode and manual Humidity setting.
- Touch and hold the  WARM MIST symbol to turn off the blue light in the water tank. Repeat to turn back on.
- The humidifier will automatically turn off if it has insufficient water to operate. Any programmed operating setting will be cancelled if the water tank runs empty.

SensAir™ LIVE COMFORT CONTROL

- Your Breville Smart Mist™ Humidifier has a sensor to detect changes to humidity and temperature in the surrounding area.
- The SensAir™ can automatically keep the humidity in “the Sweet Spot” by setting the appropriate level of relative humidity, depending on ambient air temperature for maximum comfort.

OPERATING YOUR HUMIDIFIER

AUTO MODE

-  AUTO mode is the default setting for the humidifier when turned on from standby. Auto mode can also be manually selected.
 - The Timer feature and Warm Mist feature can be used with this setting. Mist Intensity cannot be manually adjusted.
1. Touch the  MODE symbol on the control panel until the  AUTO icon illuminates on the display screen.
 2. Auto mode automatically adjusts the mist intensity to regulate the humidity level between 40-65%RH based on the temperature within the room.



NOTE

Auto mode is not recommended where room temperatures reach above 30°C.

3. The humidifier will continue to monitor and regulate the mist intensity as required to maintain the relative humidity level.
4. If the Timer has not been programmed, the humidifier will continue to operate in Auto mode until turned off or programmed to another mode.



NOTE

The room temperature shown on the display screen is taken only within the vicinity of the sensor and may be influenced by positioning, airflow and other environmental factors. Actual room temperature may vary.

HEALTH MODE

- In HEALTH mode, the humidifier automatically adjusts the mist intensity to maintain a relative humidity level of 60% and activates the WARM MIST feature.
 - The Timer feature can be used with this setting and the Warm Mist can be turned off, if desired. Mist Intensity cannot be manually adjusted.
1. Touch the MODE symbol on the control panel until the HEALTH icon and the WARM MIST icon both illuminate on the display screen.
 2. Once relative humidity has reached 60%, the humidifier will continue to monitor and regulate the mist intensity maintaining the 60% relative humidity level.
 3. If the Timer has not been programmed, the humidifier will continue to operate in Health mode until turned off or programmed to another mode.



IMPORTANT

Any programmed operating mode will be cancelled if the water tank runs empty.

The humidifier will automatically shut off when there is insufficient water to operate.

BABY MODE

- In BABY mode, the humidifier automatically adjusts the mist intensity to maintain a relative humidity level of 55% and activates the WARM MIST feature.
 - The Timer feature can be used with this setting and the Warm Mist can be turned off, if desired. Mist Intensity cannot be manually adjusted.
1. Touch the MODE symbol on the control panel until the BABY icon and the WARM MIST icon both illuminate on the display screen.
 2. Once relative humidity has reached 55%, the humidifier will continue to monitor and regulate the mist intensity maintaining the 55% relative humidity level.
 3. If the Timer has not been programmed, the humidifier will continue to operate in Baby mode until turned off or programmed to another mode.

NIGHT MODE

- In NIGHT mode, the humidifier turns off the lights, except the blue water tank light. The humidifier will operate in Auto mode.
- The Timer feature and Warm Mist feature can be used with this setting. Mist Intensity cannot be manually adjusted.



NOTE

Night mode will cancel all other programmed settings and return to Auto mode.

1. Touch the NIGHT symbol on the control panel. The NIGHT icon will illuminate on the display screen.
2. After 15 seconds, all the lights will turn off, except the blue water tank light and the NIGHT icon on the display screen.



NOTE

Turn off the blue water tank light manually before setting Night mode if not needed.

3. Touch the centre of the control panel to reactivate the control panel.
4. Touch the NIGHT symbol again to cancel. The control panel lights will illuminate and the humidifier will continue to operate in Auto mode.

MANUAL MODES



This humidifier can be manually programmed in four ways:



 
 



NOTE

Manually setting the Mist Level or Humidity Setting will cancel any other programmed functions.





1. MIST INTENSITY CONTROL

- This humidifier has 7 mist intensity levels which can be manually selected between Low (1) to High (7).
 - The Timer feature and Warm Mist feature can be used with this setting.
1. Touch or slide your finger along the  MIST LEVEL CONTROL bar on the control panel to change the intensity. The intensity level will show on the display screen.
 2. Select another program or touch the  POWER symbol to cancel.

2. HUMIDITY SETTING

- The humidity level can be manually selected between 30% and 75%RH.
 - The Timer feature can be used with this setting.
1. Touch the  HUMIDITY symbol on the control panel repeatedly to cycle through 30% to 75% RH. The  HUMIDITY icon will illuminate on the display screen.
 2. When the desired relative humidity level is displayed, it will flash 5 times before starting. Once activated, the current humidity level will return to the display screen.
 3. Once the humidity reaches the selected level, the humidifier will continue to monitor and regulate as required to maintain that level, adjusting the mist intensity and turning the mist off and on. Touch the  HUMIDITY symbol to check the selected relative humidity level.
 4. Touch and hold the  HUMIDITY symbol until the  HUMIDITY icon disappears from the display screen or touch the POWER symbol to cancel.
 5. If Warm Mist is needed, it can be selected when the desired humidity level is above the room humidity level.
 6. If ' - ' flashes on the display screen, it is a reminder that a humidity level has not been set. It will flash for 5 seconds, then return the humidifier to Auto mode.

3. TIMER

 



- This humidifier has a Timer feature that will turn the humidifier off after a chosen number of hours.
1. Touch the  TIMER symbol on the control panel repeatedly to cycle through 1 to 12 hours. The  TIMER icon will illuminate on the display screen.
 2. When the desired number of hours is displayed, it will flash 5 times before starting the countdown. Once activated, the temperature will return to the display screen.
 3. The Timer will begin to count down in 1-hour increments. The humidifier will automatically turn off once the chosen time has elapsed.
 4. Touch and hold the  TIMER symbol until the  TIMER icon disappears from the display screen to cancel this feature.
 5. If ' - ' flashes on the display screen, it is a reminder that the timer has not been set. It will flash for 5 seconds, then return the humidifier to Auto mode.



NOTE

When the Timer is programmed, the display screen will alternate every 30 seconds between the current room temperature and the remaining countdown time.

 4. WARM MIST

- This humidifier has a Warm Mist feature. A small internal heating element will heat the water to create a warm vapour.
 - The  WARM MIST operates automatically in Health and Baby modes or can be manually selected in other programmes.
1. Touch the  WARM MIST symbol on the control panel to turn on. The  WARM MIST icon will illuminate on the display screen and warm mist will emit from the mist nozzle gradually within 10-15 minutes.
 2. Touch the  WARM MIST symbol again to turn off.



NOTE

Warm mist will start after the water has time to heat. The time will vary depending on factors such as the temperature of the water in the tank.



IMPORTANT

Any manual operating mode will be cancelled if the water tank runs empty.

The humidifier will automatically shut off when there is insufficient water to operate.

AROMA TRAY



- Press the aroma tray on the side of the humidifier and it will click out of the unit.
- Add 2-3 drops of essential oil (not included) directly to the pad in the aroma tray.
- Push the aroma tray back into the humidifier until it clicks into place.
- Turn the humidifier on and the aroma will start emitting automatically with the mist. Increase the mist intensity as desired.



WARNING

Never add essential oil directly to the water tank, the water inlet basin or any other part of the humidifier except the aroma tray felt pad. Do not use more than 2-3 drops of oil on the aroma tray felt pad at any one time. Only add more oil when the aroma in the surrounding air has dissipated.

AUTO SHUT-OFF

- Once the water in the water tank and water inlet basin is too low to keep the machine running, the  WATER EMPTY symbol will illuminate red on the display screen for 5 minutes and the humidifier will stop working. The  POWER symbol will turn red and stay illuminated.
- Fill the water tank, turn the humidifier on and program the desired mode.

USING THE REMOTE CONTROL


The humidifier comes equipped with a remote control which can be used to operate all the functions on the humidifier.




NOTE

On first use, remove the transparent plastic protector that separates the Lithium battery from the connectors.

- A CR2025 3V Lithium battery is provided with the remote. When it is time to replace the battery, open the battery compartment at the back of the remote, pushing the small arched groove to the right and simultaneously pulling out the battery compartment cover by pushing the rectangular groove.

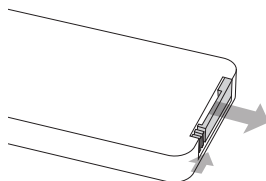

- Insert the battery, paying attention to the polarity (+ and -). Reinsert the battery compartment into the remote control ensuring that the + symbol is facing upwards when inserted. Make sure the battery compartment is correctly secured.

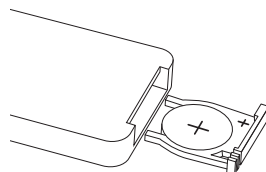

- To use the remote control, point it at the display screen on the humidifier and used within five meters.
- **HINT:** When correctly inserted, the text on the battery will be facing the bottom of the remote and the compartment is fitted correctly when it slides in all the way.



WARNING FOR BUTTON BATTERIES

KEEP OUT OF REACH OF CHILDREN

- Swallowing may lead to serious injury in as little as 2 hours or death, due to chemical burns and potential perforation of the oesophagus.
- If you suspect your child has swallowed or inserted a button battery immediately call the 24-hour Poisons information Centre on 13 11 26 for fast, expert advice.
- Examine devices and make sure the battery compartment is correctly secured, e.g. that the screw or other mechanical fastener is tightened. Do not use if compartment is not secure.
- Dispose of used button batteries immediately and safely. Flat batteries can still be dangerous.
- Tell others about the risk associated with button batteries and how to keep their children safe.



Care, Cleaning & Storage

Before cleaning, ensure the power is switched off and then remove the power plug from the power outlet.

BREVILLE RECOMMENDS

- Only use cold water or distilled water in the water tank.
- Change the water often to keep it fresh.
- Clean the transducer, water tank and water basin at a minimum of once every week when in constant use.
- Use a small brush or a cotton swab to assist with cleaning the transducer and basin. Never use metal or sharp objects.
- After cleaning, ensure all parts are completely dry before using the humidifier.



NOTE

Clean the whole humidifier and make sure that all parts are dried completely.

Use a damp cloth only.

Do not immerse the unit in water.

Clean the transducer, water tank and basin at least once a week.



IMPORTANT

If you do not use the humidifier for a long time, clean and dry the water tank and the water purification filter, and all parts before storage.



WARNING

Do not use chemicals, steel wool, metal scouring pad or abrasive cleaners to clean the outside of the humidifier housing as these may damage the humidifier.



IMPORTANT

Cleaning procedures must be routinely followed to ensure that the humidifier continues to operate efficiently. Do not use the humidifier unless it has been cleaned according to instructions.

TO CLEAN EXTERNAL PARTS

- Use a clean, dry cloth to clean all external surfaces of the humidifier.
- A soft, slightly-damp cloth may be used to wipe the external housing of the humidifier if more thorough cleaning is required. Never use chemical substances or scourers as this could damage the housing and the control panel.
- Dry thoroughly before storing or using the humidifier.

TO CLEAN INTERNAL PARTS

In cases when the water is hard (where water contains too much calcium and magnesium), leave heavy scale on the surface of water basin, transducer and inner surface of the water tank. Scale, or calcification, on the surface of transducer will reduce the reliability of the unit.

To clean internal parts of the humidifier, create a cleaning solution of 1-part vinegar to 1-part water.

WATER TANK

- It is important to clean the water tank regularly and ensure it is dry before reassembling and using the humidifier.
- To clean, create a vinegar and water solution enough to fill the tank about half way. Making sure the cap is replaced on the tank, swish the solution around for a minute, then fill the rest of the tank up with tap water. Leave to sit for 1-2 hours, or even overnight.
- Empty and rinse well with clean water.



NOTE

To assist with emptying all the water from the water tank, it may help to slightly shake the tank over a sink or drain.

MIST NOZZLE

- If the mist output is reducing due to calcification, turn the top cover over and immerse the nozzle in a vessel filled with vinegar and water solution and soak for at least 10 minutes.
- Rinse with clean or distilled water and allow to dry.

WATER INLET BASIN

- The water inlet basin includes the water reservoir in the base of the unit that also houses the transducer and the heating element.
- Clean the water basin with a soft cloth. If there is excess film or calcification on the surface, then soak the cloth with the vinegar and water solution and repeat the process.
- If there is film or calcification in any of the depressions along the basin, drop a bit of vinegar and water solution into the depression and lightly clean it with a brush or a cotton swab.
- Rinse with clean or distilled water and allow to dry.

OPTIONAL CLEANING SOLUTION FOR CALCIFICATION ISSUES

- If a build-up of calcification on the transducer or heating element occurs and cannot be removed with a simple vinegar and water solution, use a de-calcifying agent or citric acid. **STRICTLY FOLLOW THE INSTRUCTIONS ON THE PACKAGING FOR THESE CLEANING PRODUCTS.**
- Brush off any scale deposits from the transducer and heating element surfaces using the brush or a cotton swab.
- Rinse with clean or distilled water and allow to dry.



WARNING

Never use sharp or solid objects to clean the transducer and heating element. Avoid touching the transducer and heating element with your fingers.



NOTE


The heating element in the base of the humidifier will lose its stainless steel finish over time - this is normal. It is still recommended to de-calcify as per instructions noting that cleaning may not bring it back to its original shine.

WATER PURIFICATION FILTER


It is recommended that you clean the water purification filter every time you clean the humidifier, especially if in frequent use.

If the filter is cleaned regularly and as per instructions, it should last for the life of the humidifier.

- Remove the cover from the top of the humidifier and set aside.
- Using the handle, remove the water tank from the humidifier.
- Turn the water tank gently upside down and remove the water tank cap.
- The water purification filter is connected to the water tank cap. Unscrew the filter from the cap to clean.

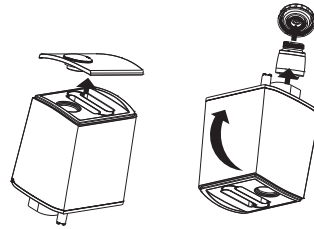

- Dip the filter cartridge in a vinegar and water solution for about 10 minutes before thoroughly rinsing with clean water. Alternatively, rinse the filter under running tap water for a minute.

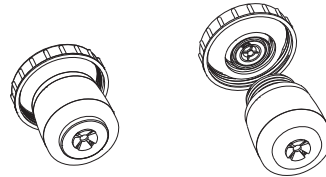

- Once clean, place the filter in direct sunlight and allow to dry for at least an hour.
- Reconnect the filter to the water tank cap, then screw the cap onto the water tank.
- Turn the water tank the right-side up and place the tank onto the base carefully.
- Place the nozzle and top cover on top of the water tank.

STORAGE

- Never store the humidifier with water in the unit.
- Clean as per instructions and make sure that all parts are dry before storing.
- Allow the water tank and water inlet basin time to dry thoroughly before storing the humidifier.
- Keep the humidifier in a dry cool place.
- Do not place anything on top of the humidifier.



Troubleshooting

TROUBLESHOOTING GUIDE

Before carrying out any of the following service checks, unplug the unit from the mains.

PROBLEM	POSSIBLE CAUSES	WHAT TO DO
Power indicator (on/off) red light is off or does not work.	<ul style="list-style-type: none"> Humidifier is not plugged into the power outlet or the plug may be loose or the power outlet is not switched on. 	<ul style="list-style-type: none"> Check the power cord is connected to a power outlet and turned on, then press the power on button.
Water tank indicator blue light is off or does not work.	<ul style="list-style-type: none"> No, or insufficient water in the tank. Blue light has been manually turned off. 	<ul style="list-style-type: none"> Fill the water tank. Touch and hold the WARM MIST symbol to turn blue light on.
The mist has a strange odour.	<ul style="list-style-type: none"> When the humidifier is first used, there may be some residual odour that should dissipate. Water in the tank may be dirty or stagnant. Mineral scale has built up in the water inlet basin. Essential oil. 	<ul style="list-style-type: none"> This is normal for first use. If the smell does not dissipate, check water quality as below. Clean the water tank and refill with fresh, clean water. Clean as per instructions. If using the aroma feature, check that the essential oil used is not the cause of the odour and/or too much oil has been added.
Abnormal noise.	<ul style="list-style-type: none"> Vibration in the water basin because the water level is too low. 	<ul style="list-style-type: none"> Fill the water tank with clean water.
The volume of the mist is too low.	<ul style="list-style-type: none"> Mineral scale has built up in the water inlet basin and/or the nozzle. 	<ul style="list-style-type: none"> Clean as per instructions.
Mist is leaking out from area surrounding the mist nozzle.	<ul style="list-style-type: none"> Mineral scale has built up in the water inlet basin and/or the nozzle. The cover/mist nozzle is not sitting correctly. 	<ul style="list-style-type: none"> Clean as per instructions. Ensure the cover/mist nozzle has been fitted correctly.

PROBLEM	POSSIBLE CAUSES	WHAT TO DO
Mist is leaking from between the water tank and water base.	<ul style="list-style-type: none"> Mineral scale has built up in the water inlet basin or the nozzle. Water tank is not sitting correctly on base. 	<ul style="list-style-type: none"> Clean as per instructions. Ensure water tank has been fitted on the base correctly.
Discolouration on the heating element.	<ul style="list-style-type: none"> This is normal. 	<ul style="list-style-type: none"> The element should be cleaned regularly, however, discolouration that cannot be removed is normal with use.
Lights and beeps on the unit continue for a short time after being disconnected from power.	<ul style="list-style-type: none"> This is normal. 	<ul style="list-style-type: none"> Residual energy will fade in a few seconds.

Breville Customer Service Centre

Australian Customers

Phone: 1300 139 798

Web: www.breville.com

New Zealand Customers

Phone: 0800 273 845

Web: www.breville.com

Breville®

Master Every Moment™

Breville, the Breville logo, Master Every Moment and Smart Mist
are trademarks of Breville Pty. Ltd. A.B.N. 98 000 092 928.
Copyright Breville Pty. Ltd. 2019.

Due to continued product improvement, the products illustrated/photographed in this booklet
may vary slightly from the actual product.

LAH400 ANZ A19