

NOIROT SPOT PLUS PRO



Electric Convection Panel Heater

Model with Wi-Fi

Distributed by Olimpia Splendid Australia Pty Ltd.

**Operating & Installation
Instructions**



In Order To Qualify For Your Lifetime Warranty

Please Visit our Website and complete the Online Registration

Visit us at www.olimpiasplendid.com.au


TABLE OF CONTENTS

	Page
1. Safety.....	3
2. Installation.....	5
3. Basic Controls.....	9
4. Advanced Menu Overview.....	10
5. Application Download.....	11
6. Setup Notes.....	12
7. Creating a Site.....	13
8. Creating a Zone.....	14
9. Adding a Product.....	15
10. Connecting to WIFI.....	18
11. Creating a Program Schedule.....	20
12. Weekly Program Schedule Setup.....	24
13. Additional Operations.....	25
14. Maintenance.....	27
15. Specifications.....	27
16. Warning.....	27
17. Warranty.....	28

1. SAFETY

Read the Installation and User Guide(*), especially the safety instructions below.

WARNING - Certain parts of this product may become very hot and may cause burns. Pay extra attention to small children and vulnerable people when they are around the heater.

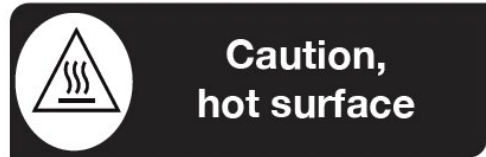

This heater may be used by children aged 8 and over and by persons with reduced physical, sensory or mental capacity or without any experience or knowledge providing they are correctly supervised, or they have been given instructions on how to use the heater safely and they clearly understand the potential hazards. Children must not play with the heater. Children must not perform user cleaning and maintenance.

Ensure children aged under 3 are kept at a safe distance unless they are under constant supervision.

Children aged between 3 and 8 may only turn the heater on or off providing it has been placed or installed in the normal position for its operation and providing they are under supervision, or they have been given instructions on how to use the heater safely and clearly understand the potential hazards.

Children aged between 3 and 8 must not plug in, change the heater settings, clean or perform any user maintenance on the heater.

Do not insert anything into the heater.

The heater may only be connected by a qualified person after the power has been switched off.

1.1 SAFETY

The heater risks overheating if it is covered. The following logo reminds users of this risk.



It is therefore strictly forbidden to cover or block the air intakes or outlets at the risk of causing an accident or damaging the heater.

All service operations must be performed by a qualified and authorised person after the power has been switched off.

The installation must include an omni polar circuit breaker with a contact opening gap of at least 3 mm.

The heater must not be installed underneath a power socket.

Comply with the minimum installation distances from floors, walls, furniture, etc.

The power supply must be protected by a residual current device of at least 30 mA, especially when installed in a room with a bath or shower.

When installing the heater in bathrooms, it must comply with local regulations.

If the power supply cable is damaged, it must be replaced by the manufacturer, its after-sales service or a person with similar qualifications in order to prevent any potential hazards.

Avoid installing the heater in a draught which may otherwise affect its thermostat control.

This direct electric heater is designed for ambient heating of residential type rooms, or similar, in new or existing, single and multi-unit dwellings.

Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.


(*) These instructions were correct at the time of the heater's manufacture and comply with the standards applicable as at that date. The company reserves the right to modify the Installation and User Guide at any time in order to take into account any new standards or changes to existing standards.

2. INSTALLATION

RECOMMENDATION FOR WALL INSTALLATION

This heater is sold ready for DIY installation, with Wall bracket and flexible cord supplied. To remove the wall bracket from the heater you need to push down on the spring-loaded clips located at the top of the bracket. This can be done by using your fingers or, if preferred, a screwdriver (No: 1 Fig.1). Fit the wall bracket to the wall with suitable fixing method according to the surface you mount the heater on (note: fixings not included). Place the heater on to the bracket and clip into position.

Note: To centre your appliance laterally on the wall, use the hole marked 2.

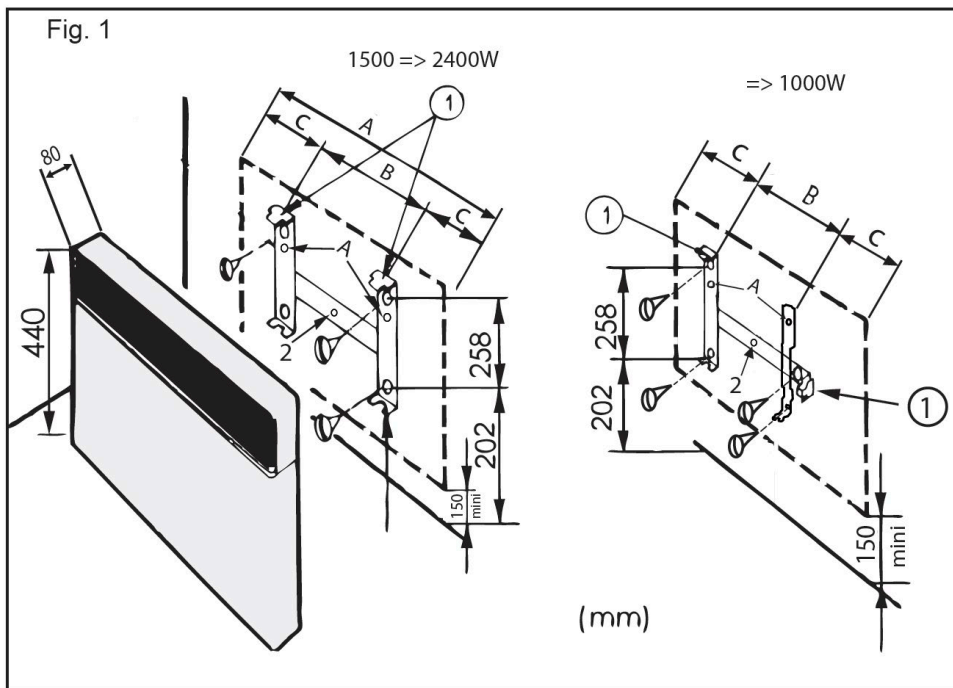


Model	Power (W)	Height (mm)	A (mm)	B (mm)	C (mm)
7358-3TPRO	1000	440	420	208	106
7358-5TPRO	1500	440	580	178	201
7358-7TPRO	2000	440	745	320	210
7358-8TPRO	2400	440	900	405	248

The heater must not be located immediately below a socket outlet (as per requirement of Clause 7.12 of AS/NZS 60335.2.30).

2.1 INSTALLATION

For maximum efficiency, this heater is to be wall mounted between a minimum height of 100mm and a maximum height of 150mm off the floor. This is to allow the necessary volume of air to flow freely through the vents. It is also important to allow a minimum of 100mm clearance at the top and sides of the heater and 500mm from the front (Fig. 2) so as not to force the air back into the heater and activate the Over Temperature Safety Thermal Cut-Out Switch.

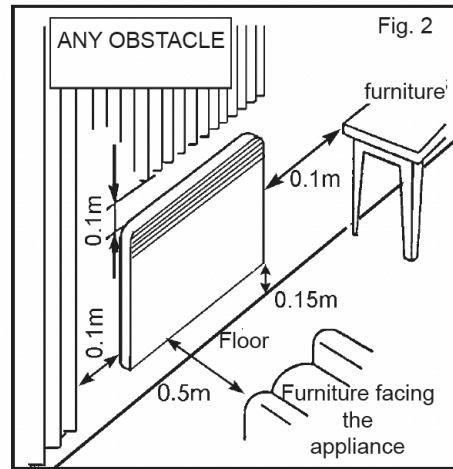


WARNING: IN ORDER TO AVOID OVERHEATING, DO NOT COVER THE HEATER



If the “Over Temperature Safety Thermal Cut-Out Switch” is activated, the heater will automatically switch off to limit the temperature to a safe value. To reset the thermal cut-out, simply switch the heater off, unplug it from the power point and remove the obstruction(s). Plug the heater back in and switch it on. The thermal cut-out switch will reset after a few minutes and the heater will function normally.


PANEL LOCATIONS

This heater is IPX4 rated and suitable for use in all rooms including Zone 2 in Bathrooms (Fig.3) in accordance with AS/NZS 3000: 2018 (Wiring Rules). This heater is double insulated and does not require earthing, **for use in the bathroom it must be located so that the controls cannot be touched by a person in the bath or shower.**

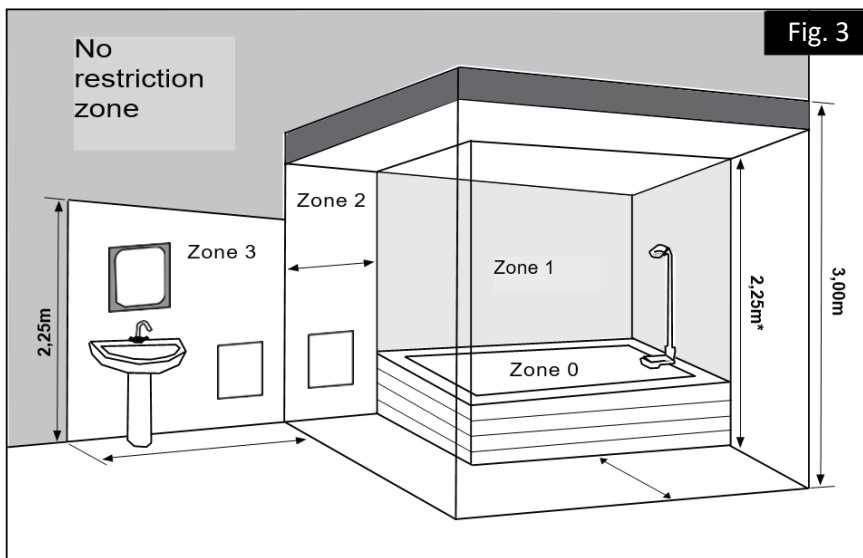

2.2 INSTALLATION


INSTRUCTIONS FOR MOUNTING CASTORS ON THE HEATER

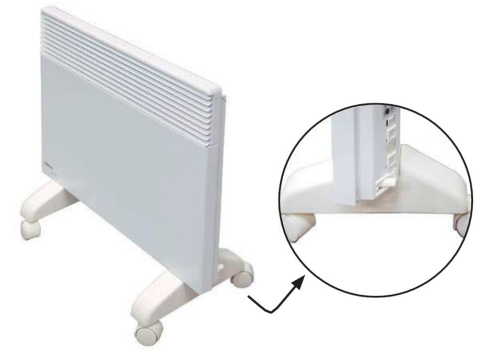

Please follow these instructions.

1. For maximum stability, space castors at 50mm from the edge of the base as shown

2. To lock castors into place, insert the black clips provided through the bottom of the castors into the base of the heater

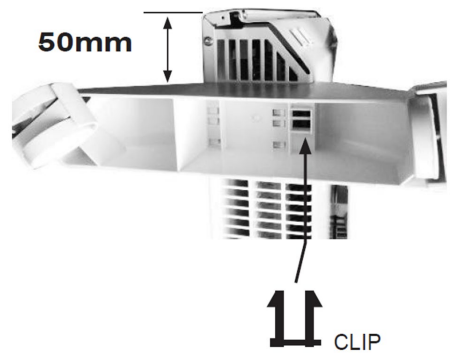

Note: This heater is tested and approved for use with the optional "Easy Glide Castors". Please follow the fitting instructions (supplied with the castors) closely, ensuring the BLACK CLIPS are correctly installed. Note that once the BLACK CLIPS are fixed into position, the castors CANNOT be removed without breaking them.

WARNING: DO NOT use the heater on the floor without the "Easy Glide Castors".

2.3 INSTALLATION

ELECTRICAL CONNECTION

This heater is fitted with an Australian Approved Flexible Cord and Plug. For wall-mounted installations connection can be either by plugging into an existing 10amp power point (DIY) or direct wired by a Licensed Registered Electrical Contractor, who is required to issue a Certificate of Electrical Safety.

PLEASE NOTE:

For safety reasons the Flexible Cord must not be modified or repaired in any way. If there are any concerns, contact Olympia Splendid Pty Ltd on 1 300 664 768 before plugging in.

IMPORTANT:

DO NOT PLUG HEATER INTO A POWER BOARD, DOUBLE ADAPTOR OR EXTENSION LEAD.

USING YOUR HEATER FOR THE FIRST TIME

Remove the heater from its packaging (please dispose of packaging responsibly). Contents should be as follows:

- 1.Heater
- 2.Wall bracket (pre-attached to the back of the heater)
- 3.Instructions for installation and use (booklet)
- 4.Castors (Note: not included with Evolution models)

Ensure the heater is correctly mounted on the wall or fitted to the castors prior to turning it on. Remove the white plastic protective covers from the plug pins and insert the plug into the wall socket.

NOTE: When first turning on your new heater, we recommend doing so in a large, open space or ventilated room for a few minutes to allow the “new heater smell” to dissipate. It is also common for the heater to emit vapour from the vents during this initial process and shouldn’t last for more than 2-3 minutes. If it should persist, switch the heater off and have it inspected.

Noirot is distributed by Olympia Splendid. For additional Support, please go to:
www.olimpiasplendid.com.au


3. BASIC CONTROLS

ON | OFF SWITCH



Slide the switch located in the back of the panel to the '1' position.

ADJUST TEMPERATURE

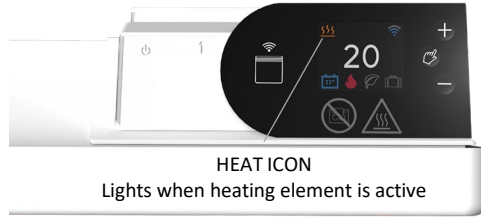

Press the **+** button to increase the temperature and the **-** button to decrease the temperature.

MODE SETTINGS



MODE SELECT: Choose modes and access advanced menu



COMFORT MODE: Adjustable between 7C and 30C



ECO MODE: Adjustable between 7C and 30C




AWAY MODE: Fixed 7C (Not Adjustable)



STAND BY MODE: The heater is not on

CHILD SAFETY LOCK


Press and hold the **+** and **-** buttons simultaneously for three seconds to engage. Repeat operation to disable.

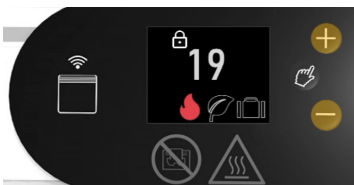

Hold **+** and **-** until lock appears in the display



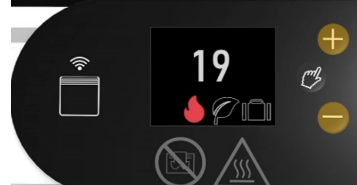


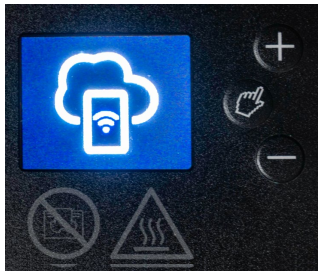
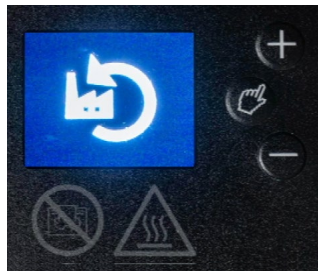

Controls will be disabled. A large lock will appear in the display





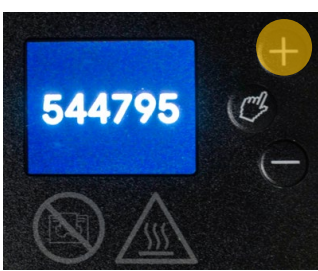
Press and hold **+** and **-** until lock icon disappears to disengage child lock

4. ADVANCED MENU OVERVIEW




Press the  icon for three seconds to access the advanced menu. Press  or  to scroll through menu options.

		
WIFI pairing	Factory reset	Exit advanced menu

WIFI SET UP ACCESS

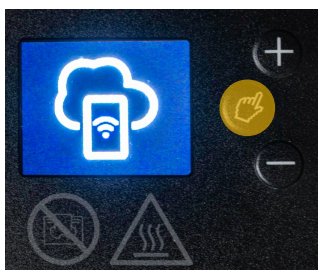		
Press the hand button for three seconds until the pairing symbol appears.	Press the hand button again to access the QR code. Scan the QR from your smart phone or mobile device to begin.	As part of WIFI set up a in code needs to be entered. Press the + button to access the pairing code.


HEATER RESET

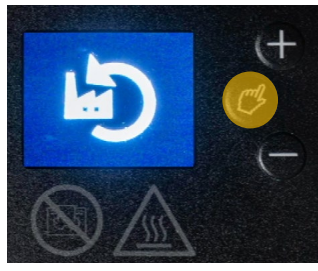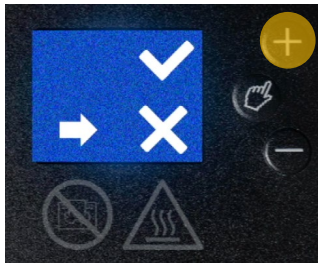		
Press the hand button for three seconds to enter the advanced menu. Press + or - until the factory reset icon appears.	Press the + or - button so that the arrow points to the tick.	Press the hand icon to begin the factory reset. The tick will begin to flash. When it stops, factory reset is complete.


5. APPLICATION DOWNLOAD

In order to operate the heater from your smart device you must first download the Capa Connect application.


1) Download the application from the App Store or Google Play

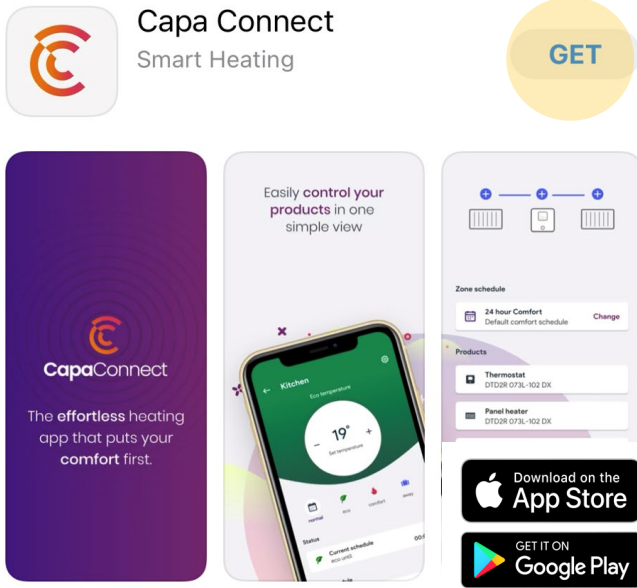

2) Press Sign up / Sign in

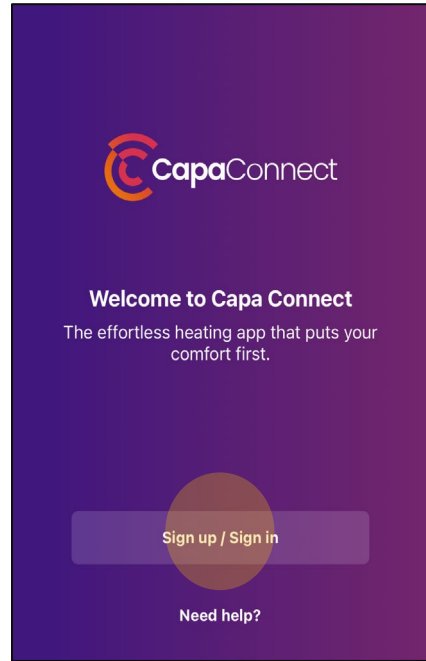



3) Select your country

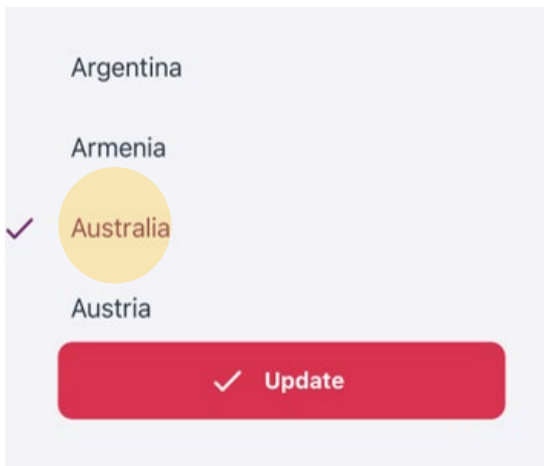

5) Select 'Allow'

IMPORTANT: ensures the app will continue to receive updates


4) Add your email and password

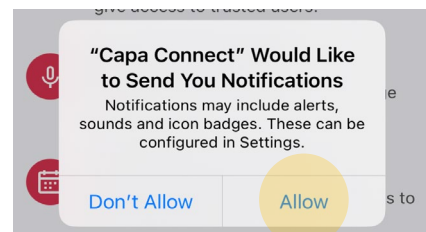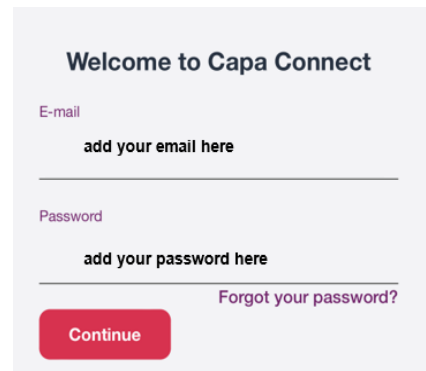

6. SETUP NOTES

In order to control the heater using WIFI it is necessary to create a site and a zone, then add your heater.

1) Press create new site

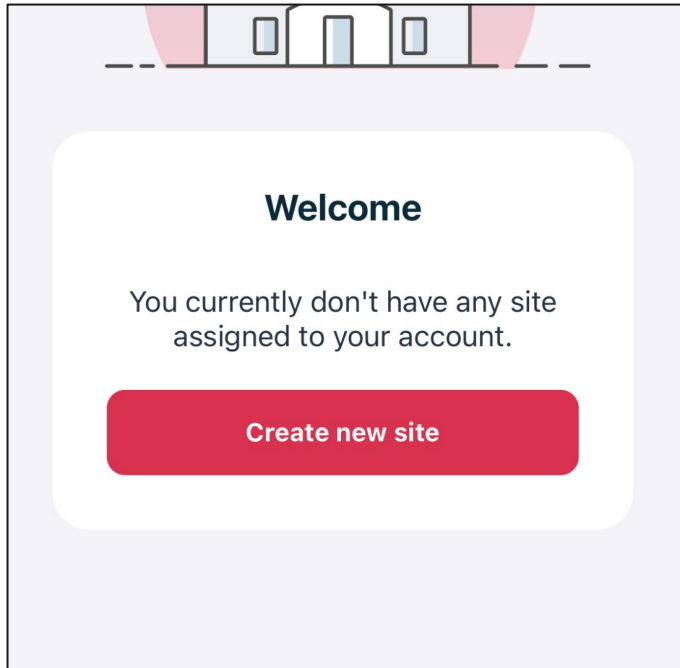


See site, zone and add heater information below.




What is a site?

Creating a site is the first step in controlling your heaters together in one place. A site is something big, such as home, office or hotel.

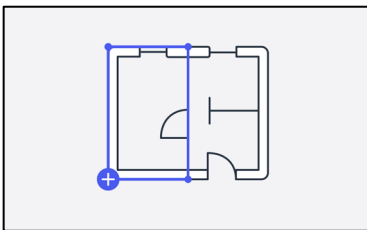

What is a zone?

Each product must be added to a zone. A zone can represent a real room, a floor or area that should follow the same functions.

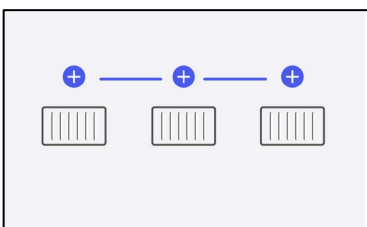


How to add a heater

To start controlling your heater you will need to add it to a zone in your site. You can add it to an existing zone or create a new one.


7. CREATING A SITE

To get started you will need to create a site. A site is something large like a home an apartment or a workplace.


2) Create a name for your site and press next (example: Work)

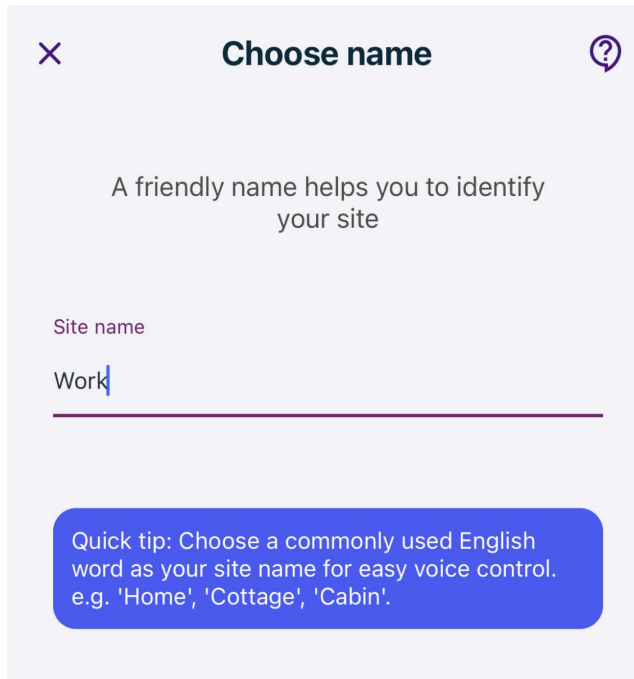


3) Select your time zone and press create site

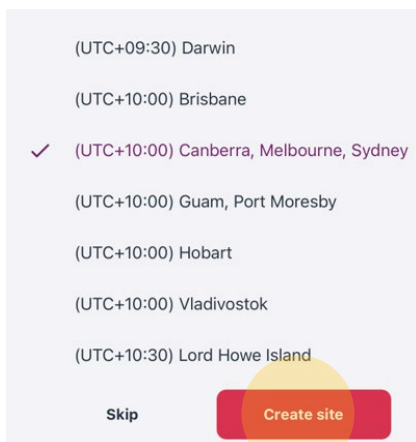

 5) press add to site




4) Select 'Allow' in location settings and press add to site

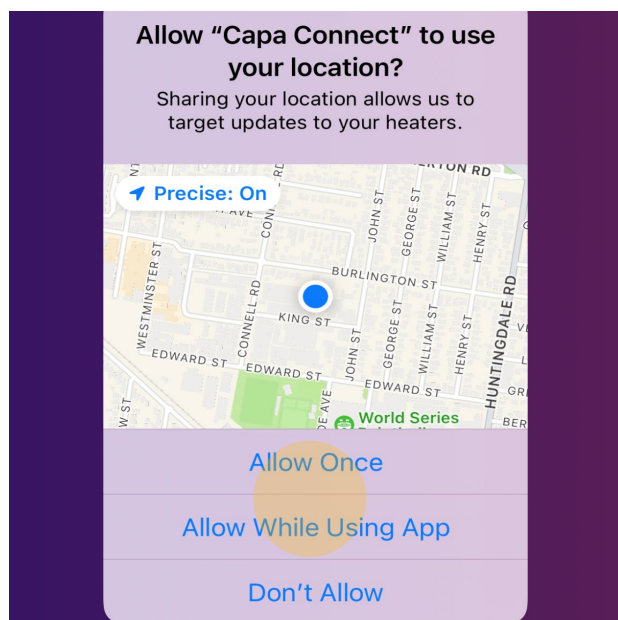


8. CREATING A ZONE

A zone is a more specific place inside of a site such as an office, bedroom or study.


1) Press create new zone

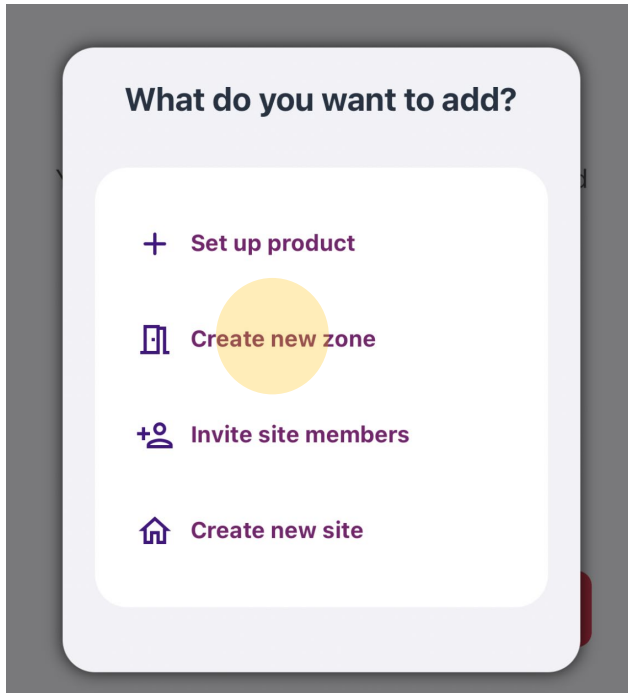

2) Select a zone name from the dropdown list

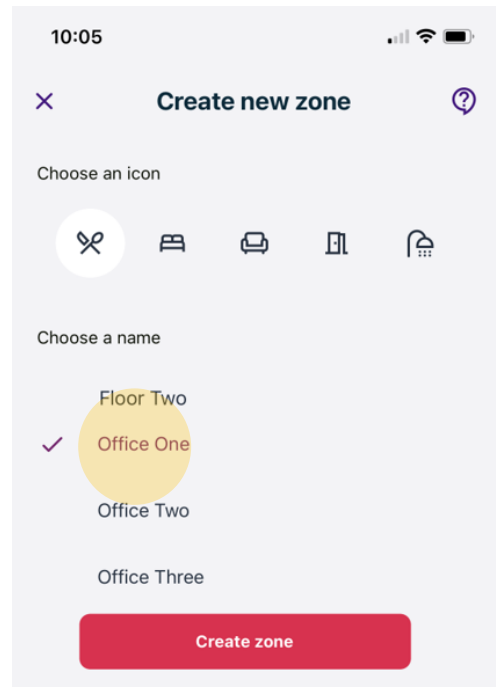


3) Press + in the upper right corner to add a heater

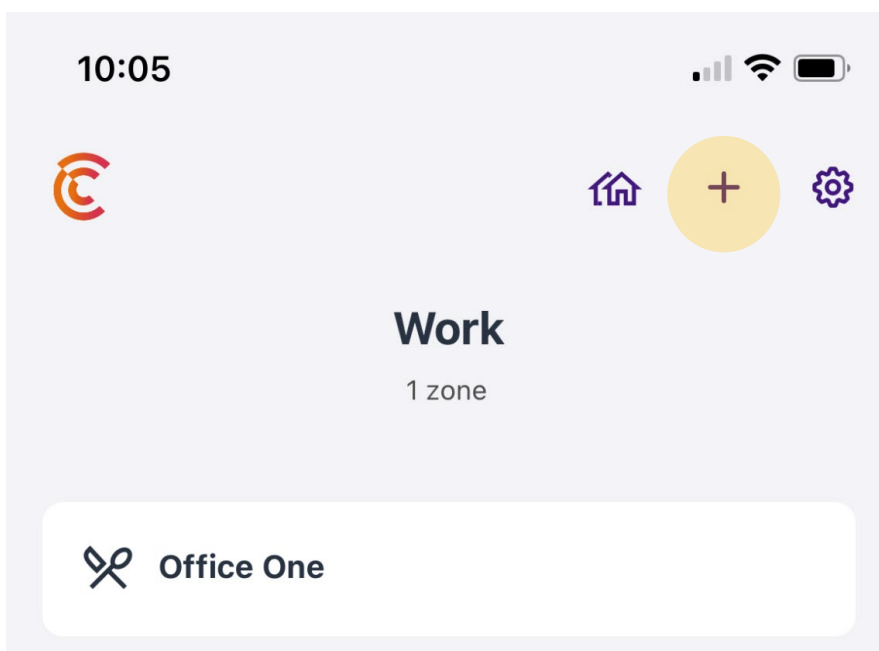


9. ADDING A PRODUCT

To start controlling your heater from your smart device, you will need to add it to a zone within your site. You can add to an existing zone or create a new one.

1) Press Set up product


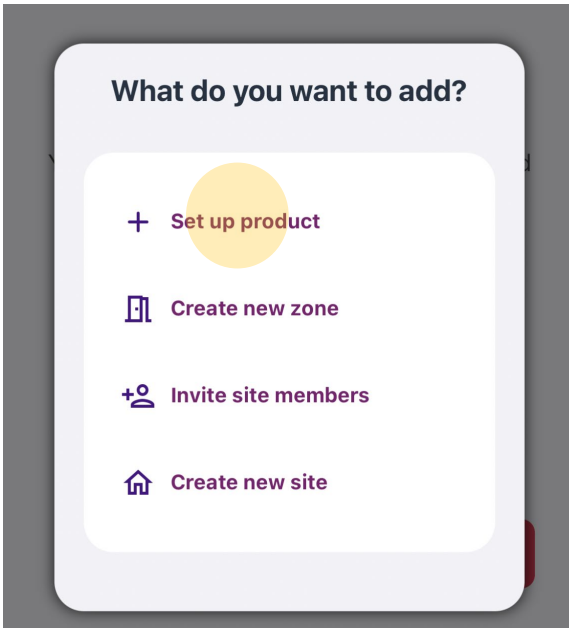


2) Select OK to allow the app access to the device's camera

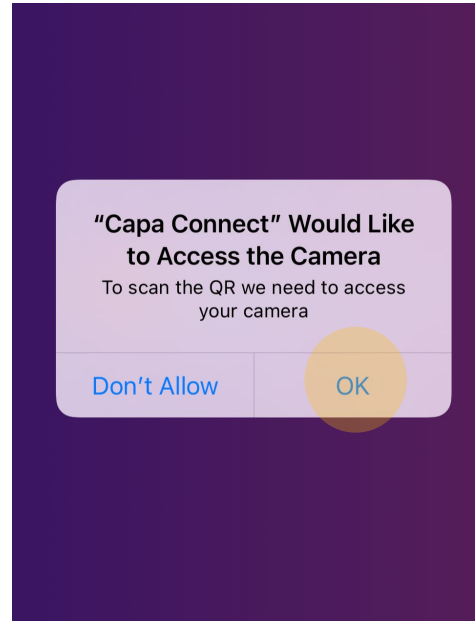

NOTE: A scanner will appear on the device which will allow you make a connection between it and the heater.


You will need to hold the scanner over the barcode located in the heater's display or on the side of the heater to connect. See next page for further details.

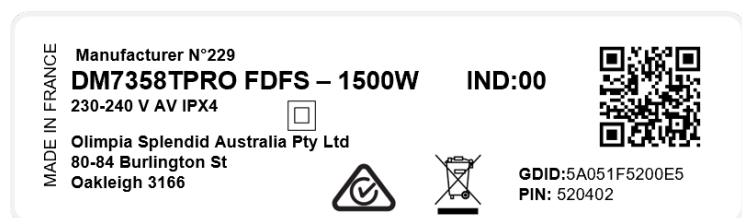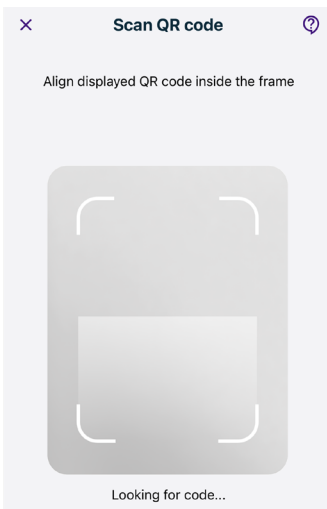

9.1 ADDING A PRODUCT

Scanning the QR code from your device


3) While the heater is ON, press the hand button for 3 seconds until the pairing icon appears

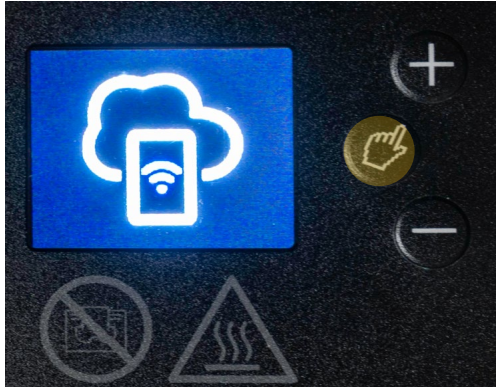

4) Press the hand button again to bring up the QR code



5) Place the scanner over the QR code on the heater

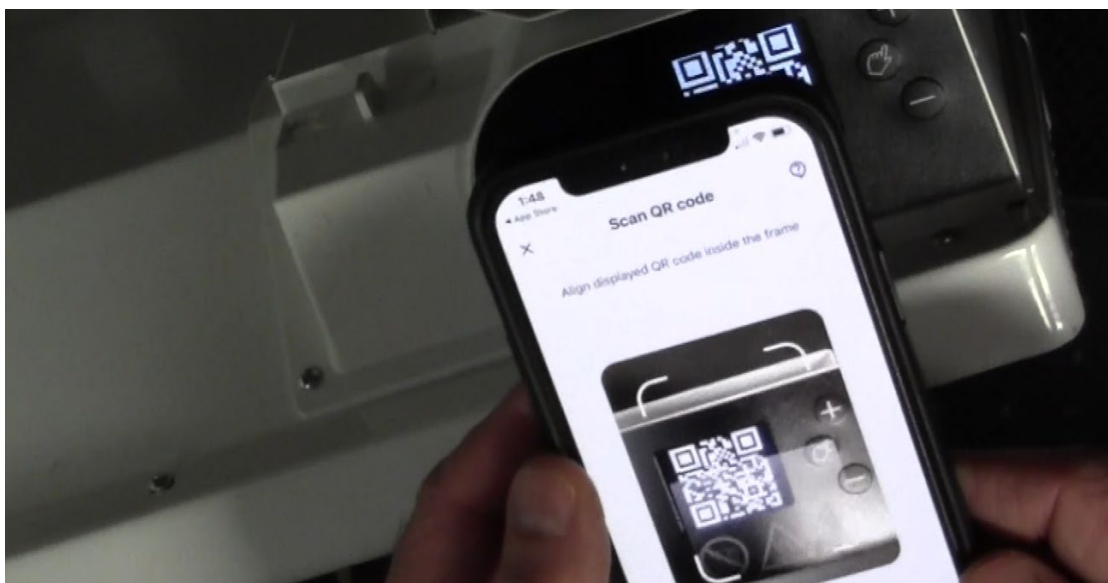


9.2 ADDING A PRODUCT

After scanning, you will be prompted with a Bluetooth pairing request

5) Press next when check Bluetooth status appears

× Check Bluetooth status

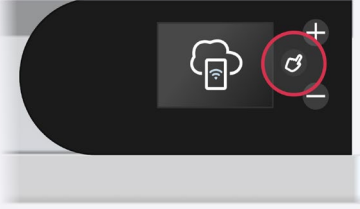


1. Wake the product out of display dimming mode by pressing any button.
2. Enter the menu by pressing the hand shaped button and hold it for 3 seconds (make sure the heater is out of display dimming mode).
3. Press the hand shaped button to enter the product into Bluetooth pairing mode.

The discovery mode will be active for 60 seconds.

Next

6) Input code in heater display and press pair – see image below

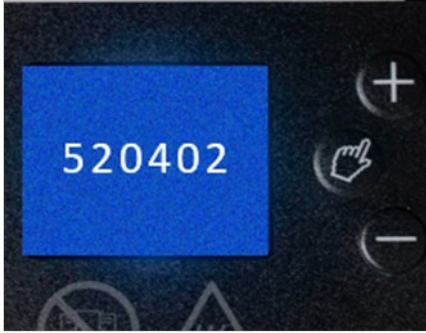

Bluetooth Pairing Request

"PH3182<Wi-FiPH>" would like to pair with your iPhone. Enter the code shown on "PH3182<Wi-FiPH>". Do not do anything on "PH3182<Wi-FiPH>" until pairing is complete.

520402


Cancel Pair




10. CONNECTING TO WIFI

After connecting your device via Bluetooth, you are now ready to connect to your WIFI network.


1) Select your WIFI network

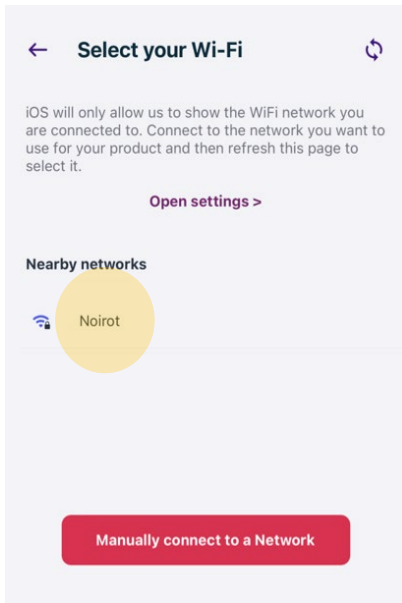

2) Enter your WIFI network password

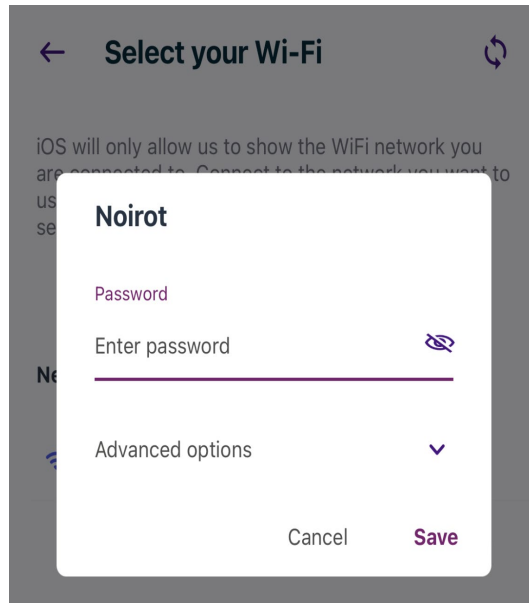

Successful connection

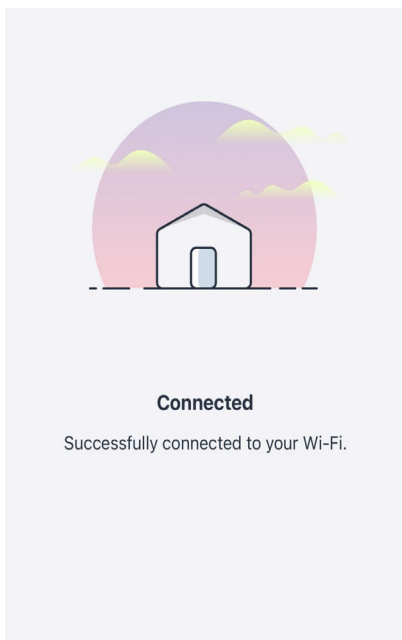


NOTE: Connection may take some time.

If heater does not connect, try re-entering the password


10.1 CONNECTING TO WIFI

The final step will be to name your heater and assign your it to a zone.


3) Create a name for your heater and press save (example: Heater1)

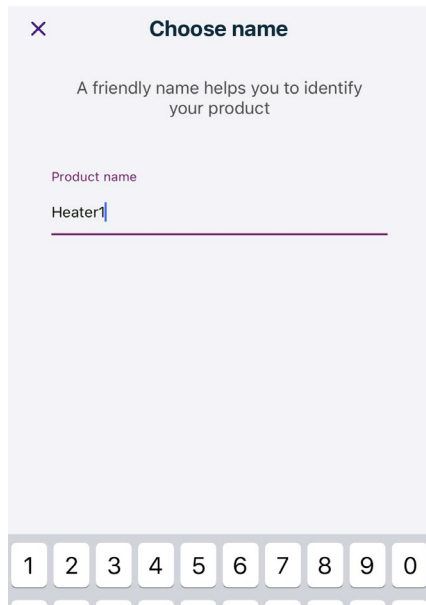

4) Select the zone where you want to add the heater and press select zone

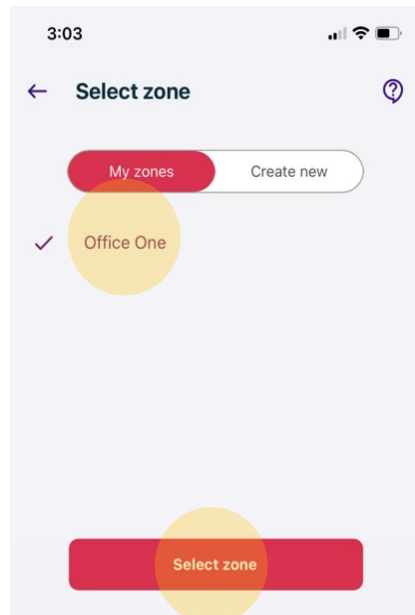


When the process has been completed a message will show the product has been successfully added.

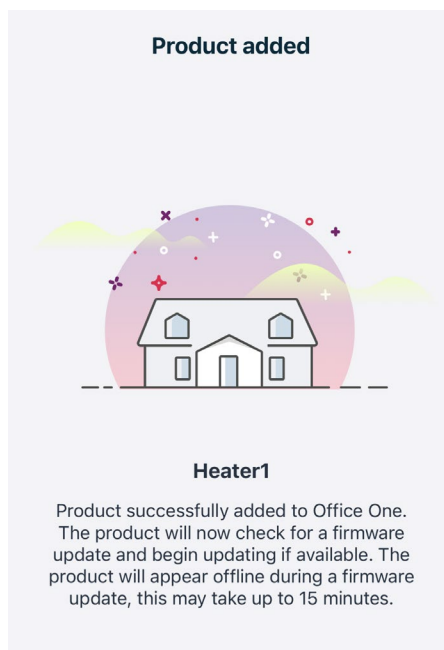

11. CREATING A PROGRAM SCHEDULE


The Capa Connect App gives you the ability to set up daily and weekly program schedules

1) Press the Schedules button at the bottom in the menu on your device to bring up the Schedules menu

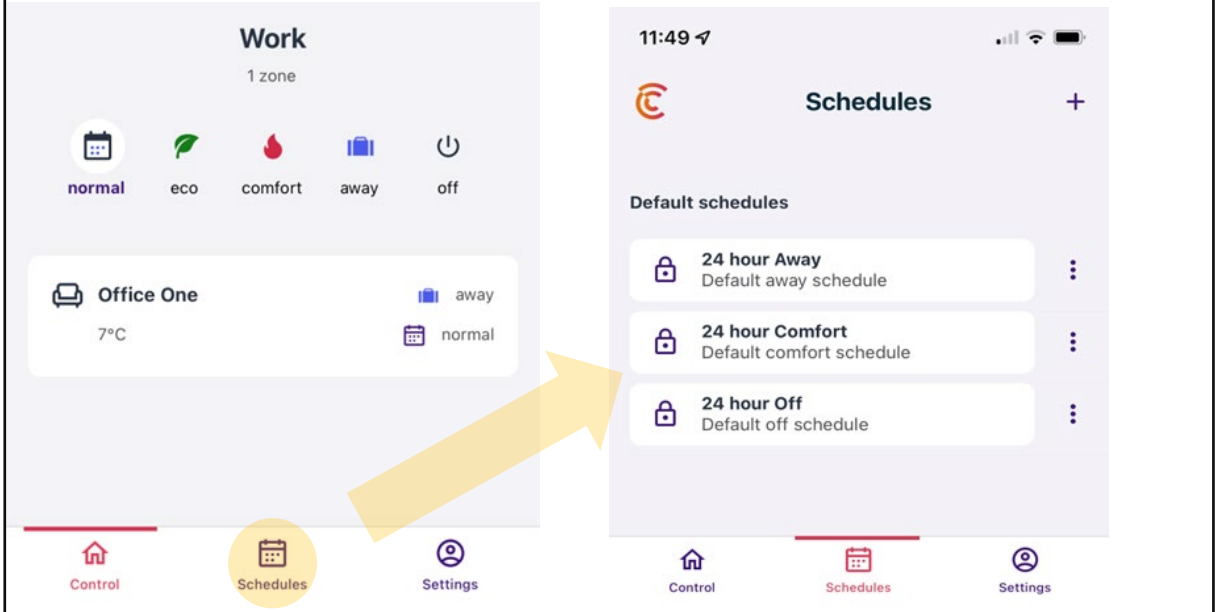


DEFAULT MENU OVERVIEW

NOTE: The screen will show three default schedules. If selected, they remain fixed into 24-hour increments and cannot be adjusted.

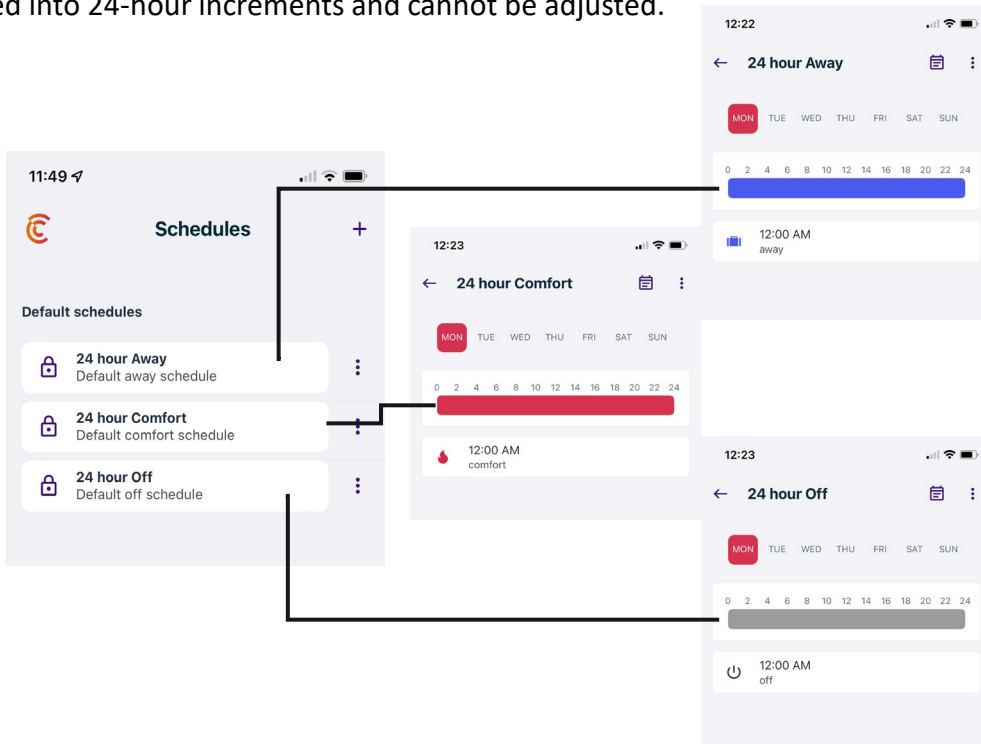


11.1 CREATING A PROGRAM SCHEDULE


1) Press + in the upper right corner to set up a personalised schedule

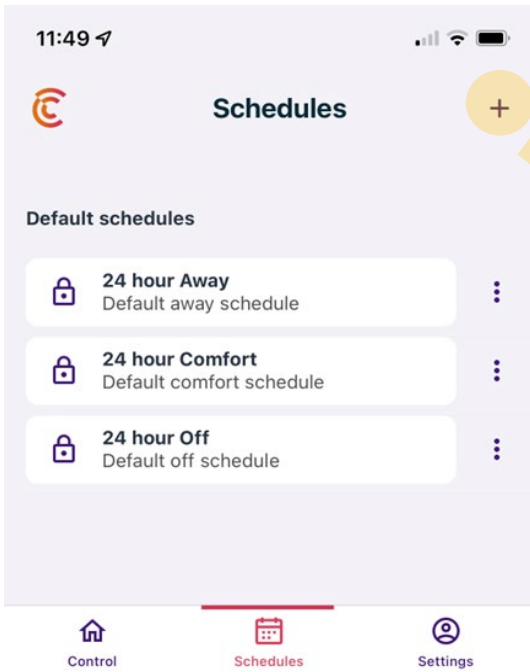

2) Select the site where the schedule will operate

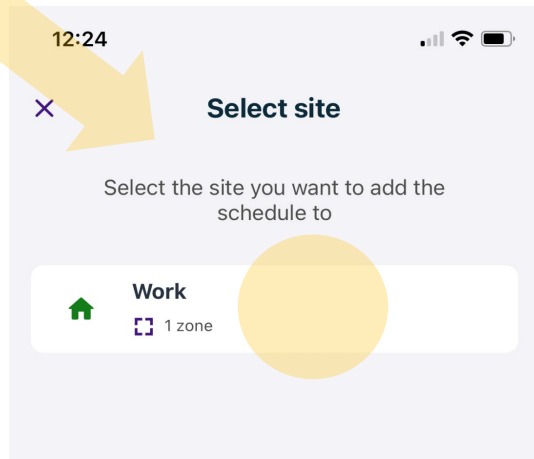


3) Enter a schedule name and description (example: Weekly, Monday to Friday)

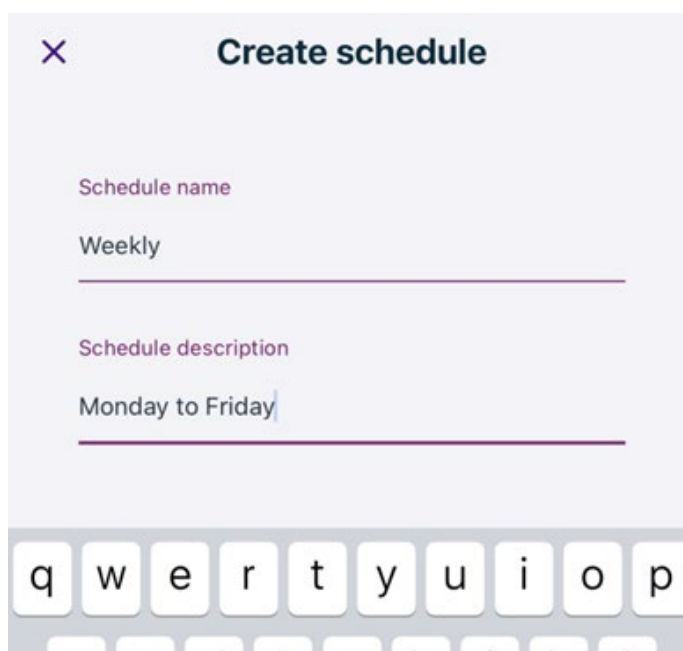


11.2 CREATING A PROGRAM SCHEDULE


4) Press the create schedule button on your device

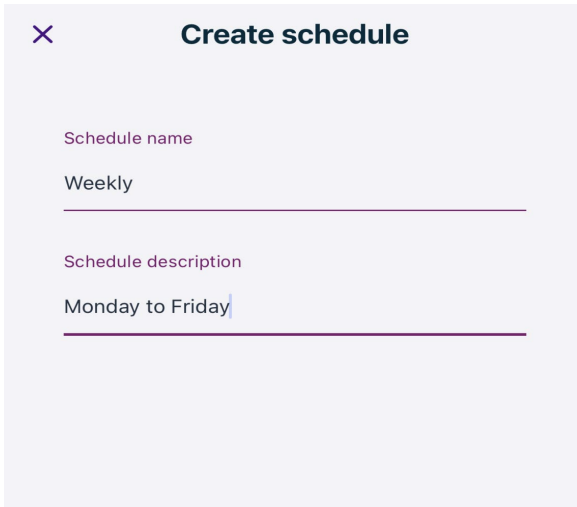

The screenshot shows a 'Create schedule' form with a close button (X) in the top left. The form has two input fields: 'Schedule name' with the text 'Weekly' and 'Schedule description' with the text 'Monday to Friday'. Both fields have a purple underline.

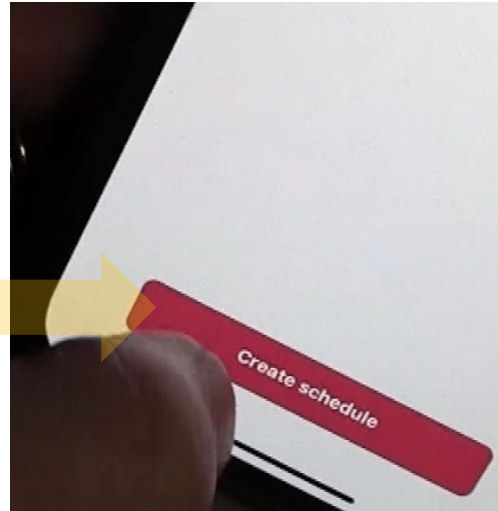


5) Press the skip button on your device

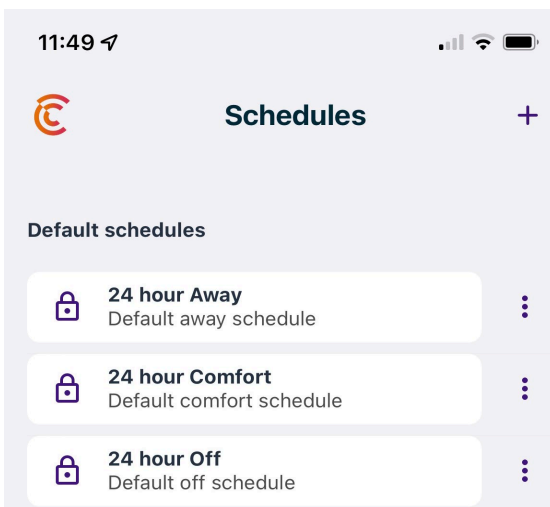


The screenshot shows the 'Schedules' screen in a mobile app. At the top, the time is 11:49 and there are icons for signal strength, Wi-Fi, and battery. Below the title 'Schedules' is a plus sign (+). Under the heading 'Default schedules', there are three items, each with a lock icon, a title, a subtitle, and a three-dot menu icon:

- 24 hour Away**
Default away schedule
- 24 hour Comfort**
Default comfort schedule
- 24 hour Off**
Default off schedule

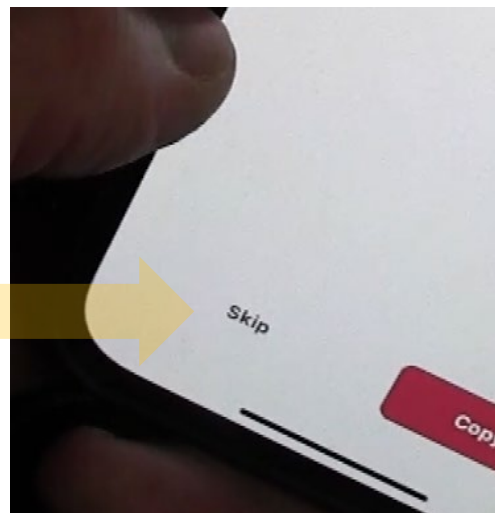


11.3 CREATING A PROGRAM SCHEDULE


5) Press Add time period

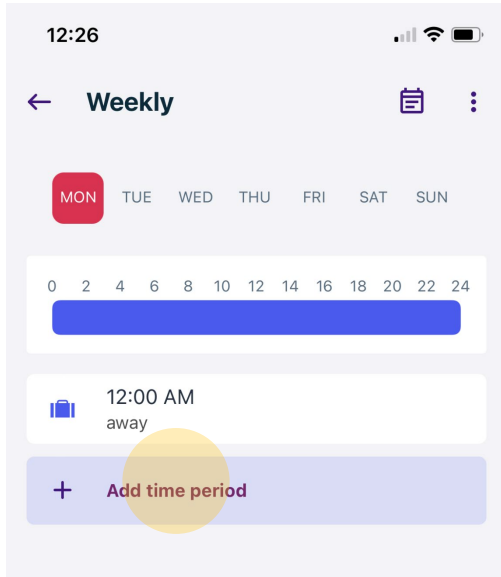


6) Enter start time and heating mode followed by confirm period

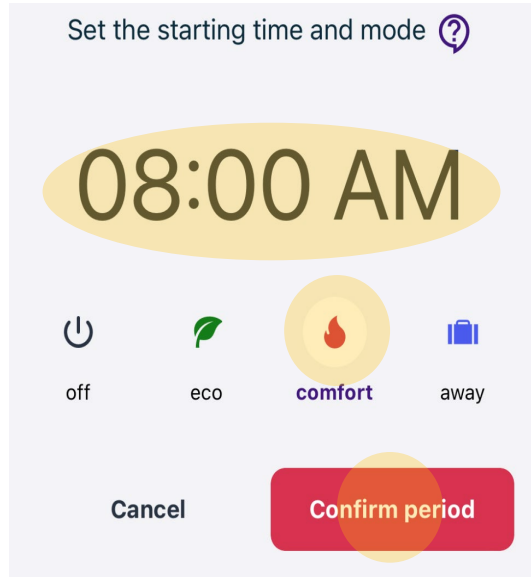

NOTE: Repeat procedure to add additional settings to the program

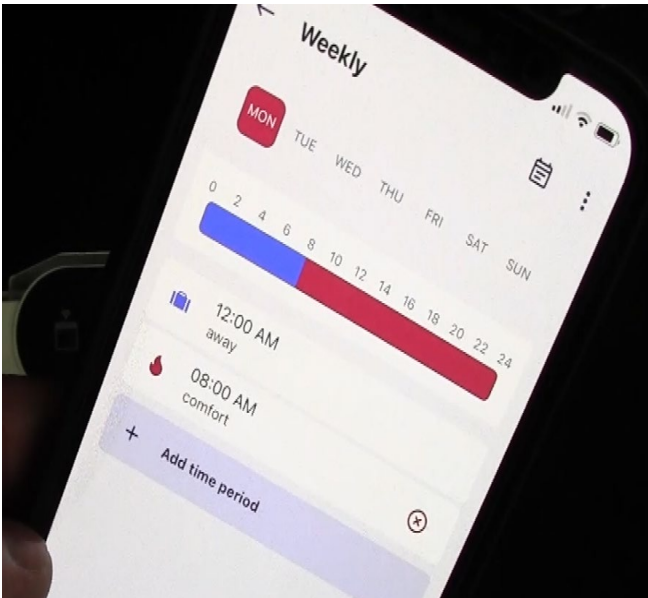


7) Press update to lock in the program

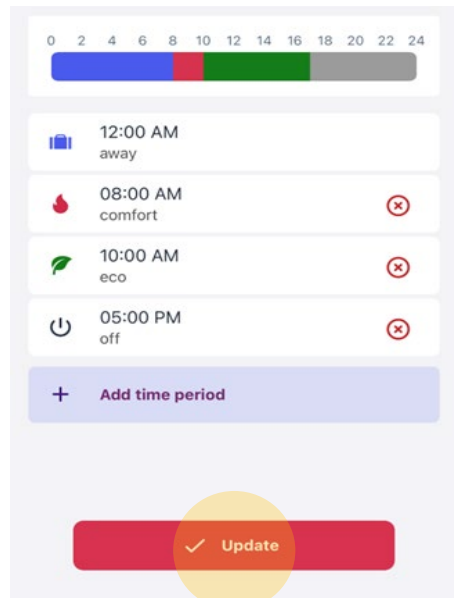


12. WEEKLY PROGRAM SCHEDULE SETUP

After a daily schedule has been created, it can be copied across to other days of the week


1) Press the 3 dots in the upper right corner

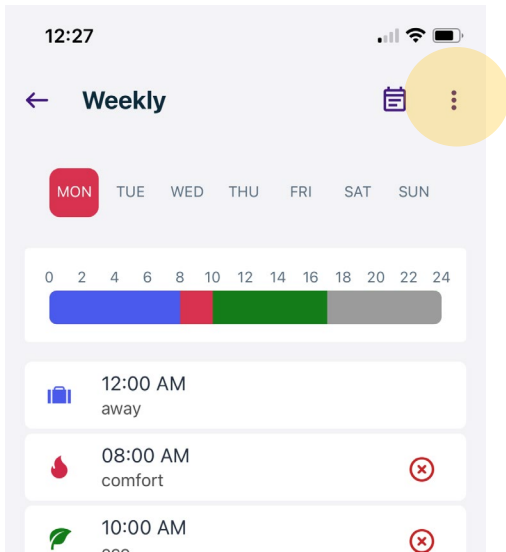


2) Press copy daily plan in the drop-down menu

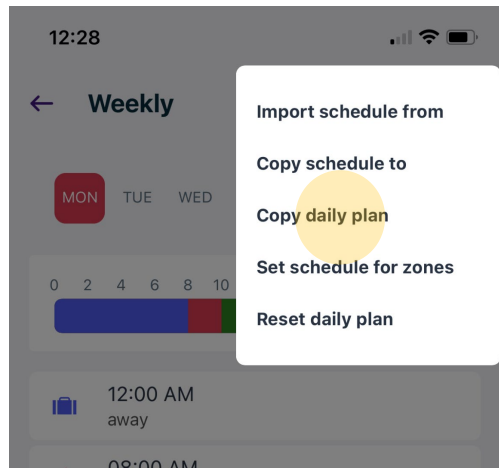

3) Select days of the week and press 'copy plan'


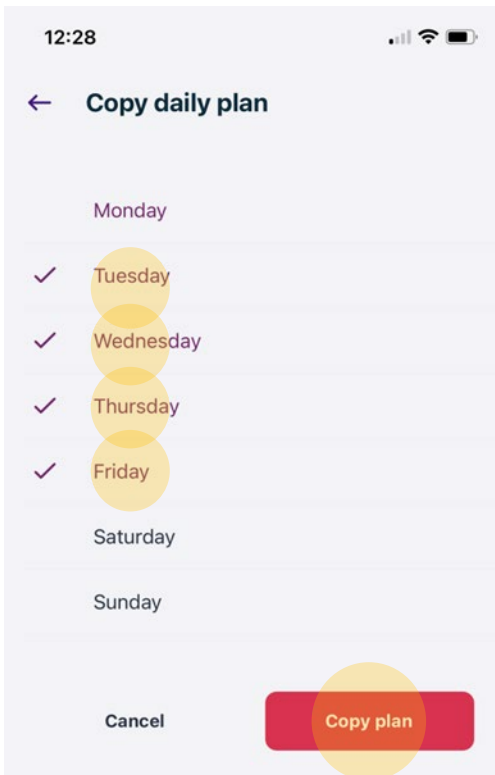


4) Press 'update' to save the weekly program

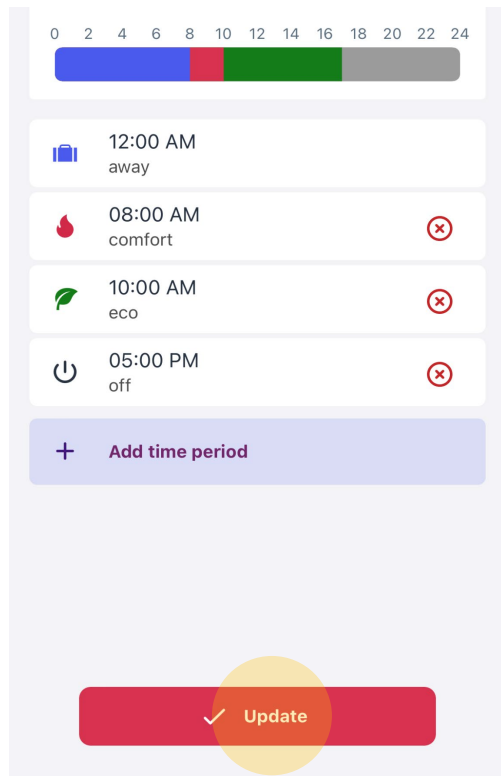


13. ADDITIONAL OPERATIONS

To view weekly schedule, press the calendar icon in the upper right corner and turn your device sideways.

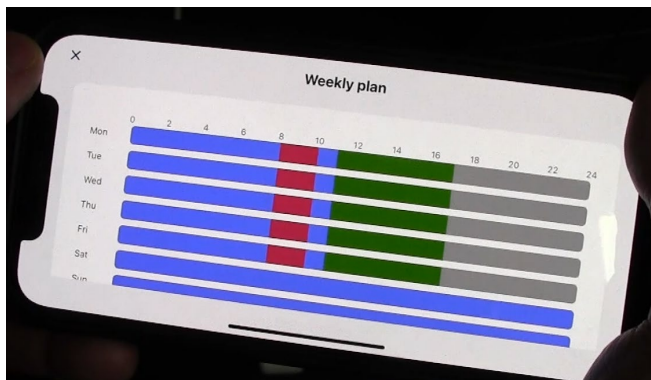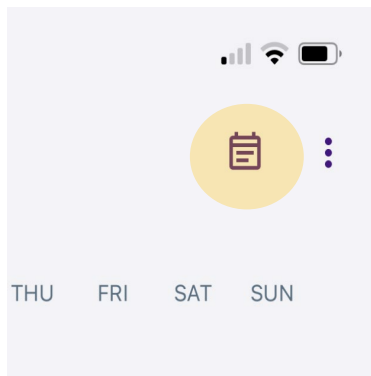



ACCESS SCHEDULE

Press calendar icon at the bottom of device

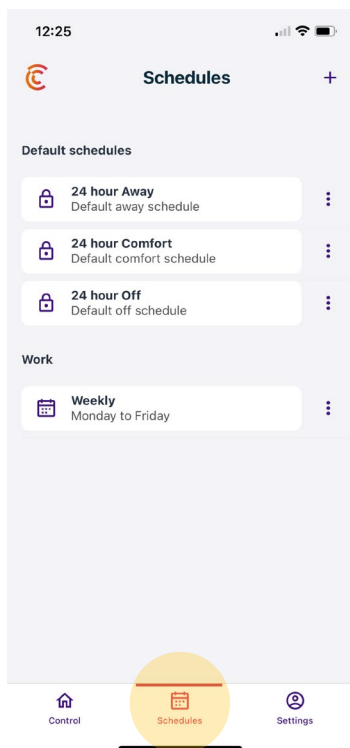


PROGRAM OVERRIDE

Press the house icon followed by one of the mode icons. Select the period you wish to override in the drop-down menu.

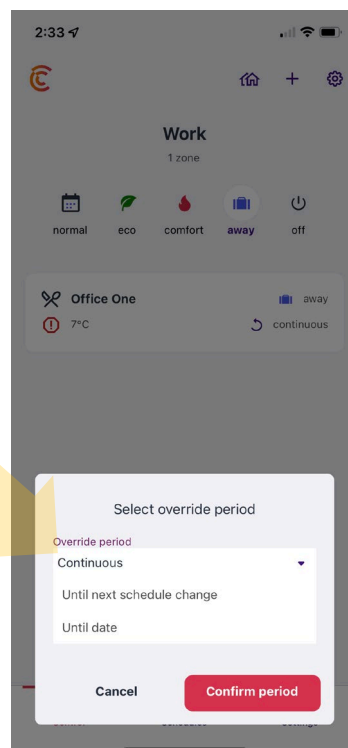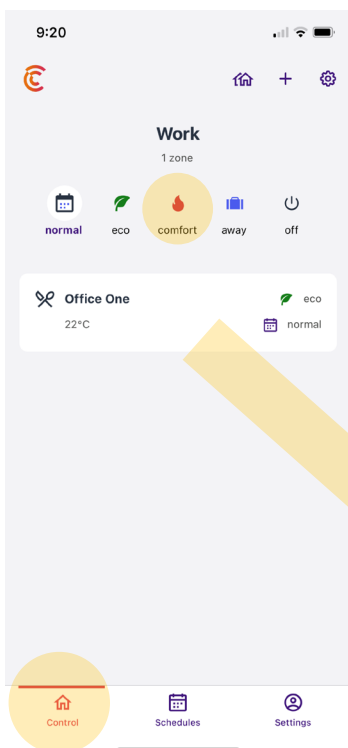

13.1 ADDITIONAL OPERATIONS

Pressing the zone button will highlight the heater's current mode. Change the temperature by pressing + or – in the white circle. Press the white circle to open a numeric keypad where the desired temperature can be input directly.

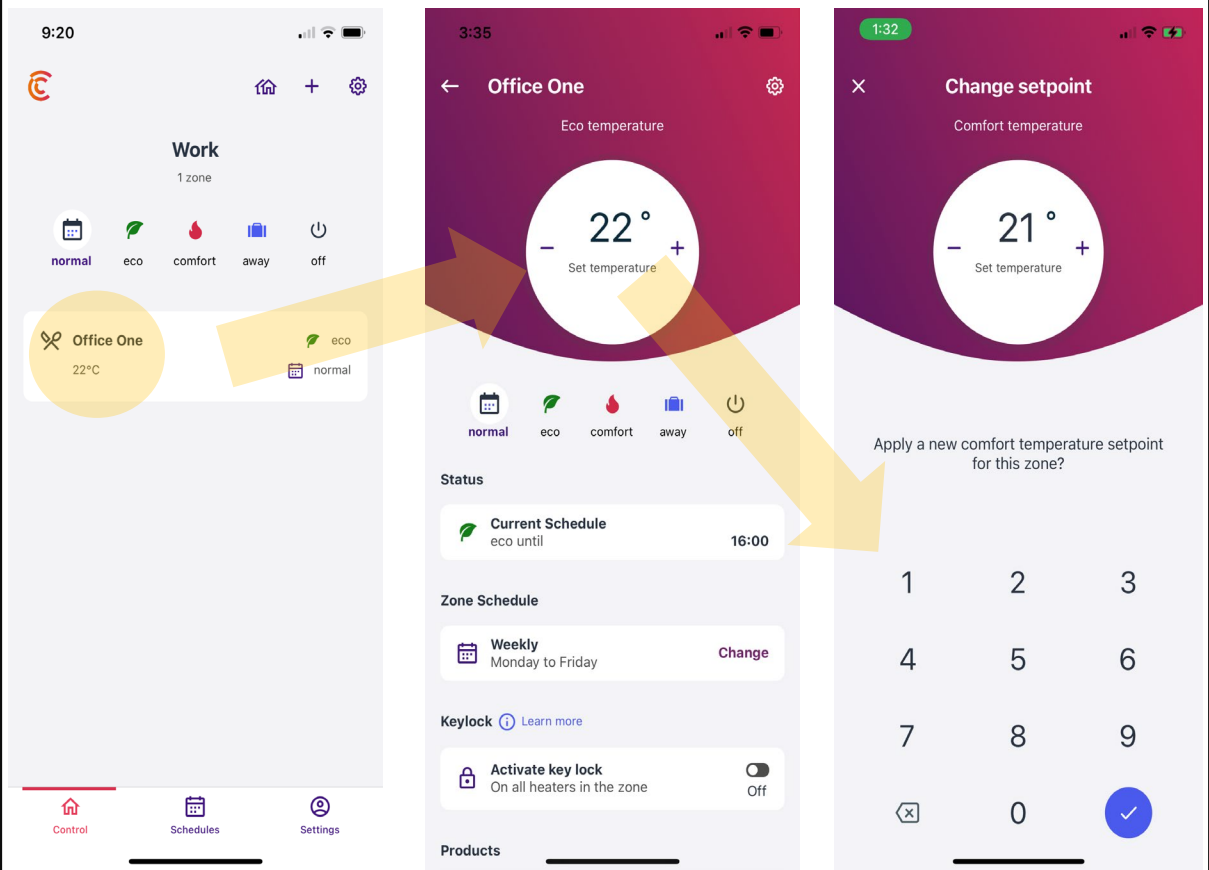

14. MAINTENANCE

Your Noirot Electric Panel Heater requires very little maintenance. To remove surface dust use a soft cloth; to remove marks use a damp cloth. Never use abrasives or metal scourers which could damage the polyester coating. It is recommended to periodically clean the front and under carriage air vents using the soft brush on your vacuum cleaner, as dense accumulation of dust will cause the heater to over-heat and trigger the safety thermal cut-out switch.

15. SPECIFICATIONS

Models	Power (W)	Current (A)	Height (mm)	Width (mm)	Depth (mm)
7358-3TPRO	1000	4.2	440	420	80
7358-5TPRO	1500	6.3	440	585	80
7358-7TPRO	2000	8.3	440	745	80
7358-8TPRO	2400	10.0	440	900	80

16. WARNING

Do not use this heater if it has been dropped.

Do not use if there are visible signs of damage to the heater.

Use this heater on a horizontal and stable surface on castors, or fix it to the wall, as applicable.

Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

To reduce the risk of fire, keep textiles, curtains, or any other flammable material to a minimum distance of 1m from the air outlet

During operation it is normal for the power plug to become warm, especially for the larger 2000 watt and 2400 watt models. If the power plug seems excessively hot to touch, ensure that the heater is being used in a room no larger than the recommended size or that the plug is not sitting loosely in the wall socket (older wall sockets can wear and become loose over time and cause extra heat to build up). If unsure, contact our office for advice.

17. WARRANTY REGISTRATION

IMPORTANT: To validate your product warranty, you are required to do the following:

1. Register your product online at olimpiasplendid.com.au, click on “Product Registration” and fill out the required fields.

2. You must also retain your receipt of purchase

WARRANTY CONDITIONS

Your Noirot Spot Plus electric panel heaters come with a **LIFETIME WARRANTY**, therefore any replacement of faulty parts or repairs of any kind must be carried out by a qualified person and authorised by Olimpia Splendid (AU/NZ) or their approved representative. Failure to do so will **VOID** the **WARRANTY**.

Olimpia Splendid (AU/NZ) reserve the right to reject any warranty claim deemed to be false. Retailers must have warranty claims authorised by a representative of Olimpia Splendid (AU/NZ).

If you believe your product to be faulty and under warranty you are required to do the following:

1. Return the product, at your expense, to the place of purchase for assessment by an authorised representative of Olimpia Splendid (AU/NZ).
2. This may require leaving the product at the place of purchase.
3. If the product is deemed faulty and under warranty, the place of purchase of the product will order a replacement heater to which Olimpia Splendid (AU/NZ), at our cost, will deliver the heater to the place of purchase.
4. The consumer will then be required, at their cost, to pick up the replacement heater from the place of purchase.
5. If the heater is faulty but not deemed to be under warranty, an explanation will be provided to the consumer and that the faulty heater can be picked up by the customer from the place of purchase.
6. Castors are a bonus item and have a 6-month warranty. Replacement castors can be purchased in-store or online.

Our goods come with guarantees that cannot be excluded under the AU/NZ Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

If you have any queries regarding your product or its warranty please contact:

Olimpia Splendid Australia Pty Ltd
80-84 Burlington St
Oakleigh Victoria 3166
Australia
P: 1 300 664 768
E: sales@olimpiasplendid.com.au

Olimpia Splendid New Zealand Pty Ltd
C / Key Service Ltd 34A Cryers Road.
East Tamaki, Auckland 2013
New Zealand
P: (09) 916-0960
E: sales@olimpiasplendid.co.nz