

REMINGTON®

BARBER'S BEST HAIR CLIPPER

**LITHIUM
POWERED *Li***



**USE & CARE
MANUAL**

**PLEASE READ
PRIOR TO USE**

To register your product go to
www.remington-products.com.au

5 YEAR WARRANTY

HC5870AU

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic precautions should always be observed, including the following.

For additional protection, the installation of a residual current device (rcd) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice

KEEP AWAY FROM WATER

**WARNING - TO REDUCE THE RISK OF BURNS,
ELECTROCUTION AND FIRE OR INJURY TO PERSONS**

DANGER - As with most electrical appliances, electrical parts are electrically live even when the switch is off.

- Do not place or store the appliance or charging adaptor where it can fall or be knocked into a sink or bath.
- Do not place in or drop into water or any other liquid.
- If an appliance falls into water, “unplug it” immediately. Do not reach into the water.
- Do not use while bathing or in the shower.
- Unplug and switch off this appliance before cleaning it.
- Use this appliance only for its intended use as described in this manual.
- Do not use attachments not recommended by Remington.
- Never drop or insert any object into any opening of this appliance.
- Keep the cord away from heated surfaces.
- Do not use this appliance with a damaged or broken trimming unit as injury may occur.
- Always store the charging adaptor in a moisture-free location.
- For household use only.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Keep the appliance and the power cord away from the edge of table or countertops and out of reach of children and persons with reduced physical, sensory or mental capabilities.
- This appliance is not a toy. Children shall be supervised to ensure they do not play with the appliance.
- Do not use on people who are asleep.
- Never operate this appliance if it has a damaged cord or plug, if it is not working correctly, if the charging adaptor has been damaged or dropped into water.
- Do not use an extension cord or a voltage converter with this appliance.
- Do not wrap the cord around the appliance.
- This appliance should be supplied with approved safety isolating adaptors PA-0510A (for Australia) with the output capacity of 5.0V dc; 1A (adaptor output).

WARNING - KEEP THE APPLIANCE DRY

Remington strongly recommends that an approved Safety Switch (Residual current device) be installed to protect all bathroom power outlets. Ask an electrical contractor for advice.

SAVE THESE INSTRUCTIONS

HC5870AU BARBER'S BEST HAIR CLIPPER

USE AND CARE MANUAL

Thank you for purchasing your Remington® Barber's Best Hair Clipper. Inside this manual you will find instructions on using and caring for your new hair clipper.



KEY PARTS

1. Removable Hair Clipper Blade
 2. Heavy-Duty Rubber Grip
 3. On/Off switch
 4. Charging Indicator Light
 5. Removable Head Trim-Shave blade
 6. Power port
- Also Includes**
- 3mm Comb
 - 6mm Comb
 - 9mm Comb
 - 12mm Comb
 - 16mm Comb
 - 18mm Comb
 - 22mm Comb
 - 25mm Comb
 - Left Ear Guide
 - Right Ear Guide
 - Barbers Scissors
 - Barbers Cape
 - Blade Guard
 - Storage Pouch
 - Lubricating Oil
 - Cleaning Brush
 - Power Adaptor

ABOUT YOUR HAIR CLIPPER

HC5870AU SPECIFICATIONS

Power System	Cordless (Rechargeable)
Initial Charge Time	24 Hours
Full Charge Time	4 Hours
Runtime	60 Minutes
Indicators	LED Charging Indicator
Voltage Type (adaptor voltage type)	Worldwide 100-240V

CHARGING

- Before using your hair clipper for the first time, charge it for 24 hours. Note during this charge ignore the electronic indicators as they are in "start-up cycle".
- Plug the adaptor into your hair clipper and then plug the charging adaptor unit into a 100-240 volt domestic power outlet. Check to ensure that the hair clipper On/Off switch is OFF. The Charging Indicator Light will glow to indicate that it is charging and turn off once fully charged.
- The batteries cannot be overcharged, but it is recommend that charging be discontinued and the hair clipper stored away if it will not be used for an extended period of time (2-3 months).
- The hair clipper will be fully charged in 4 hours.
- To preserve the life of the batteries, discharge them by running the hair clipper until the blades move slowly. Switch off and recharge for 24 hours. Do this every 6 months.
- Use the hair clipper only with the charging adaptor supplied.

NOTE: Your hair clipper is designed for cordless use only, it will not turn on when plugged into the mains power outlet.

CLEANING AND MAINTENANCE

AFTER EACH USE: Brush the accumulated hair from the cutters.

DO NOT SUBMERGE THE HAIR CLIPPER IN WATER.

- Hold the clipper so that you are looking at its back (rubber housing), locate the blade release tab indentation at the base of the blade and push it inwards (towards the cutting blades) with your thumb. The blades will pop out allowing them to be easily cleaned under the tap with running warm water. When rinsing the blades it is necessary to lubricate them once dry with 1-3 drops spread over the blades with your finger with a light grade oil such as the one supplied. Wipe off excess oil.
- Once the blades are cleaned, lock them back into place by aligning them with the clipper cavity and pushing the blade set towards the clipper body. You will hear a “click” when blades are locked into place.

NOTE: Ensure that the hair clipper is turned off and unplugged from the power outlet when cleaning.

CLEANING CAUTIONS: Do not use liquid cleaners on the cutters or harsh or corrosive chemicals on the cutter casing.

STORAGE: Always store this appliance and cord in a moisture-free area. Do not wrap the cord around the appliance. Do not store in temperatures above 60°C.

GETTING STARTED

- Make sure your clipper is operating correctly. Inspect the hair clipper making sure that it is free from hair and dirt.
- Place a cape around the neck of the person whose hair is being trimmed or cut.
- Seat the person so that their head is approximately at your eye level.
- Before cutting, always comb the hair so it is tangle free and dry.
- Hold the hair clipper in the palm of one hand and with your thumb resting firmly on the top of the hair clipper. This grip provides comfortable cutting control.

ATTACHING / REMOVING AND REPLACING THE BLADES

- To remove, press the release button located on the blade and pull upwards and away from the hair clipper.
- To attach, snap the desired blade in place until it clicks.

TIPS FOR A BARBER'S BEST HAIR CUT

TIPS FOR BEST RESULTS

- For even cutting, allow the guide comb/blade to cut its way through the hair. Do not force it through quickly. If you are cutting for the first time, start with the maximum guide comb, until you know how short you would like your hair to be.
- The comb guide lengths described for use in the steps below are an example only, if you want a longer or shorter hair cut you will need to adjust the comb guide lengths to suit your requirements.

STEP 1 - NAPE OF THE NECK

1. Use 3mm or 6mm guide comb.
2. Hold the hair clipper with the blade teeth pointing upwards. Begin starting at the centre of the head at the base of the neck.
3. Slowly lift the hair clipper, working upwards and outwards through the hair, trimming just a little at a time.

STEP 2 - BACK AND SIDE OF THE HEAD

1. With the 9mm or 12mm guide comb, cut the hair at the back of the head.

STEP 3 - SIDE OF THE HEAD

2. With the 9mm or 12mm guide comb, trim sideburns.
3. Then change to the longer 22mm guide comb and continue to cut to the top of the head.

STEP 4 - TOP OF THE HEAD

1. Using the 25mm guide comb, cut the hair on top of the head against the direction in which the hair normally grows.
2. For longer hair on top, use scissors. Lift the hair on top of the head with your fingers. Cut the hair between your fingers to the desired length.
3. Always work from the back of the head.

STEP 5 - THE FINISHING TOUCHES

1. Use the hair clipper without an attachment comb for close trimming around the base and sides of the neck.
2. To produce a clean straight line at the sideburns, reverse the clipper. Place the reversed hair clipper at right angles to the head, tips of the blades lightly touching the skin and then work downwards.

FOR A CLOSE SHAVE LOOK ON THE HEAD

NOTE: The Head Trim-Shave blade only works on shorter length hair.

1. First, use the hair clipper blade without a comb attached to it and trim your hair making sure all hair is trimmed back.
2. Remove the hair clipper blade and then replace with the Head Trim-Shave blade.

3. Again, work the Head Trim-Shave blade all over the head, with angled and even strokes against the direction of hair growth.
4. As this blade captures the shortest of hairs, you may be required to tap the tip of the blade throughout the shaving process to remove the small hairs that are captured in the blade.
5. The Head Trim-Shave blade may be used directly if you are maintaining the shaved look, it is not necessary to use the hair clipper blade unless your hair is long,

NOTE: failure to first trim back long hair with the hair clipper blade may result in a pulling sensation or missed hairs resulting in an undesirable result. Always use the Head Trim-Shave blade with very short hair. The guard on the Head Trim-Shave blade cutters is designed to gently stretch the skin while it is in use. The guard is not removable. Should the guard become clogged with hairs during use simply tap it out or rinse it under running water

BATTERY REMOVAL

- The battery must be removed from the appliance before it is scrapped.
- The appliance must be disconnected from the supply mains when removing the battery.
- Ensure the hair clipper is discharged of all power.
- Firstly, pry the detail blade head housing using a single-side screwdriver.
- Using a small screwdriver, unscrew 2 screws on the back housing of the hair clipper.
- Continuously pry the front housing using the single-side screwdriver.
- Pry the PCB holder assembly again using the single-side screwdriver from the back housing so you can see the PCB and batteries exposed.
- Destroy the PCB holder using a wire cutter, cut the tabs on both ends of the battery assembly and remove the PCB.
- Dispose of the batteries safely



This product is not suitable to use in a bath or shower

This product conforms to radio frequency interference requirements.
Any product purchased and used commercially carries a limited 90 Day Warranty.

Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Limited
WARRANTY AGAINST DEFECTS

In this warranty:

Australian Consumer Law means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

CGA means the New Zealand Consumer Guarantees Act 1993;

Goods means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

Manufacturer, We or us means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ACN, 007 070 573; or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Limited, as the case may be, contact details as set out at the end of this warranty;

Supplier means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

You means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for the period of five (5) years from the date of purchase (**Warranty Period**). If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Exhaustible components (such as shaver heads, cutters and foils) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.

8. In order to claim under the warranty granted under clause 3 you must:
 - (a) Retain this warranty with your receipt/proof of purchase; and
 - (b) Return the Goods to us at the relevant address below or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
9. This warranty is immediately void if:
 - (a) Any serial number or appliance plate is removed or defaced;
 - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Limited.

Contact us or the Supplier for further details.

Spectrum Brands Australia Pty Ltd

Locked Bag 3004

Braeside, VIC 3195 AUSTRALIA

Customer service in Australia: 1800 623 118

E-mail: consumer.enquiry@remington-products.com.au

Website: www.remington-products.com.au

Spectrum Brands New Zealand Limited

PO Box 9817

Newmarket, Auckland 1149 NEW ZEALAND

Customer service in New Zealand: 0800 736 776

E-mail: info@remington.co.nz

Website: www.remington.co.nz

REMINGTON®

REMINGTON SERVICE HOTLINE

📞 Australia 1800 623 118 (toll free)

📞 New Zealand 0800 736 776 (toll free)

AUTHORISED REPAIR CENTRES

Visit www.remington-products.com.au for Authorised repair centre details.

® Registered Trade Mark of Spectrum Brands Inc. or one of its subsidiaries

Made in China to the specifications of Spectrum Brands, Inc.

© 2015 Spectrum Brands Inc.

Rev. 06/15

Part No. T22-0003429

