



# SAMSUNG

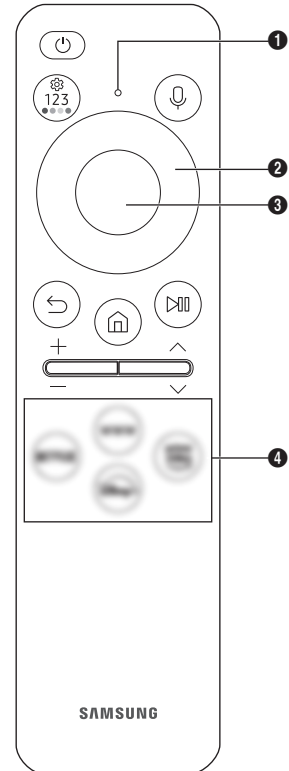

BN68-15758A-01

## About the Samsung SolarCell Remote (Samsung Smart Remote)

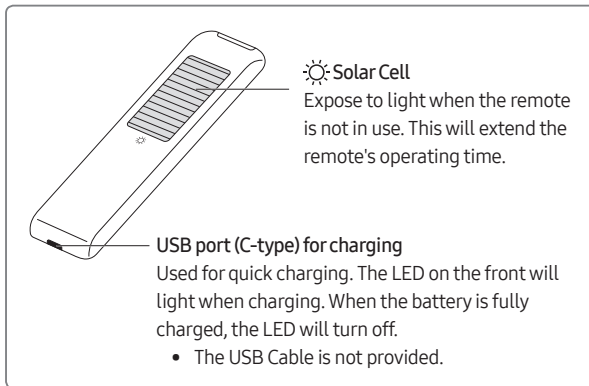

**Fire or explosion may occur, resulting in damage to the remote control or personal injury.**

- Do not apply shock to the remote control.
- Be careful not to let foreign substances such as metal, liquid, or dust come in contact with the charging terminal of the remote control.
- When the remote control is damaged or you smell smoke or burning fumes, immediately stop operation and then repair it at the Samsung service centre.
- Do not arbitrarily disassemble the remote control.
- Be careful not to let infants or pets suck or bite the remote control. Fire or explosion may occur, resulting in damage to the remote control or personal injury.

| Button  | Description  |
|---|--|
|  (Power)   | Press to turn the TV on or off.<br>For The Frame model, When watching TV, press to switch to <b>Art</b> mode. In <b>Art</b> mode, press to switch to the <b>Media Home</b> . Press and hold to turn off the TV completely.   |
| <b>1</b> MIC / LED  | Used as MIC when using voice recognition with the remote control. <ul style="list-style-type: none"> <li>Do not impact the MIC hole or use a sharp object to poke into the hole.</li> </ul>  |
|  (Voice Assistant)   | Runs Voice Assistant. Press and hold the button, say a command, and then release the button to run Voice Assistant. <ul style="list-style-type: none"> <li>The supported Voice Assistant's languages and features may differ by geographical area.</li> </ul>  |
|  (Settings / Number / Colour button)   | Each time you press this button, Settings menu / virtual numeric pad / Option pad with Colour buttons are displayed alternately. <ul style="list-style-type: none"> <li>Use this button to access additional options that are specific to the feature in use.</li> <li>Press to bring up the virtual numeric pad on the screen. Use the numeric keypad to enter numeric values. Select numbers and then select <b>Done</b> or <b>Enter Number</b> to enter a numeric value. Use to change the channel, enter a PIN, ZIP code and etc.</li> </ul> |
| <b>2</b> Directional button (up, down, left, right)   | Moves the focus and changes the values seen on the TV's menu.  |
| <b>3</b> Select   | Selects or runs a focused item. When pressed while you are watching a broadcast programme, detailed programme information appears.   |
|  (Return)  | Press to return to the previous menu. When pressed for 1 second or more, the running function is terminated. When pressed while you are watching a programme, the previous channel appears.  |
|  (Smart Hub)   | Press to switch to the Home Screen.  |
|  (Play/pause)  | When pressed, the playback controls appear. Using these controls, you can control the media content that is playing.<br>To use Game Bar, press and hold the button in <b>Game Mode</b> . <ul style="list-style-type: none"> <li>Game Bar may not be supported depending on the model or geographical area.</li> </ul>  |
| + / - (Volume)  | Move the button up or down to adjust the volume. To mute the sound, press the button. When pressed for 2 seconds or more, the <b>Accessibility Shortcuts</b> appears.  |
| ^ / v (Channel)   | Move the button up or down to change the channel. To see the <b>Guide</b> or <b>Channel List</b> screen, press the button. (The <b>Guide</b> or <b>Channel List</b> screen appears depending on the geographical area.) <ul style="list-style-type: none"> <li>When pressed for 1 second or more, the <b>Channel List</b> screen appears.</li> </ul>   |
| <b>4</b> Launch app button  | Press each button to run its function. (These buttons may vary depending on the geographical area.) <ul style="list-style-type: none"> <li>Available apps may differ depending on the geographical area or contents provider.</li> </ul>   |
|  +  (Pairing) | If the Samsung Smart Remote does not pair to the TV automatically, point it at the front of the TV, and then press and hold the  and  buttons simultaneously for 3 seconds or more.  |

- Use the Samsung Smart Remote less than 6 m from the TV. The usable distance may vary with the wireless environmental conditions.
- The images, buttons, and functions of the Samsung Smart Remote may differ with the model or geographical area.
- The Universal Remote function operates normally only when you use the Samsung Smart Remote that comes with the TV.
- It is recommended to use an original Samsung charger. Otherwise, it may cause performance degradation or failure of the product. In this case, the warranty service is not applicable.
- When the remote control does not work due to low battery, charge it by using the USB-C type port.