

Sunbeam



FlexiFry Air Fryer Oven



Please scan this QR code to access more details and cooking tips using this product.


Model number: AFP5100BL

P.N: NWL0001547921

Sunbeam's Safety Precautions

Sunbeam is very safety conscious when designing and manufacturing consumer products, but it is essential that the product user also exercise care when using an electrical appliance. Listed below are precautions which are essential for the safe use of an electrical appliance:

- Read carefully and save all the instructions provided with the appliance.
- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug - do not pull on the cord.
- Turn the power off and remove the plug when the appliance is not in use and before cleaning.
- Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- Always use your appliance from a power outlet of the voltage (A.C. only) marked on the appliance.
- Children should be supervised to ensure that they do not play with the appliance.
- Use well away from walls and curtains.
- Do not block or cover the air vents on the top (back/sides) of the oven.
- Do not use in confined spaces.
- Never leave an appliance unattended while in use.
- Do not use an appliance for any purpose other than its intended use.
- Do not place an appliance on or near a hot gas flame, electric element or on a heated oven.
- Do not place on top of any other appliance.
- Do not let the power cord of an appliance hang over the edge of a table or bench top or touch any hot surface.
- Do not operate any electrical appliance with a damaged cord or after the appliance has been damaged in any manner. If damage is suspected, return the appliance to the nearest Sunbeam Appointed Service Centre for examination, repair or adjustment.
- For additional protection, Sunbeam recommend the use of a residual current device (RCD) with a tripping current not exceeding 30mA in the electrical circuit supplying power to your appliances.
- Do not immerse the appliance in water or any other liquid unless recommended.
- Appliances are not intended to be operated by means of an external timer or separate remote control system.
- This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.
- Refer to "Care and Cleaning" section for details concerning precautions during use maintenance.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years old.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

 
 


**Hot Surface
Do Not Touch**

This symbol indicates, temperature of accessible surfaces may be high when the appliance is operating and for some time after use.


If you have any concerns regarding the performance and use of your appliance, please visit www.sunbeam.com.au or contact the Sunbeam Consumer Service Line. Ensure the above safety precautions are understood.

Features of your Sunbeam FlexiFry Air Fryer Oven

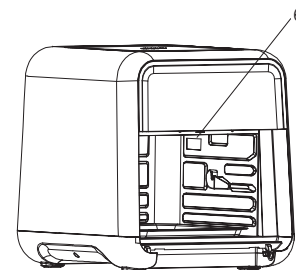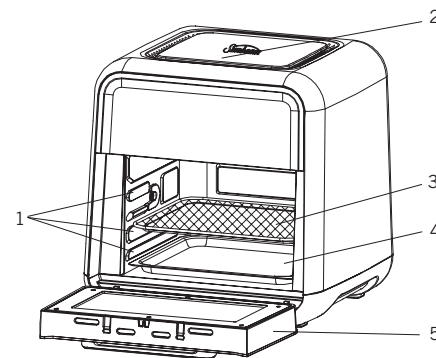

- | | |
|---------------------------------|-------------------|
| 1. Three Air Fry Rack Positions | 5. Removable Door |
| 2. Air Flow Vent | 6. Light |
| 3. Air Fry Rack | |
| 4. Removable Drip Tray | |

 Control Panel

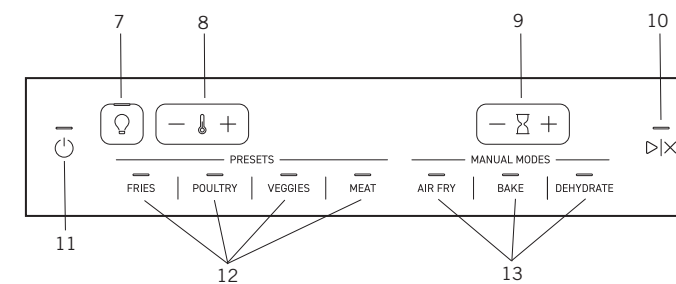

- | | |
|------------------------|--|
| 7. Oven Light | 12. Presets: Fries, Poultry, Vegetables and Meat |
| 8. Temperature Setting | 13. Manual Modes: Air Fry, Bake and Dehydrate |
| 9. Timer Setting | |
| 10. Start/Stop | |
| 11. Power | |

Parts & Accessories

Air Fry Racks (3)

- Ideal for cooking a variety of foods, such as chicken breast, fish or steak.
- Best accessory to use for dehydrating.
- If using one Air Fry Rack place it on the top slot for more crisp results.
- If using more than one Air Fry Rack switch the position of the racks throughout the cooking cycle for a more even crisp.
- When using the Air Fry Racks with high sugar content food, you may find that lining each rack with a sheet of baking paper helpful.
- Do not place Air Fry Rack in between top and middle rack position. This is not a usable rack position.

Usage Instructions

Preparing Your Air Fryer Oven

1. Remove all packaging materials, stickers and labels in and on the unit.
2. Wash all accessories and wipe the inside of the unit with a damp cloth.
3. Place unit on a flat surface.
4. Plug the air fryer oven into an electrical outlet.
5. Press and hold the Power button until the unit turns on.

Manual Mode

1. Choose the desired manual mode – Air Fry, Bake or Dehydrate.
2. To set temperature and time use the plus and minus signs next to the temperature (Ⓐ) and time (Ⓑ) symbol then press Start/Stop for the air fryer oven to preheat.
3. Once preheat is complete an audible alert will sound and (Ⓒ) will appear on the display. Open the oven door and place food inside then close the door.

Note: The timer will start to count down when oven has reached set temperature and audible alert sounds.
4. Audible alert will sound once timer is done. Carefully remove the food with a heat safe cooking utensil.

Note: To pause cooking cycle open the door. To stop cooking cycle press Start/Stop.

Preset Mode

1. Choose the desired Preset – Fries, Poultry, Veggies or Steak. Temperature and time will automatically appear.
2. Press Start/Stop for Air Fryer Oven to preheat.
3. Once preheat is complete an audible alert will sound and (Ⓒ) will appear on the display. Open the oven door and place food inside then close the door.

Note: The timer will start to count down when oven has reached set temperature and audible alert sounds.
4. Audible alert will sound once timer is done. Carefully remove the food with a heat safe cooking utensil.

Note: To pause cooking cycle open the door. To stop cooking cycle press Start/Stop.

Presets

Fries
Best for frozen French fries. If using fresh, hand cut potatoes, see cooking chart (pg. 6).

Poultry
Best for natural/raw chicken wings or drumsticks.

Veggies
Best for thicker veggies, such as broccoli, carrots, cauliflower, green beans and asparagus, rather than leafy vegetables like spinach, kale and collard greens.

Meat
This preset cooks meat such as steak to medium - light pink middle. Best for steaks 2cm thick.

Air Fryer Oven Cooking Chart

Food	Weight	Function	Accessory	Time	Temperature	Oil
Potatoes						
Hand-Cut Fries	500 - 700g	Fries	Air Fry Racks	35-40 mins	200°C	1 tbsp
Hand-Cut Sweet Potato Fries	500 - 600g	Fries	Air Fry Racks	30-35 mins	200°C	1 tbsp
Frozen Fries, (Thick Cut)	500 - 700g	Fries	Air Fry Racks	25-30 mins	200°C	No
Frozen Fries, (Thin Cut)	500 - 700g	Fries	Air Fry Racks	20 -25 mins	200°C	No
Frozen Hash Browns	600g	Fries	Air Fry Racks	18-20 mins	200°C	No
Meat/Poultry/Fish						
Chicken Wings	1kg	Poultry	Air Fry Racks	35 mins	180°C	No
Steak	250g (1)	Meat	Air Fry Racks	10 -15 mins	200°C	No
Pork Chops	600g (3)	Meat	Air Fry Racks	15-20 mins	180°C	1 tbsp
Beef Burgers	340g (2)	Meat	Air Fry Racks	16-18 mins	180°C	No
Breaded Chicken Breast	340g (2)	Air Fry	Air Fry Racks	30 - 35 mins	200°C	No
Breaded Fish	350g (2)	Bake	Air Fry Racks	20 - 25 mins	180°C	No
Bacon	225g	Air Fry	Air Fry Racks	10 - 12 mins	200°C	No
Frozen Chicken Nuggets	400g	Air Fry	Air Fry Racks	12-15 mins	180°C	No
Vegetables						
Frozen Onion Rings	400g	Air Fry	Air Fry racks	12-15 mins	200°C	No
Fresh Roasting Vegetables	400g	Veggies	Air Fry Racks	15-20 mins	180°C	No
Dehydrate						
Apples	150g	Dehydrate	Air Fry Racks	4 - 5 hours	50°C	No
Strawberries	350g	Dehydrate	Air Fry Racks	5 hours	50°C	No
Beetroots	200g	Dehydrate	Air Fry Racks	8 - 12 hours	65°C	1 tbsp
Beef Jerky	350g	Dehydrate	Air Fry Racks	4 hours	80°C	No

 
Care And Cleaning

Always unplug your Air Fryer Oven and allow it to cool completely before cleaning it. NEVER immerse the MAIN body, power cord or plug in water or any other liquid. To prevent damage to the appliance do not use alkaline cleaning agents when cleaning, use a soft cloth and a mild detergent.

1. Clean the Air Fryer Oven after each use.
2. Before cleaning your Air Fryer Oven, unplug it and allow it to cool.
3. To clean interior, wipe with a damp cloth using only mild, soapy water. DO NOT IMMERSER IN WATER. Abrasive cleaners, scrubbing brushes and chemical cleaners will damage the unit.
4. Empty Drip Tray frequently to avoid accumulation of crumbs.
5. Air Fry Racks are dishwasher safe.
6. The door is removable for easy cleaning.


To Remove Door:

- Open the door then push the tabs at the inner bottom of the door to release.

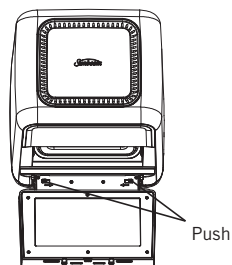

To Reassemble Door:

 - Keep door at an angle while aligning the bottom of door to the unit then push the door in for it to lock in place.

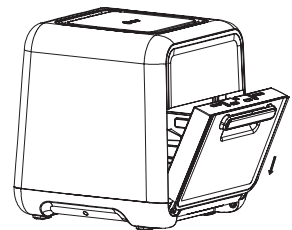

7. Store the Air Fryer Oven in a dry location such as on a table or countertop or cabinet shelf.

This appliance has no user serviceable parts. Any servicing beyond that described in the Cleaning Section should be performed by an Authorised Service Representative only. See Warranty Section.

Troubleshooting

Problem	Potential Cause	Solution
Overcooked / Undercooked Foods	• Incorrect temperature or time setting	• You may have to adjust the time and temperature to desired taste. • Because your Air Fryer Oven is smaller than your regular oven, it will heat up faster and generally cook in shorter periods of time.
	• Rack placement	• Refer to "Positioning Air Fry Racks" Section, Page 5. Rack may need to be adjusted to accommodate food type.
Burning Smell	• Food build-up inside oven, on heating elements or in crumb tray	• Refer to "Cleaning Your Air Fryer Oven" Section, Page 9.
Heating elements do not stay ON	• Heating elements will cycle ON and OFF to maintain proper heat • You may not see elements glowing	• Allow oven to reach set temperature prior to inserting food. Oven will indicate when preheat is complete.
Touch panel interface is non-responsive	• Panel is dirty or greasy • Excess moisture on panel • Controller is malfunctioning	• Ensure panel is clean and free of debris before using. • Ensure panel is clean and dry, and use dry hands to operate. • Unplug unit and let it rest for 60 seconds before plugging in.
Small water drips from door during cooking	• Water released from food during the cooking cycle	• This is not a concern and is part of the normal cooking cycle. Please mop up drips with a soft cloth.
Oven light is not on during cooking	• Oven light has not been selected from the control panel	• Oven light is default set to off. To turn on press the oven light button on the control panel. • If door is opened the light will default turn off upon closing.

12
Month
Replacement
Guarantee

This Sunbeam product is covered by a 12 month replacement or repair warranty, which is in addition to your rights under the Australian Consumer Law (if your product was purchased in Australia) or New Zealand Consumer Guarantees Act (if your product was purchased in New Zealand).

Upon receipt of your claim, Sunbeam will seek to resolve your difficulties or, if the product is defective, advise you on how to obtain a replacement or refund.

To assist us in managing warranty claims, we recommend you register your product as soon as practicable after purchase, on our Sunbeam website and uploading a copy of your original receipt. View the Support section of the Sunbeam website.

Should you experience any difficulties with your product during the warranty period, please contact our customer service line for advice on 1300 881 861 in Australia, or 0800 786 232 in New Zealand.

Australia

www.sunbeam.com.au
1300 881 861

New Zealand

www.sunbeam.co.nz
0800 786 232

In order to make a claim under our warranty, you must have the original proof of purchase documentation for the product and present it when requested (if not already uploaded to our website).

Should your product develop any defect within 12 months of purchase because of faulty materials or workmanship, we will replace or repair it, at our discretion, free of charge. A product presented for repair may be replaced by a refurbished product of the same type rather than being repaired. Refurbished parts may be used to repair the product.

Our replacement or repair warranty only applies where a defect arises as a result of faulty material or workmanship during the warranty period. Your warranty does not cover misuse or negligent handling (including damage caused by failing to use the product in accordance with this instruction booklet), accidental damage, or normal wear and tear.

Your warranty does not:

- cover freight or any other costs incurred in making a claim, consumable items, accessories that by their nature and limited lifespan require periodic renewal (such as filters and seals) or any consequential loss or damage; or
- cover damage caused by:
 - power surges, power dips, voltage supply problems, or use of the product on incorrect voltage;

- servicing or modification of the product other than by Sunbeam or an authorised Sunbeam service centre;
- use of the product with other accessories, attachments, product supplies, parts or devices that do not conform to Sunbeam specifications; or
- exposure of the product to abnormally corrosive conditions; or

- extend beyond 3 months if the product is used in commercial, industrial, educational or rental applications.

The benefits given to you by our warranty are in addition to other rights and remedies under law in relation to the product.

In Australia our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Our goods also come with guarantees that cannot be excluded under the New Zealand Consumer Guarantees Act.

If your warranty claim is not accepted, we will inform you and if requested to do so by you, repair the product provided you pay the usual charges for such repair. You will also be responsible for all freight and other costs.

Should your product require repair or service after the warranty period, contact your nearest Sunbeam service centre. For a complete list of Sunbeam's service centres, visit our website or call our customer service line for advice on 1300 881 861 in Australia, or 0800 786 232 in New Zealand.

Need help with your appliance?

Contact our customer service team or visit our website for information and tips on getting the most from your appliance.

Australia | visit www.sunbeam.com.au
phone 1300 881 861

New Zealand | visit www.sunbeam.co.nz
phone 0800 786 232

Newell Australia Pty Ltd | ABN 68 075 071 233

Sunbeam is a registered trade mark.

Made in China to Sunbeam's specification.

Due to minor changes in design or otherwise, the product you buy may differ slightly from the one shown here. Approved by the appropriate electrical regulatory authorities.

©Copyright Sunbeam 2023.

05/23

AFP5100BL_23EQSG1 (ANZ)_GCDS-JC