

REMINGTON®

PROLUXE

SALON DRYER

Intelligent PROheat technology delivers optimum heat for salon results that last all day*

USE & CARE
MANUAL

PLEASE READ
PRIOR TO USE



To register your product go to
www.remington-products.com.au
www.remington.co.nz

*style shown to last 24 hours in laboratory trials

5 YEAR WARRANTY

AC9140AU

IMPORTANT SAFEGUARDS

Warning: When the hair dryer is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hair dryer is switched off.

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

KEEP AWAY FROM WATER

DANGER – As with most electrical appliances, electrical parts are electrically live even when the switch is off.

To reduce the risk of death by electric shock:

- Always unplug it immediately after using.
- Do not place or store an appliance where it can fall or be pulled into a bath or sink.
- Do not use while bathing.
- Do not place or drop into water or other liquid.
- If an appliance falls into water, “unplug it” immediately. Do not reach into the water.

For additional protection, the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your electrical contractor for advice.

WARNING – TO REDUCE THE RISK OF BURNS, ELECTROCUTION, AND FIRE, OR INJURY TO PERSONS.

- An appliance should never be left unattended when plugged in to a power outlet.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction

concerning use of the appliance by a person responsible for their safety. Keep the appliance and the power cord away from the edge of table or countertops and out of reach of children and persons with reduced physical, sensory or mental capabilities.

- This appliance is not a toy. Children shall be supervised to ensure they do not play with the appliance.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Remington.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agents or similarly qualified persons in order to avoid a hazard.
- Do not use on people who are sleeping.
- Never drop or insert any object into any opening of this appliance.
- Do not use outdoors or where aerosol (spray) products are being used or where oxygen is being administered.
- Do not direct hot air towards the eyes or other heat sensitive areas.
- Attachments, where provided, may be hot during and after use. Allow them to cool before handling.
- When using the appliance, keep your hair away from the air inlet grille. Do not let your hair get drawn into the appliance.

SAVE THESE INSTRUCTIONS

AC9140AU PROLUXE SALON DRYER

USE AND CARE INSTRUCTION MANUAL

Thank you for purchasing your new Remington® PROLUXE Salon hair dryer. The PROLUXE Salon hair dryer features intelligent PROheat technology for salon results that last all day*.



KEY PARTS

- | | | | |
|----|--------------------------------|-----|----------------------|
| 1. | Air outlet | 7. | Heat settings |
| 2. | Ultimate Ceramic coated grille | | Low heat |
| 3. | Removable filter | | Medium heat |
| 4. | Air inlet grille | | High heat |
| 5. | Style shot | 8. | Speed settings |
| 6. | Cool shot | | Off |
| | | | Low speed |
| | | | High speed |
| | | 9. | Hang loop |
| | | 10. | Styling concentrator |
| | | 11. | Diffuser |

ULTIMATE CERAMIC TECHNOLOGY

The PROLUXE Salon hair dryer features Ultimate Ceramic to deliver superior even heat distribution for a smooth salon finish.

IONIC CONDITIONING TECHNOLOGY

The PROLUXE Salon dryer emits 90% more negative ions** which neutralize static and prevent flyaway hair. This allows the hair cuticle to lie flat which reduces static and frizz and creates a healthy shine, giving your hair a more nourished look and silky smooth finish.

STYLE SHOT

This hair dryer is equipped with a PROheat style shot button that is used to deliver the optimum level of heat when you're styling for salon results that last 24 hours*. Move the switch to the left to turn the style shot function on to create styles that last.

COOL SHOT

This hair dryer is equipped with a cool shot button that is used to hold your hairstyle. Move the switch to the right to rapidly cool and hold your hair once it has been styled.

HAIR MAINTENANCE

For optimal results, shampoo and condition your hair prior to styling and towel dry to remove excess moisture.

QUICK DRYING

Select high heat/speed setting and roughly dry hair. Use a round brush or your hand to shake out excess moisture whilst drying and keep the dryer in constant motion.

STRAIGHTENING

Select high heat/speed setting and roughly dry the hair. When the hair is nearly dry, attach the styling concentrator nozzle (which minimises frizz) and reduce the heat/speed. Section the hair according to thickness and begin with straightening bottom layers first. Using a round brush, follow the brush with the concentrator from above, while slowly gliding down each section of hair from roots to tips. Once the bottom layers have been straightened, then straighten the mid-section and complete by straightening the top layers.

*style shown to last 24 hours in laboratory trials

**vs. standard Remington dryer

NATURAL WAVY TEXTURE

Using the low heat/speed setting, 'scrunch' sections of hair with your fingers into the palm of your hand while directing airflow through your fingers. For more volume, lean forward and dry the hair in the upside down position.

LIFT & VOLUME

Using the dryer on high heat/speed setting, work from the roots of the hair and begin at the back of the head. Section your hair and use a round brush or your fingers to dry against its natural growth pattern. This creates lift at the roots, which creates a style with volume.

STYLING

Set the dryer to low heat/speed setting and attach the concentrator nozzle for precision drying. Section the hair, and style using a round brush. Concentrate the airflow directly on the hair while styling in the direction you desire. If necessary, hold the airflow for 2-5 seconds on each section while curling under or over for additional hold.

USING THE DIFFUSER

This hair dryer comes with a professional style diffuser. This diffuser dries hair fast without blowing out the style. Perfect for naturally curly, permed and fine hair or to give your hair a boost of volume.

Note: Always select the lowest heat setting when using the diffuser, as damage may occur to the diffuser if higher heat settings are used.

DRY YOUR HAIR USING THE DIFFUSER

Dry your hair beginning at the roots and using circular motions, always moving in the same direction. Use the diffuser with the hair dryer set at the low heat and low speed. Continue drying, keeping the hair dryer at a 90-degree angle from the scalp. This will lift the roots away from the scalp giving your hair volume. Finish by drying the ends.

ADD VOLUME TO YOUR HAIR USING THE DIFFUSER

To add volume to your hair, tilt your head upside down and dry so that the roots fall away from your scalp. Use the diffuser with the hair dryer set at low heat and low speed. Point the hair dryer at the roots to give your hair maximum volume. Continue the process to the ends of your hair.

USER INSTRUCTIONS

This hair dryer is equipped with a thermostat that will cycle 'OFF' if the temperature exceeds the comfort level due to partially blocked air inlet or air outlet grilles. In the event that the hair dryer stops during use, turn off all switches and allow the hair dryer to cool down, at which time the thermostat will automatically reset. Before using again, check that the air inlet and air outlet grilles are not blocked. Unplug the hair dryer and clean the openings if necessary. During use, do not block the air openings or let your hair be drawn into the hair dryer.

MAINTENANCE

Your hair dryer is designed for household use and is virtually maintenance free. When cleaning becomes necessary, turn all switches off and disconnect the hair dryer from the power outlet.

To maintain peak product performance, it is important to clean the air inlet grille and filter at the back of the dryer. To access the air inlet grille and filter, grasp the latch on the air inlet grille retaining ring with your hand and pull it away from the hair dryer. The filter can now be cleaned with a soft brush or a vacuum cleaner. Take the air inlet grille retaining ring and position it so the lugs are aligned with the notches on the side of the dryer. To lock, push the air inlet grille retaining ring into place. The exterior of the hair dryer can be cleaned by wiping it with a damp cloth.

STORAGE

When not in use, unplug the unit. Allow the appliance to cool and store out of reach of children in a safe, dry location. Never wrap the cord around the appliance as this will cause the cord to wear prematurely and break. Handle the cord carefully for long life and avoid jerking, twisting or straining especially at plug connections. If the cord becomes twisted in use, periodically straighten it.

You may also use the hang loop to store the hair dryer within convenient reach, ensuring that water cannot be splashed on to it when it is hung up.



WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

As with all electrical appliances, the power cord must be regularly checked for wear and tear. Immediately cease using this product if the power cord shows any signs of damage.

This product conforms to radio frequency interference requirements.

Any product purchased and used commercially carries a limited 90 Day Warranty.

Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Limited
WARRANTY AGAINST DEFECTS

In this warranty:

Australian Consumer Law means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

CGA means the New Zealand Consumer Guarantees Act 1993;

Goods means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

Manufacturer, We or us means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd
ACN, 007 070 573; or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Limited,
as the case may be, contact details as set out at the end of this warranty;

Supplier means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

You means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for the period of five (5) years from the date of purchase (**Warranty Period**). If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Exhaustible components (such as shaver heads, cutters and foils) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.

8. In order to claim under the warranty granted under clause 3 you must:
 - (a) Retain this warranty with your receipt/proof of purchase; and
 - (b) Return the Goods to us at the relevant address below or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
9. This warranty is immediately void if:
 - (a) Any serial number or appliance plate is removed or defaced;
 - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Limited.

Contact us or the Supplier for further details.

Spectrum Brands Australia Pty Ltd

Locked Bag 3004

Braeside, VIC 3195

AUSTRALIA

Customer service in Australia: 1800 623 118

E-mail: consumer.enquiry@remington-products.com.au

Website: www.remington-products.com.au

Spectrum Brands New Zealand Limited

PO Box 9817

Newmarket, Auckland 1149

NEW ZEALAND

Customer service in New Zealand: 0800 736 776

E-mail: info@remington.co.nz

Website: www.remington.co.nz

REMINGTON

REMINGTON SERVICE HOTLINE

① Australia 1800 623 118 (toll free)

① New Zealand 0800 736 776 (toll free)

® Registered Trademark of Spectrum Brands, Inc. or one of its subsidiaries

© 2016 Spectrum Brands, Inc.

Rev. 08/16

Part No. T22-0004294

