

# REMINGTON®

EST. NEW YORK 1937

## STYLE SERIES F4



USE & CARE  
MANUAL

PLEASE READ  
PRIOR TO USE

To register your product go to  
[www.remington-products.com.au](http://www.remington-products.com.au)  
[www.remington.co.nz](http://www.remington.co.nz)

2 YEAR WARRANTY

F4500AU

## IMPORTANT SAFETY INSTRUCTIONS

**When using electrical appliances, basic precautions should always be observed, including the following.**

### **READ ALL INSTRUCTIONS BEFORE USING**

**DANGER: As with most electrical appliances, electrical parts are electrically live even when the switch is off.**

**For additional protection, the installation of a residual current device (rcd) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.**

### **WARNING: TO REDUCE THE RISK OF BURNS, ELECTROCUTION AND FIRE OR INJURY TO PERSONS**

- The appliance should never be left unattended when plugged into a power outlet, except when charging the appliance.
- This appliance should not be used by children or other persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Never operate this appliance if it has a damaged cord or plug, if it is not working correctly, if it has been dropped or damaged, or dropped into water. If the supply cord or plug of the appliance is damaged it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. It cannot be repaired.
- Keep the cord away from heated surfaces.
- Charge, use and store the product at a temperature between 0°C and 32°C.
- Do not use outdoors or where aerosol (spray) products are being used, or where oxygen is being administered.
- Do not use this appliance with damaged or broken tracks, foils or cutters, as injury may occur.
- For use on facial hair only. Not intended for shaving the hair on your head.

- Do not plug or unplug the appliance with wet hands.
- For household use only.
- Do not place or store the appliance or charging adaptor where it can fall or be knocked into a sink or bath.
- Do not place in or drop into water or any other liquid for extended periods of time.
- If an appliance falls into water, “unplug it” immediately. Do not reach into the water.
- Unplug the charging adaptor from the electrical outlet immediately after fully charging.
- Unplug the power adaptor from the appliance before cleaning the appliance in water.
- Use this appliance only for its intended use as described in this manual.
- Do not use attachments not recommended by Remington.
- Never drop or insert any object into any opening of this appliance.
- Always store the charging adaptor in a moisture-free location.
- Do not use on people who are asleep.
- Do not use an extension cord or a voltage converter with this appliance.
- Do not wrap the cord around the appliance.
- Remington strongly recommends that an approved Safety Switch (Residual current device) be installed to protect all bathroom power outlets. Ask an electrical contractor for advice.

**SAVE THESE INSTRUCTIONS**

## F4500AU STYLE SERIES F4 USE & CARE INSTRUCTION MANUAL

Thank you for purchasing your new Remington® Style Series F4 foil shaver. Inside this manual you will find tips on using and caring for your shaver.



### KEY PARTS

- |                                  |                                 |
|----------------------------------|---------------------------------|
| 1. On/Off Button                 | 7. Power Port (not shown)       |
| 2. Intercept Trimmer             | 8. Charging Indicator Light     |
| 3. Shaving Foils                 | 9. Head Lock Button (not shown) |
| 4. Hair Pocket                   | 10. Stubble Styler              |
| 5. Foil Assembly Release Buttons |                                 |
| 6. Pop Up Trimmer (not shown)    |                                 |

#### Also Includes

- Cleaning Brush
- Power Adaptor

## F4500AU SPECIFICATIONS

Power System	Cordless (Rechargeable)
Initial Charge Time	4 Hours
Full Charge Time	4 Hours
Cordless Shave Time	50 Minutes
Indicators	Charging/Low/Full Charge
Voltage Type	Worldwide
Waterproof	Yes
Replacement Head & Cutters	SPF-STYLE

 
 
 
**Power System:** Cordless – shaver can only be used without the power cord.

**Indicator:** LED Display

**Voltage Type:** Worldwide Voltage – shaver automatically adapts to an outlet voltage between 100V and 240V.

Note: Some countries will require the use of a plug adaptor that is not included with your shaver.

### CHARGING

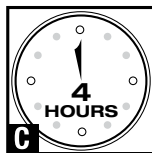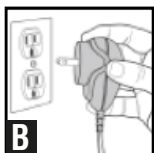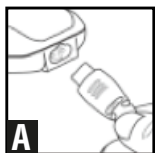

Before using, read the important safety instructions in this manual.

1. Ensure the product is switched off. Connect the shaver to the adaptor (Diagram A).
2. Connect to the mains (Diagram B) and charge for at least 4 hours when using for the first time (Diagram C). This first charge is important to the shaver's battery life.
3. When plugged, the charging indicator will light up.
4. When empty, the battery should be charged for 4 hours, and will provide 50 minutes of shaving time.
5. To preserve the life of the batteries, allow them to fully discharge every six months, and then recharge them for 4 hours

### Caution:

- Make sure the shaver and your hands are dry when charging the shaver.
- Always charge the shaver in a cool, dry place.

### CHARGING INDICATOR LIGHTS

CHARGE LEVEL	LIGHTS
Charging	The lights will come on one after the other then go off in a repeating pattern.
Fully Charged	Both lights will come on for 5 minutes then go out.
Low charge/charging required	The bottom light will flash rapidly.
Battery capacity 50% or higher	Both lights will come on.
Battery capacity 50% or lower	The bottom light will come on.

### GETTING STARTED

Before operating your shaver, remove the protective head guard, which protects the foils and cutter assembly. It is important to remove it correctly to avoid damaging the clips that hold it to the shaver.

1. Press lightly on the top of the protective head guard.
2. Lift the lower rear edge.
3. Pull the protective head guard away from the shaver.

When the shaver is not in use, always keep the protective head guard on the shaver head and keep the trimmer in the OFF position.

### SHAVING



1. Press power button to turn on. (Diagram D)
2. Shave face and neck using linear strokes. (Diagram E)
3. Shaver can be used on a dry face or with shave cream or gel.
4. Shaver can be used in the shower.

## **SHAVING TIPS (WET) WITH GEL OR FOAM**

We recommend that you use the shaver in the shower for optimal performance.

Note: Normally, the head pivots freely but its movement can be restricted by sliding the head lock button to the locked position on the back of the shaver.

Note: In order to ensure optimal performance, thoroughly rinse the shaver head under water during and after shaving.

- Apply water to face and neck area.
- Apply shave gel or foam to the face and neck.
- Rinse shaver head under water.
- Hold the shaver at 90° to your skin.
- Stretch your skin and shave against the direction of your beard growth using linear strokes.
- For areas such as the chin and neck where hair grows in different directions use small circular strokes.
- While shaving do not press hard against the skin to avoid skin irritation and/or damage to the foils.
- Throughout the shave, regularly rinse shaver head under water to avoid residue build up.
- When finished shaving, rinse face.
- Thoroughly rinse shaver head of all gel or foam.
- Follow cleaning and care instructions located on page 10

## **SHAVING TIPS (DRY)**

- Ensure your skin is free of oils.
- Wait at least 15 minutes after waking up before shaving, to ensure your face is free of puffiness that may be present from sleeping.
- Hold the shaver at 90° to your skin.
- Stretch your skin and shave against the direction of your beard growth using linear strokes.
- For areas such as the chin and neck where hair grows in different directions use small circular strokes.
- While shaving do not press hard against the skin to avoid skin irritation and/or damage to the foils.

 
Note: As with every shaver, your shave will improve over time. Allow up to four weeks of daily shaving to develop effective shaving style and for your skin to adjust to the new shaver. The adaptation period might take a little longer if your skin is sensitive, if you are switching from a different method of shaving, or if you alternate between shaving methods.

## TRIMMING

### Pop-up Trimmer:

1. Push trimmer release button to engage trimmer. (Diagram F)
2. Trim long, difficult hairs and side burns. (Diagram G)
3. Close trimmer by pressing down. (Diagram H)

Note: Lubricate teeth with oil every 6 months.

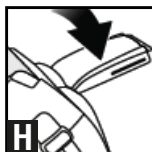

### Stubble Styler:

The Stubble Styler comb is designed to help you maintain a 3-day stubble look. Please be aware that you cannot shave a full long beard down to stubble length with the stubble styler.

To achieve the look:

- Clean shave your face initially and then let your beard grow for two or three days.
- Attach the stubble styler to the cutting head of the shaver.
- Shave your face with short, linear motions. The stubble guard will only trim hairs that are over 1.5 mm in length.
- Shave with the stubble styler at least every two days to maintain the length and do not allow hairs to get too long.
- Detach the stubble styler if you wish to have a clean shave look on your neck or other areas of your face where you do not want stubble showing.

Tips: Faster growing areas of your beard will begin to be trimmed first. Slower growing areas of your beard will fill in over a period of a few days or weeks.





# ACCESSORY ORDER FORM

Article	Part No.	Price each AUD	Price each NZD	Qty	Amount
Replacement Shaving Head & Cutters for F4500AU	SPF-STYLE	\$39.95 AUD	\$44.95 NZD		\$
Shaver Saver: Aerosol Spray Cleaner	SP4	\$11.95 AUD	\$14.95 NZD		\$
Face Saver: Pre-shave Powder Stick	SP5	\$11.95 AUD	\$14.95 NZD		\$
<b>IMPORTANT:</b> Pricing in effect at time of publication, inclusive of GST. Subject to change without notice. Postage & handling \$7.50 standard for Australia & New Zealand.				<b>Sub Total</b>	<b>\$</b>
				<b>Postage &amp; handling</b>	<b>\$ 7.50</b>
				<b>TOTAL</b>	<b>\$</b>

For help or to place an order on the phone  
call Remington Customer Service:

- ① Australia: 1800 623 118 (toll free)
- ① New Zealand: 0800 736 776 (toll free)

**REMINGTON®**  
EST. NEW YORK 1937

Remington is a Registered Trademark  
of Spectrum Brands, Inc., or one  
of its subsidiaries.



**MAIL YOUR ORDER FORM TO:**

**AUSTRALIAN RESIDENTS:**

Spectrum Brands Australia Pty Ltd  
Locked Bag 3004  
Braeside, VIC 3195  
AUSTRALIA

**NEW ZEALAND RESIDENTS:**

Spectrum Brands New Zealand Pty Ltd  
PO BOX 9817  
Newmarket, 1149, Auckland  
New Zealand

## MONEY BACK OFFER – AUSTRALIA / NEW ZEALAND ONLY

If within 60 days you are not fully satisfied with your Remington® shaver, just return the shaver with this completed coupon and a copy of your Australian/New Zealand purchase receipt to Remington®. In return, we will send you a cheque for the full purchase price of the shaver. Please allow 6-8 weeks for your cheque to arrive.

Name:

Address:

City:

State:  Postcode:  DOB:  |  |

Contact No: Area Code:  Ph:

Product Model number:

Is this the first Remington shaver you have owned/purchased? Yes  No

Why are you returning this shaver?

Skin Irritation  Shave is not close enough  Prefer a rotary/foil shaver

Other:

**REMINGTON®**  
EST. NEW YORK 1937

**Spectrum Brands Australia Pty Ltd**

Locked Bag 3004  
Braeside, VIC 3195  
AUSTRALIA

Customer service in Australia: 1800 623 118  
E-mail: [consumer.enquiry@remington-products.com.au](mailto:consumer.enquiry@remington-products.com.au)  
Website: [www.remington-products.com.au](http://www.remington-products.com.au)

**Spectrum Brands New Zealand Limited**

PO Box 9817  
Newmarket, Auckland 1149  
NEW ZEALAND

Customer service in New Zealand: 0800 736 776  
E-mail: [info@remington.co.nz](mailto:info@remington.co.nz)  
Website: [www.remington.co.nz](http://www.remington.co.nz)

## CLEANING & MAINTENANCE

The shaver is a wet/dry appliance. The shaver may be cleaned under warm water.

**Note:** When cleaning your shaver, make sure the shaver is turned off and disconnected from the power cord.

### Caution:

 
 
 
When cleaning the external surfaces of the shaver, use a damp cloth. Do not use strong detergents or other chemicals.

To dry, wipe the surface of the shaver with a dry towel. Do not use a hair dryer or heater to dry the shaver.

**Note:** Lubricate cutters after rinsing with Remington Shaver Saver (SP4).

### Cleaning Your Shaver

**Note:** We recommend following these steps after each use.

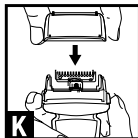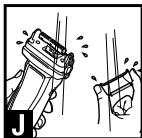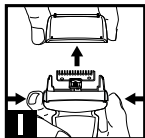

1. Remove the foil assembly by pressing the release buttons on both sides of the head and lifting the foil assembly upwards to remove from the hair pocket. (Diagram I)
2. Tap out excess hair shavings.
3. Rinse the head of the assembly under running water. (Diagram J)
4. Replace the head assembly by placing the assembly on top of the hair pocket, press down and click into place. (Diagram K)

### Lubricate

Remington® Shaver Saver (SP-4) lubricates, cleans and protects your shaver's foil and cutter assembly. The lubricant helps remove hair clippings while reducing wear. Spray on the foil and cutters after each shave to keep your shaver operating at peak performance.

## Cleaning Stubble Styler

1. Clean the stubble styler with the cleaning brush provided, brush away hair clippings.

## REPLACING THE FOIL & CUTTERS

It is very important to replace the foil and cutters when necessary to ensure a close, comfortable shave without irritation. We recommend they be replaced every 6 months. Here are some signs of head and cutter wear, indicating that replacement is needed:

- **Irritation:** As the heads get excessively worn you may experience some skin irritation. This would be especially noticeable when you apply moisturizing lotion.
- **Pulling:** When the cutters wear you may feel a sense of pulling and a loss of closeness when you shave. This is an indication that it is time to replace your heads and cutters.

Replacement foil & cutters may be obtained from your local retailer, or directly from Remington®. Simply fill out the enclosed accessory order form - refer to pages 9 & 10, or alternatively your order can be processed over the phone via the Remington® Service Hotline.

## HOW TO REPLACE THE FOIL & CUTTERS

Please refer to the specifications' table on page 5 of this manual that lists the correct replacement part number of your shaver.

Remove the foil assembly by pressing the foil assembly release buttons on either side of the head and lifting the assembly upwards to remove from the hair pocket

- Grasp each cutter between your thumb and forefinger and pull upwards to remove
- Snap each new cutter into the top of the drive shaft.

Note: Do not push on the ends of the cutters as this may cause damage and reduce their effectiveness.

- Insert the new foil assembly on top of the hair pocket, press down and click into place.

## BATTERY DISPOSAL

Note: The battery is not intended to be removed or replaced under normal use. The only time the battery should be removed or the unit opened or disassembled, is at the end of the product's useful life before it is discarded.

- The F4500AU shaver contains a nickel metal hydride battery. Once the trimmer has reached the end of its life, to ensure proper disposal of the product, please take the appliance to a recycling centre, where the internal rechargeable battery should be removed by a professional and recycled separately.
- For more information about recycling of electrical and battery operated appliances, please contact your local council office or your household waste disposal service.

**Caution:** Do not put in the fire or mutilate your batteries when disposing as they may burst and release toxic materials. Do not short circuit as it may cause burns.

We suggest you use local waste management centres to recycle this product at end of life.



### **Suitable for use in bath and shower.**

This product conforms to radio frequency interference requirements.

Any product purchased and used commercially carries a limited 90 Day Warranty.

**Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Limited**  
**WARRANTY AGAINST DEFECTS**

In this warranty:

**Australian Consumer Law** means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

**CGA** means the New Zealand Consumer Guarantees Act 1993;

**Goods** means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

**Manufacturer, We or us** means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ACN, 007 070 573; or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Limited, as the case may be, contact details as set out at the end of this warranty;

**Supplier** means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

**You** means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for the period of two (2) years from the date of purchase (**Warranty Period**). If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

**Warranty Conditions**

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Consumable parts (such as shaver heads, cutters and foils) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.

8. In order to claim under the warranty granted under clause 3 you must:
  - (a) Retain this warranty with your receipt/proof of purchase; and
  - (b) Return the Goods to us at the relevant address below or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
9. This warranty is immediately void if:
  - (a) Any serial number or appliance plate is removed or defaced;
  - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Limited.

Contact us or the Supplier for further details.

#### **Spectrum Brands Australia Pty Ltd**

Locked Bag 3004

Braeside, VIC 3195

AUSTRALIA

Customer service in Australia: 1800 623 118

E-mail: [consumer.enquiry@remington-products.com.au](mailto:consumer.enquiry@remington-products.com.au)

Website: [www.remington-products.com.au](http://www.remington-products.com.au)

#### **Spectrum Brands New Zealand Limited**

PO Box 9817

Newmarket, Auckland 1149

NEW ZEALAND

Customer service in New Zealand: 0800 736 776

E-mail: [info@remington.co.nz](mailto:info@remington.co.nz)

Website: [www.remington.co.nz](http://www.remington.co.nz)

**REMINGTON**<sup>®</sup>  
EST. NEW YORK 1937

#### **REMINGTON SERVICE HOTLINE**

① Australia 1800 623 118 (toll free)

① New Zealand 0800 736 776 (toll free)

#### **AUTHORISED REPAIR CENTRES**

Visit [www.remington-products.com.au](http://www.remington-products.com.au) for Authorised repair centre details.

® Registered Trade Mark of Spectrum Brands Inc., (SBI) or one of its subsidiaries

© 2019 Spectrum Brands Inc.

Rev. 07/19

Part No. T22-7000859

Type: F09A

