

# Sunbeam

MIXMASTER®

HAND MIXER

— with —

 **HEATSOFT**  
TECHNOLOGY

# Sunbeam

## QUICK START GUIDE

JM7000  
JM7050



© 2018 Sunbeam Corporation PTY LTD. ACN 000 006 771. Sunbeam is a registered trade mark. Due to continued product improvements product illustrations and photographs in this quick start guide may differ slightly from the actual product. GCDS-SUN260618-SL  
Need help? Call 1300 881 861 (Australia) 0800 786 232 (New Zealand).


Part number 3740-QSG

**WARNING:** This quick start guide is not intended to be a substitute for the user guide, and you should read and understand the warnings and instructions in the user guide before using this appliance.

## HOW TO USE YOUR NEW SUNBEAM HEATSOFT MIXMASTER®


### SOFTENING BUTTER

- 1 Cut the cold butter into approximately 2.5cm cubes and place them into a mixing bowl with sugar.
- 2 Press the **HeatSoft** Button once, and then turn on the beaters. Butter will start softening while it is being mixed. Always start at a slow speed and gradually increase the speed until the butter is creamed.

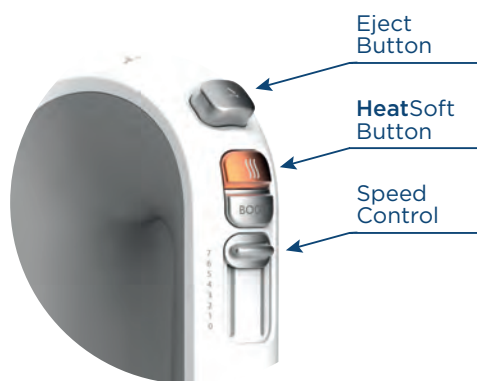

Recommended Softening Time:

SUGAR AMOUNT (CUPS)	BUTTER AMOUNT (GRAMS)	SOFTENING TIME
1/2 cup	110g	1 to 1½ minutes
1 cup	220g	2 to 2½ minutes

 **CAUTION:** Do not touch or hold your hand beneath the heat nozzle while the **HeatSoft** feature is ON.

**NOTE:** When the **HeatSoft** Button is functioning, a white light will illuminate and the heat fan will turn on. Turn off the **HeatSoft** Button after the amount of time listed in the chart above to avoid over creaming.

- 3 Once the softening is completed press the **HeatSoft** Button again to turn off the heat. The white light will fade out and the fan will turn off.

### MIXING INGREDIENTS

- 4 Add in the rest of the ingredients according to the recipe and continue mixing.



### CLEANING

**CAUTION:** Turn off and unplug the appliance and eject any accessories before cleaning.

Once the unit is turned off, press the Eject Button to remove the beaters. This product features a removable nozzle that can be pulled out for easy cleaning.

