

Quick start installation guide



Zip HydroTap G5

Command Centre
Boiling, Chilled & Sparkling models



AFFIX PRODUCT LABEL HERE



Australia



UK

Visit our website to
download the manuals

Table of contents

SECTION 1: Using these instructions	3
SECTION 2: IMPORTANT SAFETY INSTRUCTIONS.....	3
SECTION 3: WARNINGS & REGULATORY INFORMATION.....	7
SECTION 4: Technical data	9
SECTION 5: Parts supplied, consumables and accessories	11
SECTION 6: Set up the ventilation	12
SECTION 7: Fit the carbonation valve.....	15
SECTION 8: Connect the water supply.....	16
SECTION 9: Set the bypass & install the limescale filter	17
SECTION 10: Fit the booster	18
SECTION 11: Connect the Booster	19
SECTION 12: Install the CO ₂ cylinder and regulator.....	20
SECTION 13: Connect the Command Centre	25
SECTION 14: Commissioning.....	30

SECTION 1: Using these instructions

Before you start



This document is a Quick Start Installation Guide. For further details on installing and operating your HydroTap download & read the Command Centre installation and user instructions, which can be found online at:

(Australia) www.zipwater.com

(UK) specify.zipwater.co.uk



Read and use the instructions supplied with individual kit components for a safe installation.

Explanation of symbols



Read the instructions



WARNING



Danger of electric shock



Hot surface



Highly flammable



CO₂ Gas
WARNING



Li
Button/
coin battery

SECTION 2: IMPORTANT SAFETY INSTRUCTIONS



Compliance

In Australia electrical installation must comply with AS/NZS3000.

In Australia plumbing installation must comply with AS/NZS3500.

In Australia For residential chilled models, all refrigeration must comply with AS/NZS 60335.2.24.

In the UK the system must be installed in accordance with water supply byelaws, current IEE regulations and local authority byelaws.

SECTION 2: IMPORTANT SAFETY INSTRUCTIONS

Safety

This appliance is not intended for use by children under 8 years or persons (including children under 8 years) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

Refrigerant



The Zip HydroTap Command Centre range uses either HIGHLY FLAMMABLE R290, R600a or R134A refrigerant under pressure.

Check the rating plate or contact Zip before commencing work.

Maintenance of the refrigeration unit must be carried out by an accredited service provider or qualified refrigeration technician.

Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

CO₂

- Keep out of reach of children.
- Use according to MSDS (material safety data sheet).
- Pressurised container. Contains gas under pressure, may explode if heated.
- Protect from sunlight.
- Do not expose to temperatures exceeding 50 °C.
- Do not expose to naked flame or any incandescent material.
- Do not pierce or burn, even after use. Avoid shock.
- High concentration of gas may cause asphyxiation.
- Use only in an upright position.
- The cylinder must be used with the supplied pressure regulator.
- The gas cylinder must be installed in an open plan area, or in an enclosed room with a volume no less than 20m³ per 1200g cylinder, or 50m³ per



SECTION 2: IMPORTANT SAFETY INSTRUCTIONS

2640g cylinder.

- If more than 1 gas cylinder containing CO₂ is present within the same location, the recommended ventilated area should be in proportion to the number of gas cylinders stored in that location. A ventilated area is a non-enclosed area which could include the kitchen, living room etc.
- Refer to the gas cylinder and MSDS for a complete list of warnings (www.zipwater.com, www.zipwater.co.uk).

Qualifications

To avoid hazards, all installation procedures must be carried out by a suitably qualified tradesperson. The power cable and power outlet must be in a safe visible position for connection.

Venting

Sometimes steam and / or boiling water droplets may discharge through a vent outlet on the tap. If not using the font, ensure the tap body is located so the tap outlet safely dispenses into the sink bowl.

Lifting

Take care when lifting. The Command Centre may exceed safe lifting limits. If you feel this is beyond your personal capabilities, please seek assistance with the lift. The weight of the Command Centre is marked on the packaging. Do not lift the Command Centre by the front cover or any of its connections.

Airflow

The Zip HydroTap operates within the ambient temperature range 5°C - 35°C. Proper air circulation must be provided. The system will operate satisfactorily only if the recommended air gaps are provided. The vent kit supplied must be fitted.

Altitude

Water boils at varying temperatures at different altitudes. The HydroTap adjusts for this during startup calibration and will recalibrate itself on a regular basis.

Frost protection

If the HydroTap is located where the ambient air temperature could fall below 5°C when the system is not in use, do not turn off the Command Centre electrically. This safeguard does not offer the same protection to the connecting pipework and fittings.

SECTION 2: IMPORTANT SAFETY INSTRUCTIONS

Application

The HydroTap G5 Home series is intended to be used in household and similar applications such as:

- Staff kitchen areas in shops, offices and other working environments;
- Farm houses and by clients in hotels, motels and other residential type environments;
- Bed and breakfast type environments;
- Catering and similar non-retail applications.



Compressed gas warning - HydroTap Clean can

- Read label before use.
- Keep out of reach of children.
- Use according to SDS (safety data sheet).
- Pressurised container. Contains gas under pressure, may explode if heated.
- Protect from sunlight.
- Do not expose to temperatures exceeding 50 °C.
- Do not expose to naked flame or any incandescent material.
- Do not pierce or burn, even after use.
- Avoid shock.
- SDS is available for download at www.zipwater.com or www.zipwater.co.uk

First aid


- For advice contact a Poison Control Information Centre
- Australia (+61) 131126
- Ireland (+353) 1809 2166
- UK (+44) 171 635 9191

SECTION 3: WARNINGS & REGULATORY INFORMATION



- For continued safety of this appliance it must be installed, operated and maintained in accordance with the manufacturer's instructions.
- This appliance may deliver water at high temperature. Refer to the Plumbing Code of Australia (PCA), local requirements and installation instructions to determine if additional delivery temperature control is required.
- The button/coin battery is hazardous and is to be kept away from children. It can cause severe or fatal injuries in 2 hours or less if it is swallowed or placed inside any part of the body. Medical attention should be sought immediately if it is suspected the battery has been swallowed or placed inside any part of the body.



-  The Zip HydroTap must be earthed Earthing is provided via the supplied power cord. The resistance of the earth connection to each exposed metal part must be less than 1Ω . Use the power cable supplied. It is the responsibility of the installer to ensure the power point is earthed.
- All installation and service work must be completed by trained and suitably qualified tradespeople. Faulty operation due to unqualified persons working on this product may void warranty coverage.
- As the installer, it is your responsibility to supply and install all valves as required by local regulations and relevant standards.
- The HydroTap is rated for 220-240V 50Hz AC operation.
- Do not remove the cover of the appliance under any circumstances without first isolating the appliance from the power supply.
- Connect only to a potable (wholesome, cat1) mains water supply.
- The new hose sets supplied with the product must be used. Do not re-use old hose sets.
- Never locate the system near, or clean with water jets.
- Do not expose the Zip HydroTap to the elements of nature.
- The booster complies with protection class IP 20.
- For UK, a pressure limiting valve must be fitted for mains water pressures above the maximum limits stated.
- Use of tools can be hazardous. Assess the risks before you start.

SECTION 3: WARNINGS & REGULATORY INFORMATION

- A clearance envelope around all Command Centres must be provided to allow adequate ventilation for the safe and effective use of the HydroTap system.
- The vent tray, if provided, must be fitted. It provides a safe exhaust for refrigerant gas in the unlikely event of a leak.
- Valve and fitting threads must be sealed appropriately with PTFE tape where compression seals are not provided.
- Always flush new filter before use.
- Do not connect booster to electrical supply until commissioning.
- Do not over tighten plumbing and hose connections.
- Braided hoses supplied cannot be lengthened.
- Be aware of the risks of hazards which could cause harm when handling compressed CO₂. Assess the risks before starting the installation.
- Do not proceed with a CO₂ cylinder change if the seals are damaged. Take care not to cross thread the regulator, a cross threaded regulator poses a potential hazard.
- Care must be taken when working with high pressure carbon dioxide, and in no case should the normal operating pressure of 3.0 bar be exceeded.
- The power cord and general power outlet must be in a safe and accessible position after installation. When positioning the appliance, ensure the power supply cord is not trapped or damaged. If the power supply cord is damaged it must be replaced by a Zip service provider or a qualified electrician.
- Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
- For safe operation, the HydroTap is designed to be installed, commissioned and used within 48 hours. Should the HydroTap not be required for an extended period of time (72 hours or more), do not fill and commission the HydroTap until ready for first use.
- For water taste and quality reasons, following any non-use period of more than 72 hours, Zip recommends to perform a system flush. Failure to flush the system may affect water quality.
- For UK, this appliance incorporates adequate backflow prevention in accordance to S.I.1999 No.1148 The Water Supply (Water fittings) Regulations 1999 Schedule 2 requirement. No further backflow

SECTION 3: WARNINGS & REGULATORY INFORMATION

prevention is required for connection to the water supply.

- For UK, this appliance only contains materials that conform to the requirements of BS6920:2014 'Suitability of non metallic materials and products for use in contact with water intended for human consumption with regard to their effect on the quality of water'.

SECTION 4: Technical data

Model	Power rating, kW 220-240V, 50Hz	Dimensions W x D x H (mm)	Weight (kg)
BCS100 BCS100 H	2.15 + Booster	395 x 464 x 333 With Duct and Vent Tray: 450 (500) [#] x 464 (520) [#] x 333 (373) [#]	41
BCS60 BCS60 H	2.15	395 x 464 x 333 With Duct and Vent Tray: 450 (500) [#] x 464 (520) [#] x 333 (373) [#]	41
BCS30 BCS30 H	1.96 + Booster	339 x 460 x 333	34
BCS20 BCS20 H	1.96	339 x 460 x 333	34
BCS Home BCS H Home	1.53	339 x 460 x 333	34

[#] including vent tray

SECTION 4: Technical data

Electricity supply requirements

220-240V 50Hz AC (for power requirement see table above).

	Without booster	With booster
Australia	1x 220 - 240V AC 10A socket	2x 220 - 240V AC 10A sockets
UK	1x 220 - 240V AC 13A socket	2x 220 - 240V AC 13A sockets

Water supply connection

1/2" BSP (G1/2)

Water supply pressure requirements

Component	Min - Max pressure, kPA (bar)	
	Australia	UK
HydroTap	170 (1.7) - 700 (7.0)	170 (1.7) - 500 (5.0)
Sparkling HydroTap	250 (2.5) - 700 (7.0)	250 (2.5) - 500 (5.0)
Vented Mixer Tap	300 (3.0) - 700 (7.0)	200 (2.0) - 500 (5.0)
Booster	200 (2.0) - 700 (7.0)	200 (2.0) - 500 (5.0)
Limescale filter	200 (2.0) - 700 (7.0)	200 (2.0) - 500 (5.0)



A pressure limiting valve must be fitted for mains water pressures above the maximum limits stated above in accordance with local plumbing regulations.

Note: All models (excluding UK) have an internal pressure limiting device to reduce the maximum mains regulated pressure (700kPa in Australia), protecting the system against pressure surges above 500kPa.

Booster specification

Specification	Rating
Power 230V 50/60Hz	2.20kW
Power 240V 50/60Hz	2.40kW
Flow rate	1.2 L/min

SECTION 5: Parts supplied, consumables and accessories

Parts supplied with the HydroTap	BCS for Work	BCS H for Work	BCS for Home	BCS H for Home
Tap				
HydroTap tap		✓		✓
HydroTap pipes, tubes hoses and fittings		✓		✓
Separate vented Mixer tap	✗	✓	✗	✓
Vented Mixer tap hoses and fittings	✗	✓	✗	✓
Vented Mixer tap instructions	✗	✓	✗	✓
Separate Mains mixer Tap	Optional		Optional	
Separate Mains mixer Tap fittings	Optional		Optional	
Separate Mains mixer Tap instructions	Optional		Optional	
Command Centre				
Command Centre		✓		✓
Mains electrical supply cable		✓		✓
Water supply inlet hose		✓		✓
Water supply inlet adaptor and strainer		✓		✓
Ventilation kit (including vent tray with BCS60, BCS100 models)		✓		✓
Water block kit	(UK only)		(UK only)	
CO₂				
CO ₂ cylinder		✓		✓
CO ₂ regulator		✓		✓
CO ₂ regulator adaptor*	(UK only)			✓
CO ₂ hose & instructions		✓		✓
Booster				
Booster & hoses	Optional			✗
Filters				
Water filter & instructions		✓		✓
Limescale filter kit	Optional		Optional	
Font				
Font kit	Optional		Optional	

* supplied with 1.2kg cylinder and adjustable regulator combination.

Note: Mains water isolation valve is not supplied with the kit.
Contact Zip for the full range of consumables and accessories.

SECTION 6: Set up the ventilation




Use of tools can be hazardous. Assess the risks before you start.



Use instructions supplied with individual kit parts.



A clearance envelope around all Command Centres must be provided to allow ventilation for the safe and effective use of the HydroTap system.

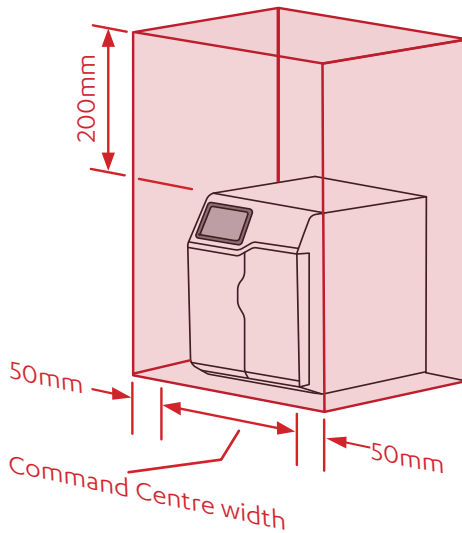


SECTION 6: Set up the ventilation

BCS60 and BCS100 models

- Cold air is drawn in through the inlet vent and gap provided by the door buffers.
- Inlet vent is mounted over cupboard side, door or floor cut-out.
- Warm air is exhausted through vent tray.
- Observe 100mm inlet / outlet vent separation (see below).



The vent tray must be fitted. It provides a safe exhaust for refrigerant gas in the unlikely event of a leak.

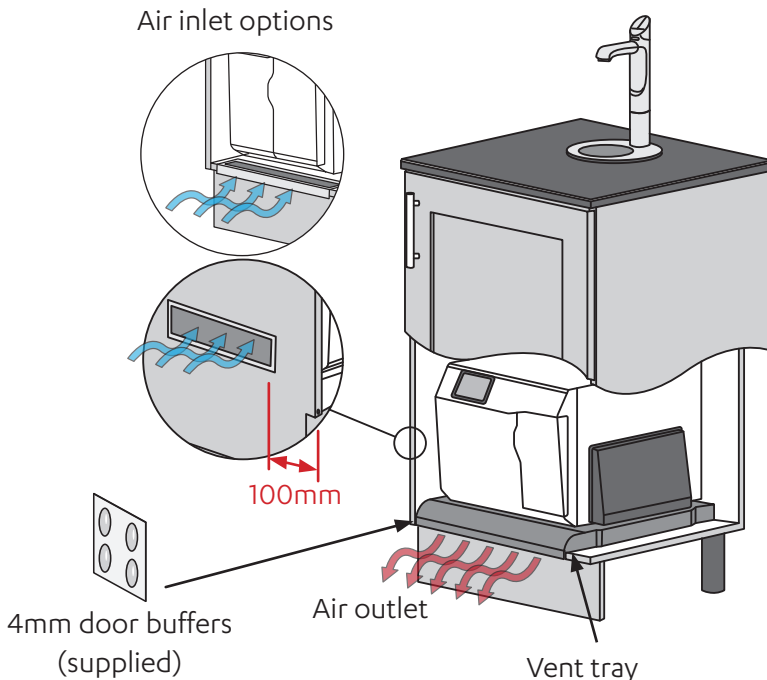


Vent tray dimensions WxDxH (mm): 500 x (515-555) x 40

SECTION 6: Set up the ventilation

BCS20, BCS30 & BCS Home models


- Cold air is drawn in through the inlet vent and lower gap provided by the door buffers.
- Inlet vent is mounted over cupboard side, door or floor cut-out.
- Warm air is exhausted through upper gap provided by the door buffers.

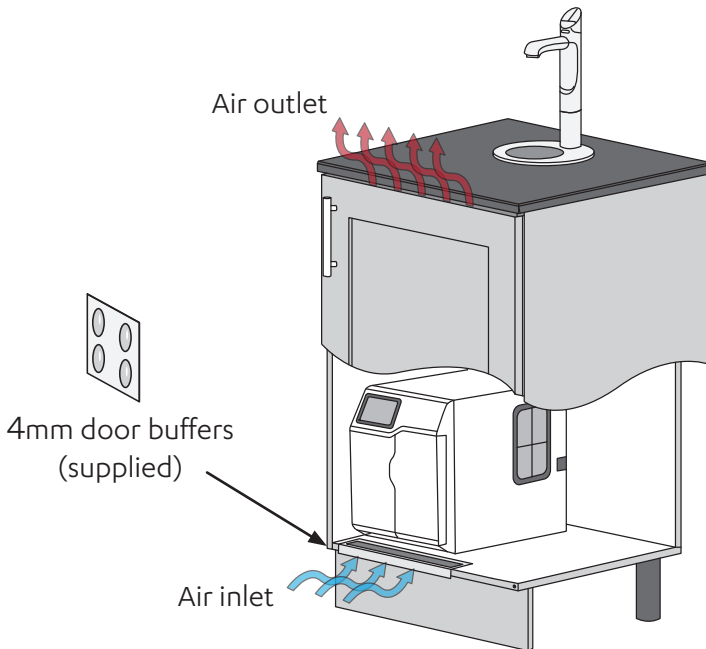

All models

If cupboard temperature exceeds 35°C, additional ventilation is required. Contact your Zip service provider for options (including additional vents and fan kit).


SECTION 7: Fit the carbonation valve

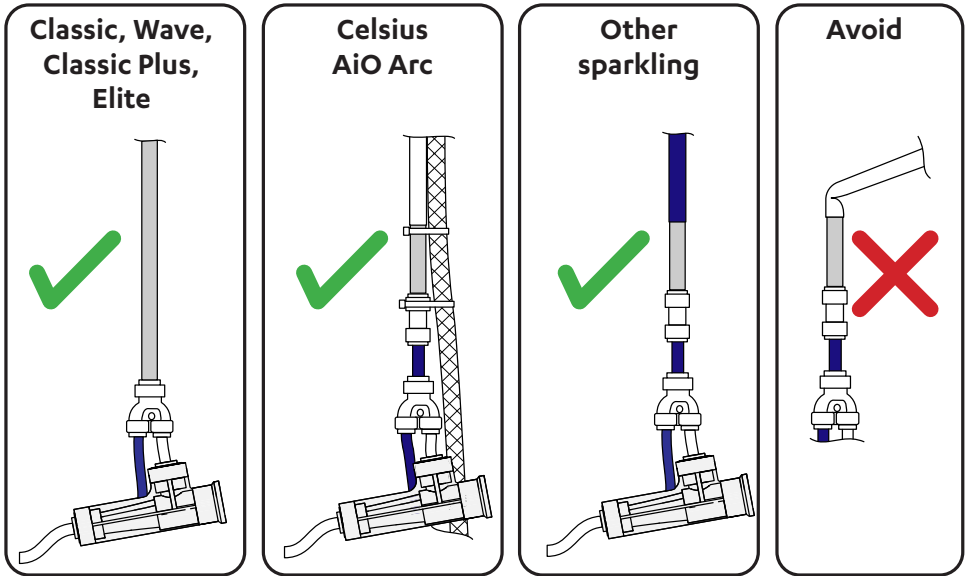

White tube to SPARKLING outlet
of Command Centre

Carbonation valve flow adjustment

- Use a 6mm Allen key or a large flat-blade screwdriver to adjust the valve.
- Rotate the adjustment screw anti-clockwise to increase, and clockwise to decrease the flow.
- To measure the set flow rate, use a measuring jug or cup and run the sparkling water for 15 seconds. The HydroTap has a default 15 second dispense time, which will help in your flow rate setup.
- Multiply the amount of water dispensed in 15 seconds by 4 to determine the flow rate in litres per minute.
- The optimum flow rate is 1.6 litres per minute (400ml per 15 seconds).
- If the flow rate is adjusted too high, the carbonation tank will be emptied of water, leaving only CO₂ to be dispensed from the tap. This will result in inconsistent flow (spluttering).

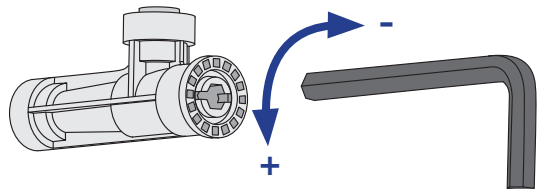



SECTION 8: Connect the water supply



Valves and fittings must be sealed with PTFE tape if compression seals are not included.

Note Mixer tap installations also use a 'tee piece' as part of the water supply plumbing connections, see the Tap installation instructions supplied with the Mixer Tap to connect the water supply if using the mixer tap option.

Note: correct strainer orientation.

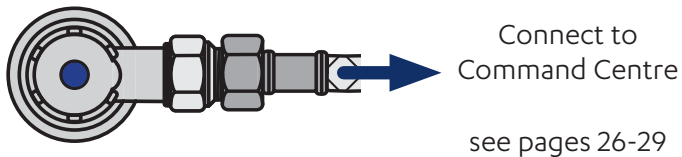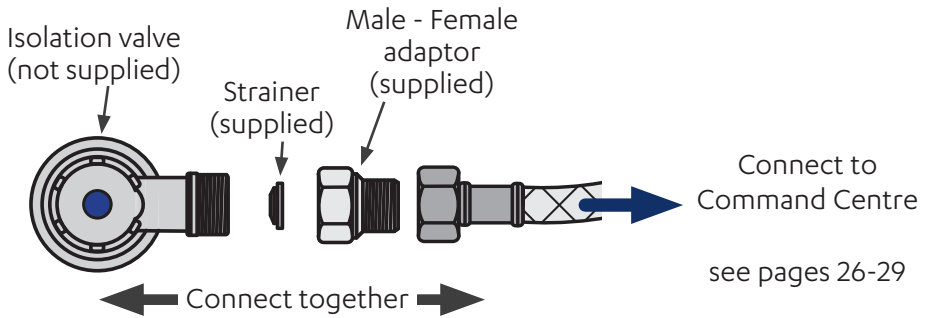

SECTION 9: Set the bypass & install the limescale filter


Available as optional accessory - UK only.




For filter head and scale filter installation use the guide supplied with the filter head and filter respectively.




Flush filter before use.

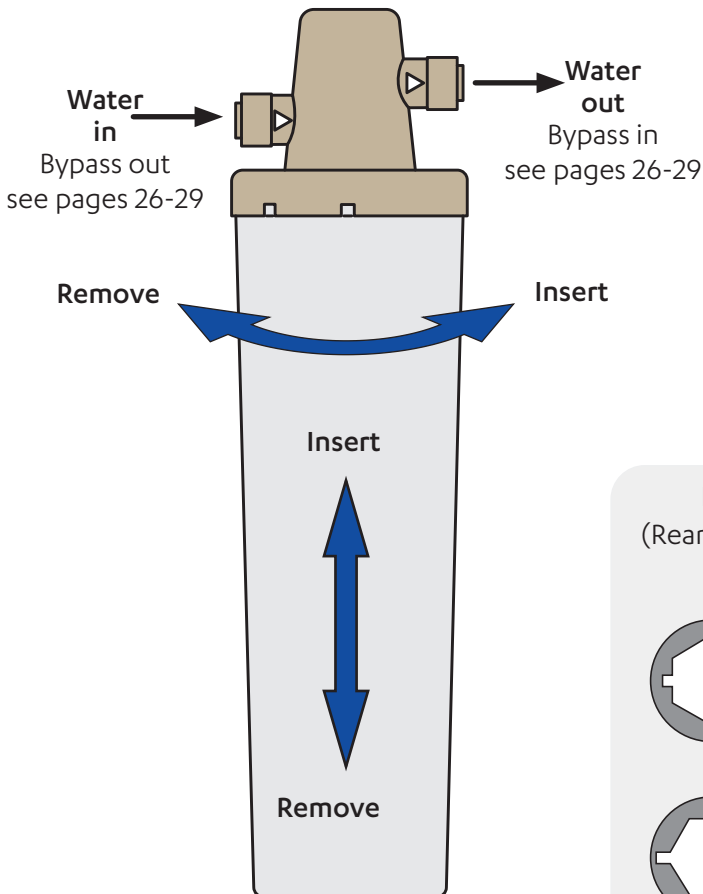

SECTION 10: Fit the booster


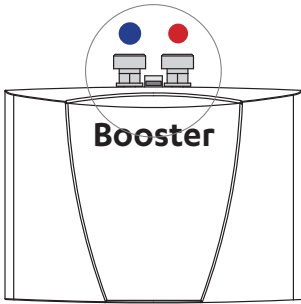


Supplied with selected models, or available as an optional accessory.

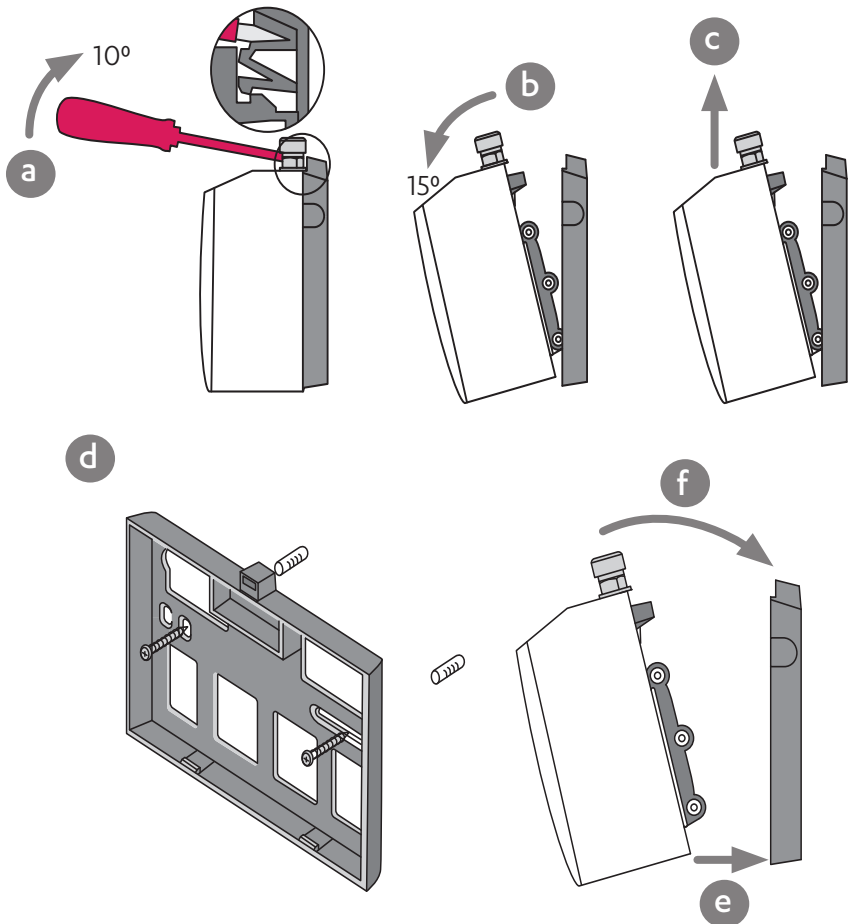

Note: Take care not to break the clips when removing or installing the booster.

SECTION 11: Connect the Booster

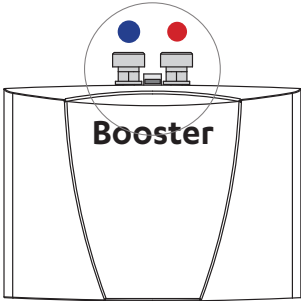


Connect electricity



Do not switch on electrical power until commissioning.
Do not over tighten hose connections.
Braided hoses supplied cannot be lengthened.

Cold water into booster,
connect to Command Centre
BYPASS OUT
see pages 26-29

Hot water out of booster,
connect to Command Centre
BYPASS IN
see pages 26-29

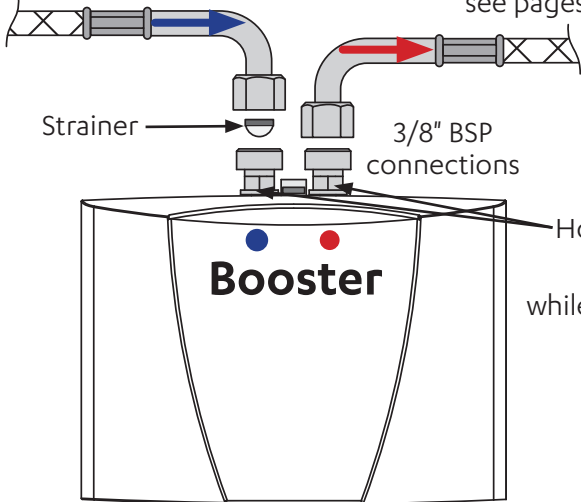

SECTION 12: Install the CO₂ cylinder and regulator




Be aware of the risks of hazards which could cause harm when handling compressed CO₂.

Read the important safety instructions at the start of this instruction manual.


Assess the risks before starting the installation.

Secure the cylinder

Ensure there is sufficient space to safely secure the cylinder and regulator.

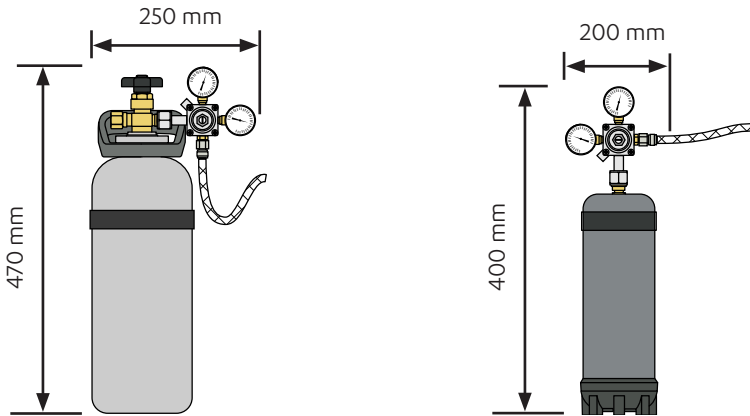


Secure cylinder vertically to a robust surface with the hook & loop strap and bracket supplied.

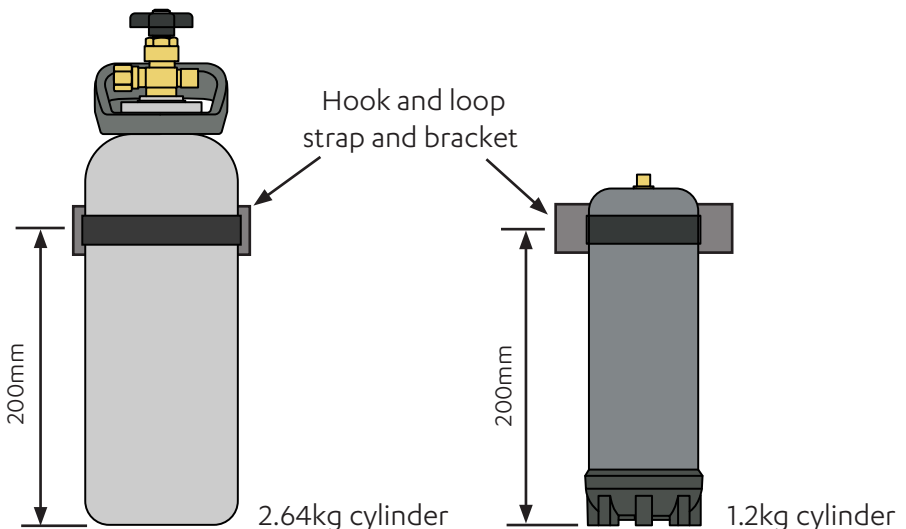


CO₂ regulator identification

Universal G5 regulator

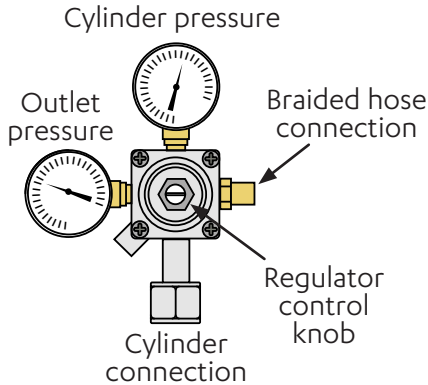

1.2kg cylinder non-adjustable regulator

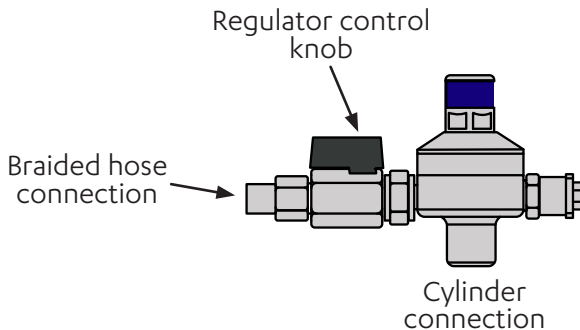

Fit the regulator and connect the gas hose

- Ensure all mating surfaces are clean.
- Turn the regulator OFF.
- Check the regulator and hose seals, inside the connectors.
- Connect the gas hose to the regulator.
- Carefully screw the regulator onto the cylinder connection.
- For the 1.2kg cylinder, insert and rotate the bottle into the regulator

SECTION 12: Install the CO₂ cylinder and regulator


until you feel the initial resistance to rotation, then turn a 1/2 turn further. Repeated residential bottle changes or overtightening could eventually wear the internal seal. If a leak occurs between the bottle and the tightened regulator, a replacement seal may be required. A spare seal is supplied with all residential regulators. A washer/seal kit (part no. 95267) is available if required.

- For the 1.2kg cylinder and Universal G5 regulator use the adaptor supplied.
- Connect the gas hose to the Command Centre (see section 13).



Do not proceed if the seals are damaged.

Take care not to cross thread the regulator; a cross threaded regulator poses a potential hazard.

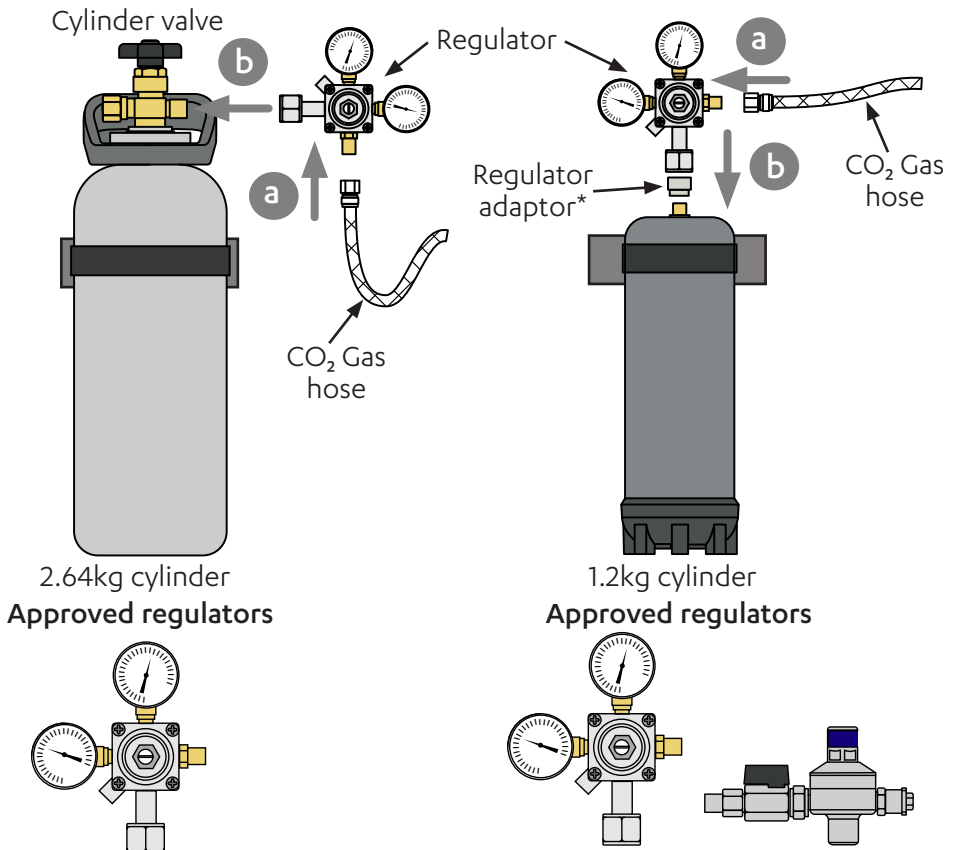


*The regulator adaptor is only required for the Universal G5 regulator.

SECTION 12: Install the CO₂ cylinder and regulator

Adjust the regulator


Universal G5 regulator

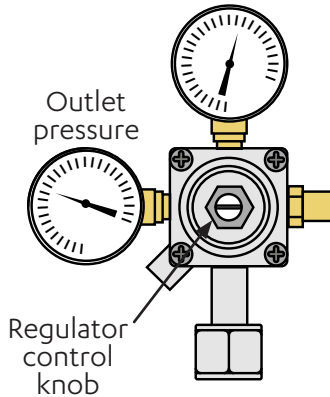

- Check the regulator is turned all the way OFF (anti-clockwise).
- Turn the gas ON using the cylinder valve (2.64Kg cylinder), (anti-clockwise).
- Turn the regulator control knob (clockwise +) to adjust the outlet pressure to 3.0 bar on the outlet pressure gauge.

Turning the regulator ON and OFF

1.2Kg cylinder Non-adjustable regulator

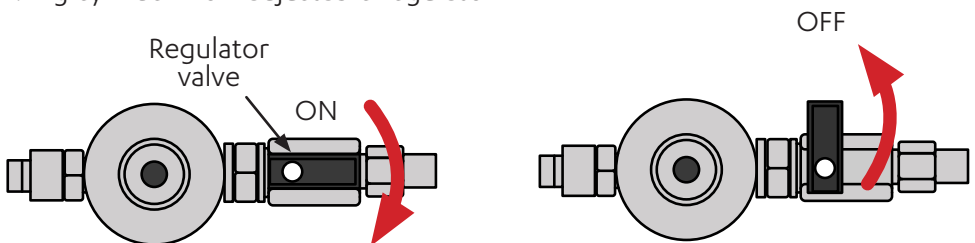

- Turn the regulator valve fully clockwise to turn ON the gas.
- Turn the regulator valve fully anti-clockwise to turn OFF the gas.

SECTION 12: Install the CO₂ cylinder and regulator





Test for leaks



Care must be taken when working with high pressure carbon dioxide, and in no case should the normal operating pressure of 3.0 bar be exceeded.

- Apply soapy water to the gas connections (see below), using a brush.
- If there is a leak, bubbles will appear.
- In the case of a leak, turn OFF the gas, clean away the soapy residue and re-seal the leaking connection.

Test for leaks
in these areas

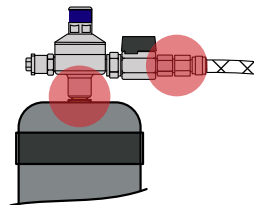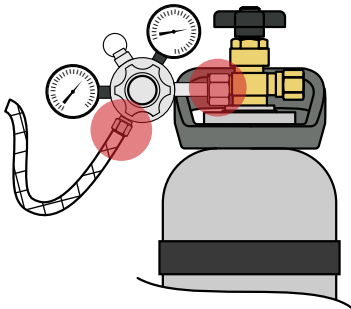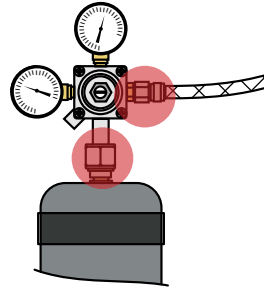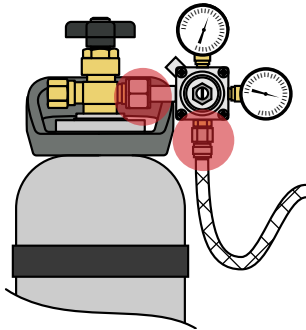


SECTION 13: Connect the Command Centre

Generic installation instructions





For HydroTap, mixer tap and any optional accessories, use instructions supplied with individual kit components.

Mains power cable

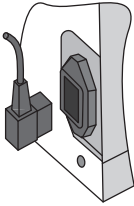

USB

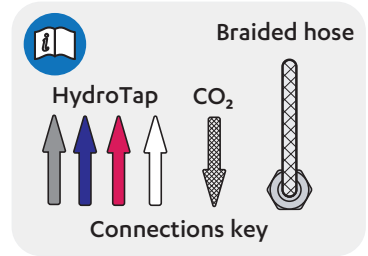
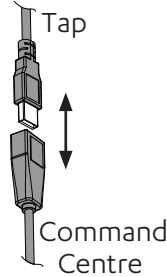


Installation diagrams are for illustrative purposes only.

Hoses are not shown to scale and cannot be lengthened.

Tips for hose connection


- Push the silicone hose over the connector for a minimum of 15mm.
- Ensure there is a constant fall from the tap down to the command centre.
- Hoses must be trimmed to avoid loops and kinks. Take care when positioning before cutting and make a clean cut straight across the hose, using a sharp blade.
- The hoses must not be under tension when installed.

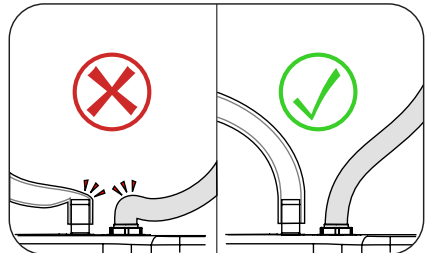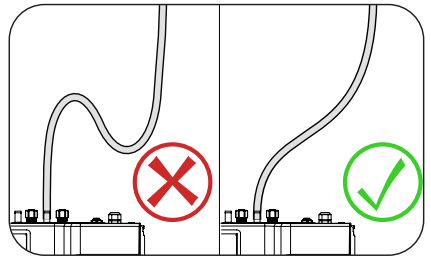


SECTION 13: Connect the Command Centre

BCS60, BCS100 models

Booster (selected models) and
limescale filter (optional)

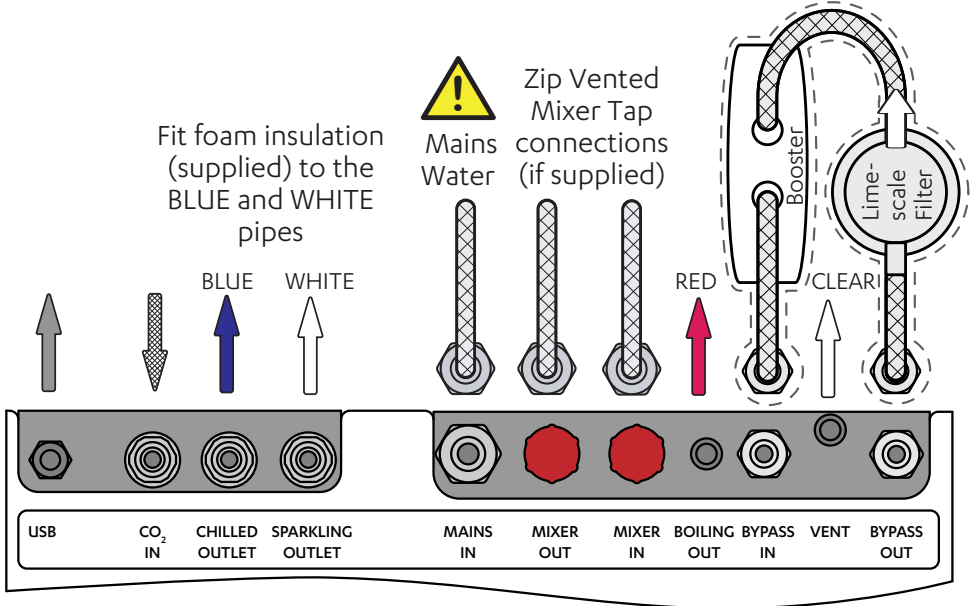


Example installation

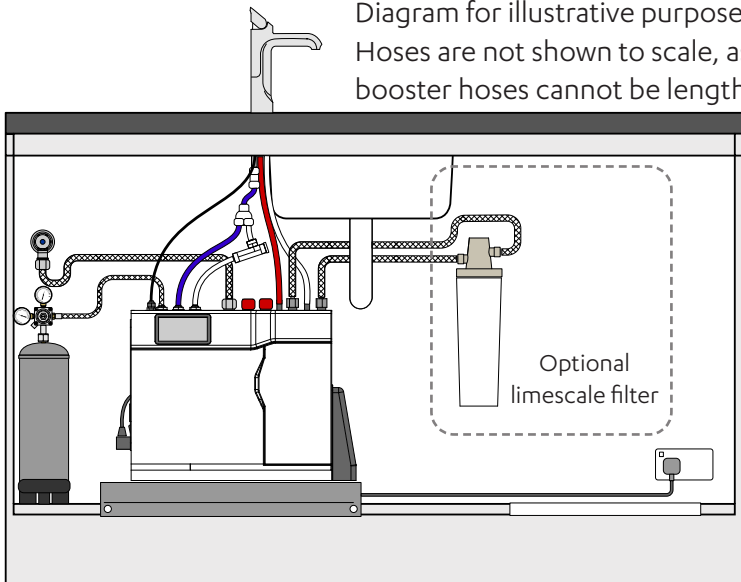


SECTION 13: Connect the Command Centre

BCS60, BCS100 models All-in-One Vented tap

Booster (selected models) and
limescale filter (optional)

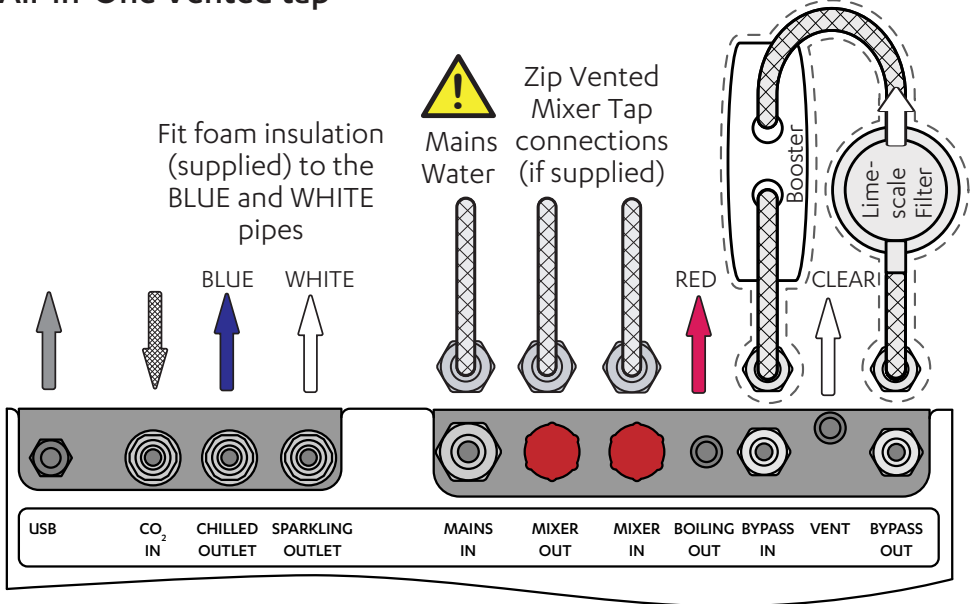


Example installation

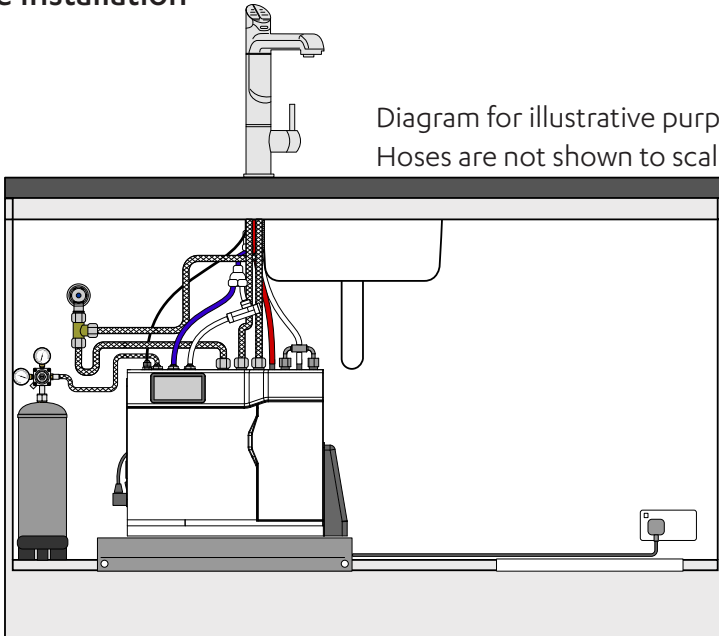


SECTION 13: Connect the Command Centre

BCS20, BCS30, BCS Home models

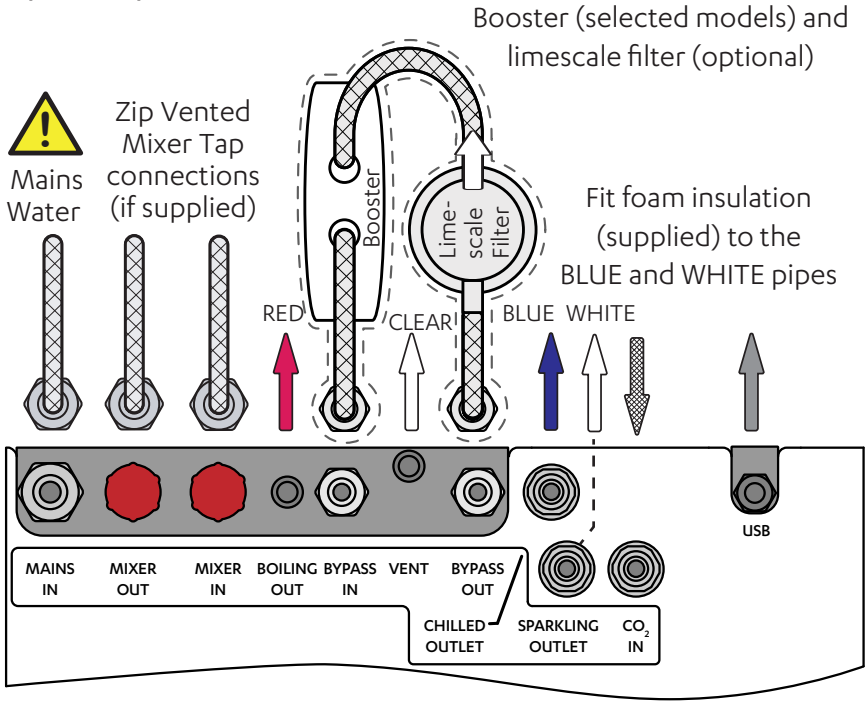


Example installation

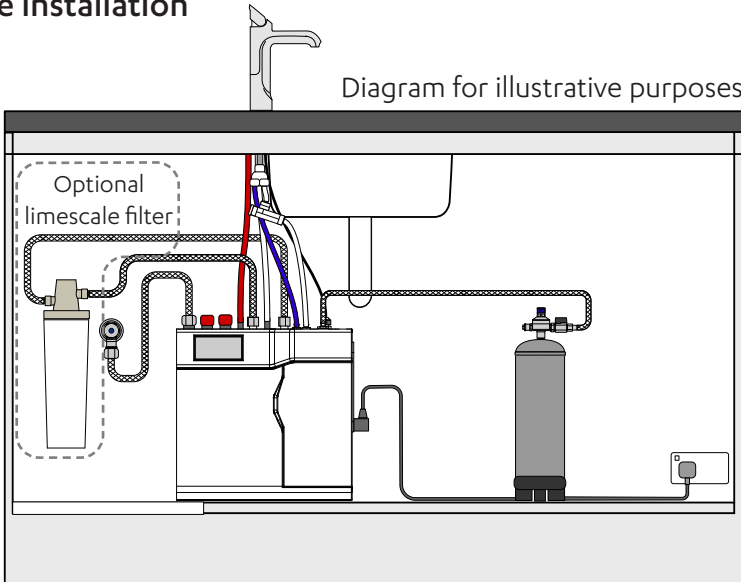


SECTION 13: Connect the Command Centre

BCS Home models All-in-One Plus Pull-Out tap

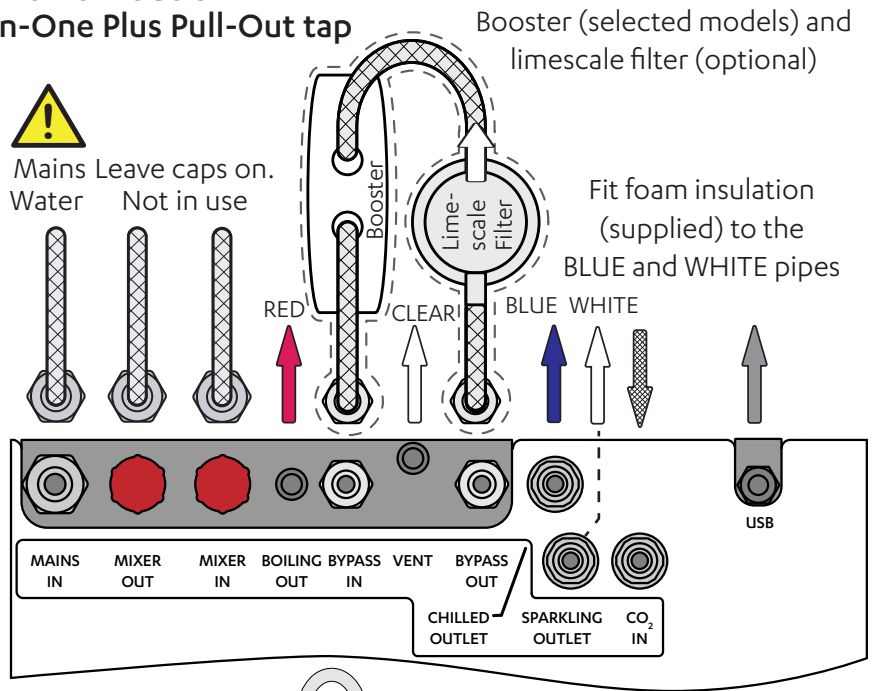

Example installation

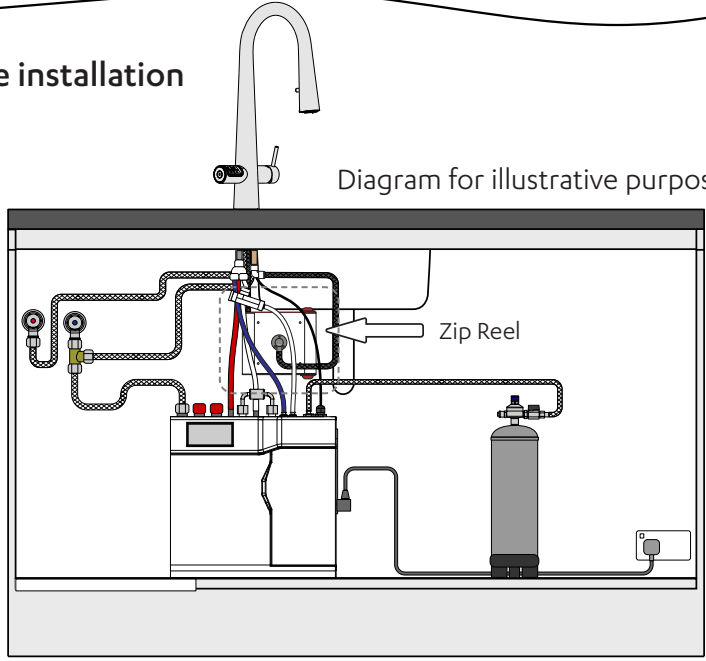

The HydroTap Clean process

HydroTap Clean is a first to market cleaning process for HydroTap systems comprised of the HydroTap Clean solution, dosing adaptor and smart firmware. The HydroTap Clean process is automated and gently cleans the chilled and sparkling water paths during the commissioning of a new HydroTap Command Centre.

The HydroTap Clean solution is:

Safe, natural, certified organic, PH neutral, biodegradable solution produced by electrochemically activated water acting like a detergent. HydroTap Clean is also non-corrosive to gently clean the chilled and sparkling internal water paths of your new HydroTap.


Parts supplied

Parts supplied with the HydroTap Clean kit	Qty
HydroTap Clean can adapter (1) (used in filter head)	1
HydroTap Clean can (2)	1
HydroTap Clean instructions	1

Parts identification



WARNING ! Do not connect the parts together before carefully reading/following instructions.

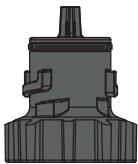

**HydroTap Clean
adapter (1)**



**HydroTap Clean
can (2)**




**HydroTap Clean
instructions**

SECTION 14: Commissioning


14. Commissioning the HydroTap using the HydroTap Clean can

14.1 Turn on the supplies & familiarise yourself with the system

- Connect the mains electrical power cable to the supply.
- Turn the power and water on and check for any leaks.
- Familiarise yourself with the operation of the tap and GUI screen in preparation for use, see the user guide.
- Initial commissioning screen touch Language option.


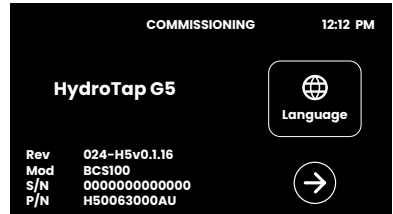


- Optional screen shown if the commissioning was previously started but not complete (Command Centre powered off during process). Otherwise screen will not be shown.

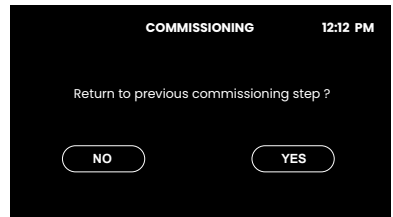

14.2 Select the language


- Touch the appropriate button to select the language and units of choice.
- Touch the back arrow to go back to previous menu.
- In the previous menu, touch the arrow to begin the commissioning process.
- Read the commissioning information, touch the forward arrow to go to the next screen.
- (Touch the back arrow to go back to previous menu).

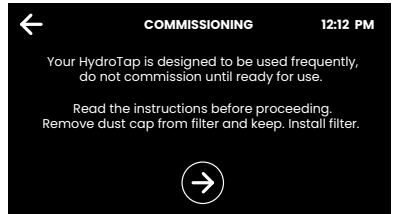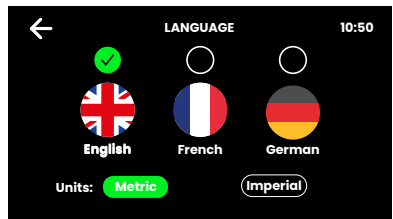

SECTION 14: Commissioning



14.3 Install the filter cartridge

- Unpack filter cartridge.
- Remove dust cap and set aside in a clean area for use later.
- Write today's date where shown on the label.
- Avoid touching the filter o-rings and filter opening as this may cause bacterial contamination of the cartridge.
- Moisten the o-rings with water.
- Open the filter door on the Command Centre.
- Push the new cartridge up into the filter head.
- Turn the cartridge a quarter turn to the right until it comes to a complete stop and locks.

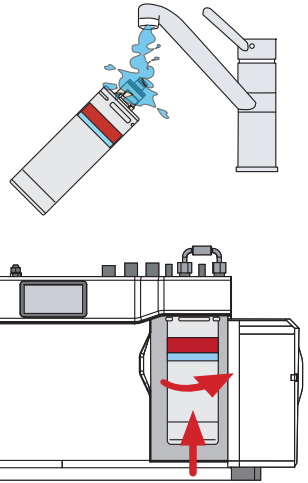



14.4 Set the date, time & drain away options

- Touch the date and time, use "-" or "+" to make adjustments. When ready, touch the arrow to continue.
- Select 'Sink / Container' or 'Font' depending on the model, see below.
- Select 'Font' if the HydroTap is mounted on a font.
- Select 'Sink / Container' if the HydroTap is mounted such that the waste water dispenses into a sink, or container.
- **Note** This selection will determine if water is dispensed automatically or requires operation of the tap during the tank flush process.
- Touch the arrow to continue.

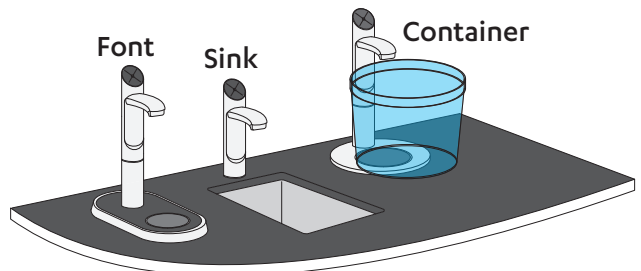
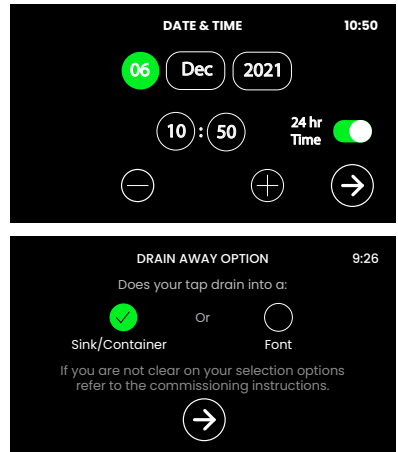


14.5 Filter flush




- Follow the steps on-screen to flush the filter.
- Open filter door & uncoil flush line.
- Direct flush line into bucket.
- Place a cloth or towel under the filter cartridge to catch any water that may spill.
- Open the stop cock valve.
- Start filter flush.

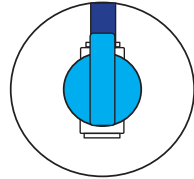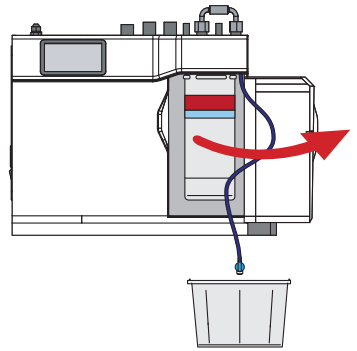

Stop cock valve open

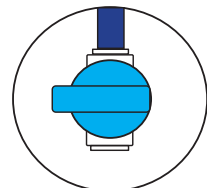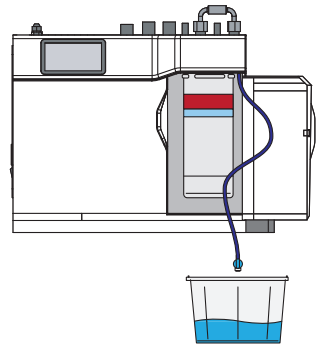

Stop cock valve closed

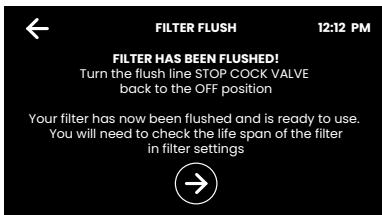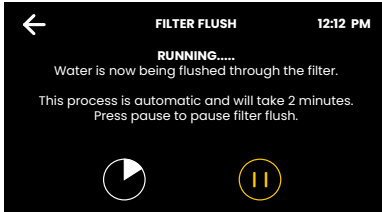
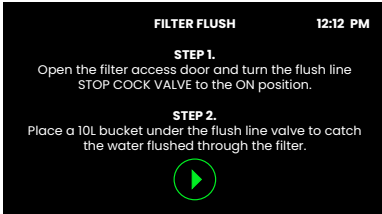


- Once the filter flush is finished, close the stop cock valve.
- Wipe up any spills.
- Close the door to secure the appliance.

SECTION 14: Commissioning

14.6 System priming

- Read the on screen information.
- For sparkling models disconnect the CO₂ bottle or turn off the CO₂ regulator (see the User guide).
- Confirm on screen.
- Touch the run arrow to go to the next screen.
- Monitor the on screen information.

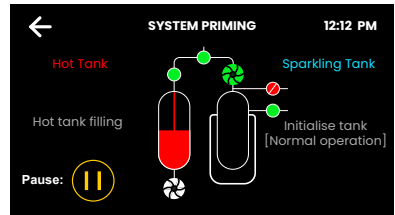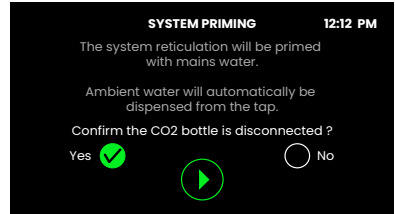


- **Note** if 'Font' has been selected on the drain away option (see section 14.4) and auto dispense is disabled on entry into this screen; the screen prompts the user to dispense using the tap during the process.

14.7 Cleaning preparation

- Read the on screen information.



- Place a cloth under the filter.
- Remove the filter, refit the dust cap, and set aside in a clean environment.

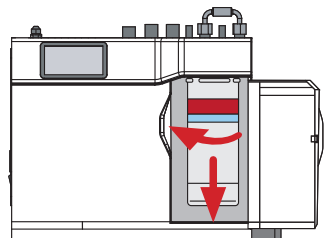

SECTION 14: Commissioning

HYDROTAP CLEAN PREPARATION 12:12 PM

Step 3.

Install HydroTap Clean adapter (1) into filter head.


Step 4.

Insert HydroTap Clean can (2) into adapter (1).




- Check the adapter seal is present and correctly positioned in the adapter.
- Install the HydroTap Clean adapter (1) into the filter head.
- Turn the adapter a quarter turn to the right until it comes to a stop and locks.

Filter head

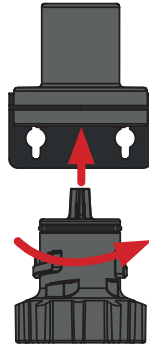

HydroTap Clean adapter (1)

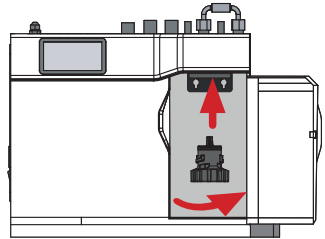

- Remove the lid from the HydroTap Clean can (2).



HydroTap Clean can (2)


SECTION 14: Commissioning

Filter head and HydroTap Clean adapter (1)

- Screw the HydroTap Clean can (2) into the adapter (already installed into the filter head).



HydroTap Clean can (2)

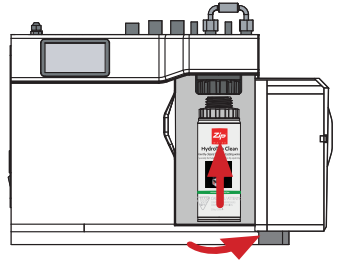






- Confirm installation of the HydroTap Clean can by selecting YES on the screen.



SECTION 14: Commissioning


14.8 Boiling calibration and cleaning

- Read the on screen information.
 - BCS models offer combined boiling calibration and cleaning.
 - Touch the green arrow to run.
-
- Boiling calibration and cleaning process begins.
 - Monitor the on screen information.
 - Touch Chilled cleaning forward arrow to view screen of cleaning process.
 - **Note** If 'Chilled cleaning' text is flashing there is a required action on that screen to perform (empty cold tank).
-
- Cleaning process begins.
 - Monitor the on screen information.
 - **Note** This is automatic unless 'Font' was selected in the drain away option selection screen (see section 14.4). In this case a manual dispense action may be requested.
-
- Read the on screen information and instructions.
 - **Note** When the cleaning process completes there is an opportunity to re-install the filter while the boiling calibration is finishing.

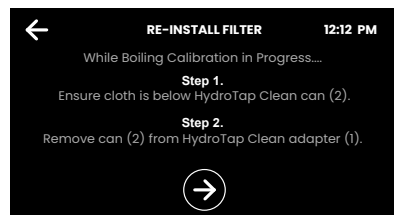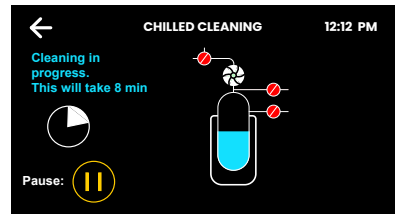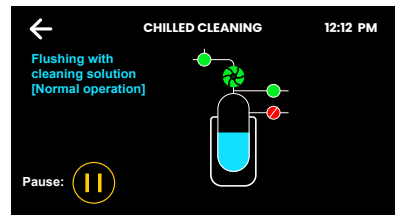
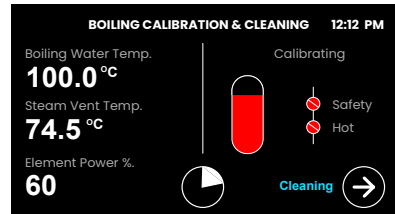
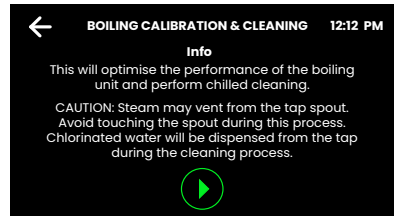


SECTION 14: Commissioning


- This screen is shown after completion of the boiling calibration and or cleaning processes.

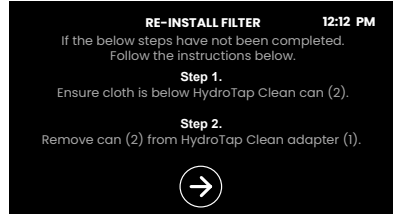


- Unscrew the HydroTap Clean can (2).
- Ensure to hold the adapter in place while unscrewing the can.

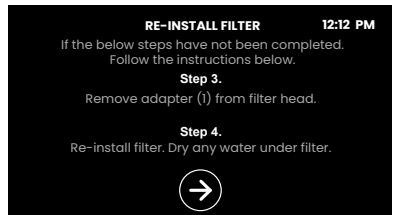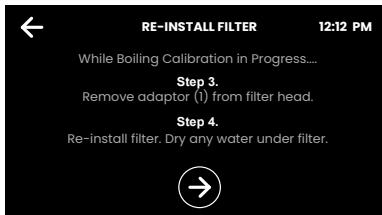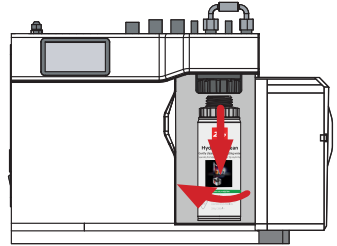

- Remove the HydroTap Clean adapter (1) from filter head.

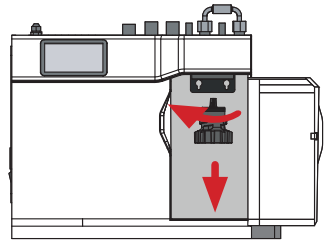






- Remove the dust cap and re-install the filter.
- Touch forward arrow on screen to continue.

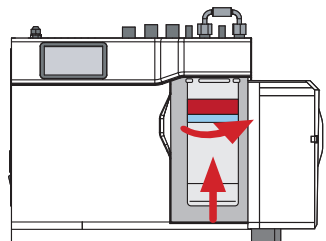

SECTION 14: Commissioning


14.9 Tank flush

- Read the on screen information and instructions.
- Touch the green arrow to run.
- Empty the hot tank first (boiling models).
- Select NO if it is not safe to continue.
- Select YES to continue safely.
- If NO is selected (indicating that it is not safe to continue) the screen will prompt the user to clear the sink area.
- Once it is safe to continue select YES to empty the hot tank.
- There are two ways to empty the hot tank:
- Dispense boiling water from the tap using the tap safety feature.
- OR
- Touch and **HOLD** the green run arrow icon to dispense directly from the touch screen display.
- If choosing to dispense directly from the touch screen display, 'dispensing boiling water' text flashes on the screen while holding the button.
- After the boiling tank is emptied the system progresses to the tank flush screen.
- **Note** For all models, the on screen cycle counter displays the number of remaining cycles in the tank flush process.

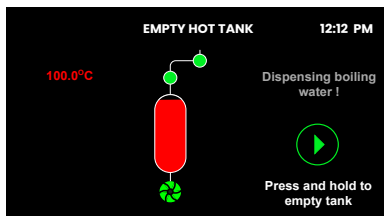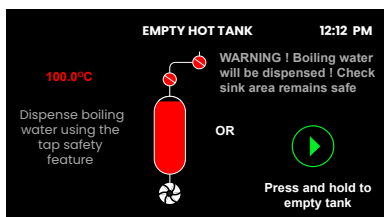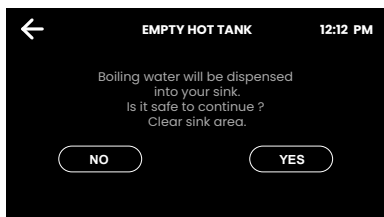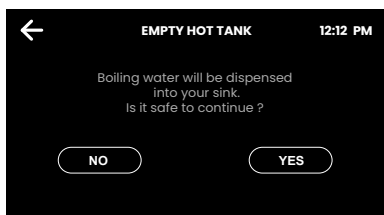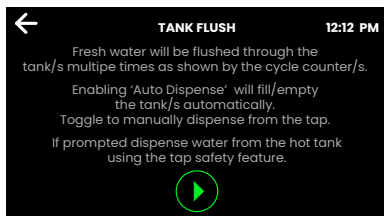


SECTION 14: Commissioning


- Monitor the on screen information.
- The hot tank will cycle twice.
- The sparkling tank will cycle once on both the chilled and sparkling reticulation.

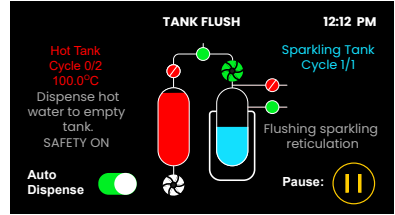


- **Note** For all boiling models, if after filling the hot tank during the tank flush process, the hot water temperature is still above 50°C the tank will need to be emptied again.

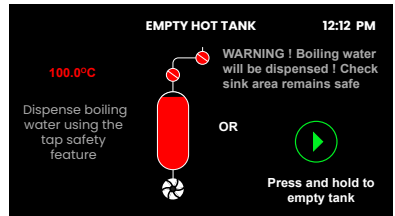


- Read the on screen information.
- Ensure that the CO₂ cylinder is connected and if supplied with an adjustable regulator, set to 3.0 bar (300kPa).

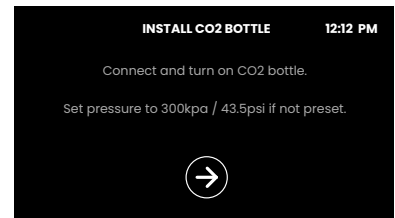

- Touch the green arrow to run.
- CO₂ life settings should be adjusted for the size of the CO₂ bottle connected. (see the User guide or Online Installation and User guide).

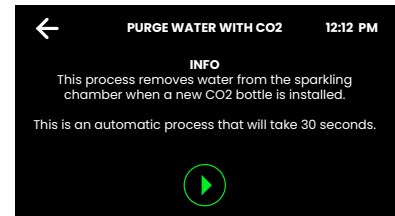


- Use the skip arrow to end the CO₂ purge process prematurely if all water has been purged and only gas can be heard coming from the tap.

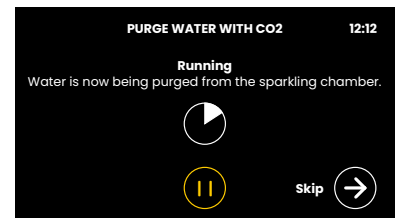

SECTION 14: Commissioning

14.10 Select the booster


- Read the on screen instructions.
- Select the appropriate option.
- BCS 100 & 30 models select Booster installed.
- All other models, Booster not installed.

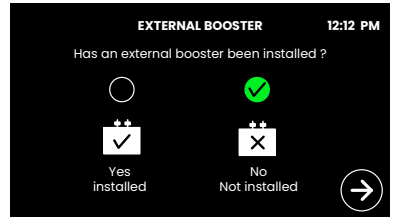

14.11 Safety sensor calibration (Classic boiling models only) Optional, in cases where light recalibration is required.

Light intensity varies from site to site, therefore it is recommended that a re-calibration be performed at the time of the installation. All direct sunlight must be shaded from the HydroTap, during the calibration. This can be achieved by closing any nearby curtains, blinds, etc.

- Shield the HydroTap from direct sunlight.
- In normal operating mode. Turn the power off.
- Pull both tap levers to the forward position.
- Turn the power on.
- The safety sensor will calibrate.
- Return the levers to the neutral position.

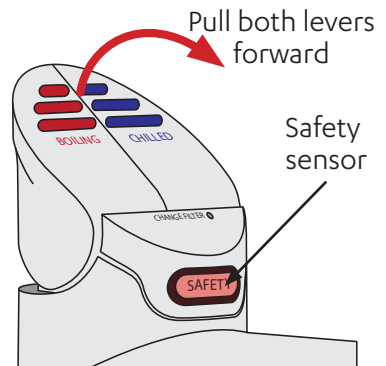

Notes

Notes

Refer to User Guide for operation and maintenance.



Zip Water

ABN 46 000 578 727

67 - 77 Allingham Street, Condell Park NSW 2200

Postal: Locked Bag 80, Bankstown 1885

Australia

Tel (+612) 9796 3100

Free call 1800 947 827 (1800 ZIP TAP)

www.zipwater.com



Zip Water UK

Trafalgar House, Rash's Green,

Dereham, Norfolk, NR19 1JG

0345 6 005 005

sales@zipindustries.co.uk

specify.zipwater.co.uk



As Zip policy is one of continuous product improvement, changes to specifications may be made without prior notice. Images in this booklet have been modified and may not be true representations of the finished goods.

The terms "Zip" and "HydroTap" are registered trade marks of Zip Heaters (Aust) Pty Ltd.